

## TABLE OF CONTENTS

1	Before driving	Information on the hybrid system and adjusting and operating features such as door locks, mirrors, and steering column.
2	When driving	Driving, stopping and safe-driving information.
3	Interior features	Air conditioning and audio systems, as well as other interior features for a comfortable driving experience.
4	Maintenance and care	Cleaning and protecting your vehicle, performing do-it-yourself maintenance, and maintenance information.
5	When trouble arises	What to do if the vehicle needs to be towed, gets a flat tire, or is involved in an accident.
6	Vehicle specifications	Detailed vehicle information.
	Index	Alphabetical listing of information contained in this manual.

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the equipment listed below.

- Navigation system
- Air conditioning controls
- Windshield wiper de-icer
- Lexus parking assist monitor
- Audio/video system
- Rear window and outside rear view mirror defogging

<p><b>1</b> Before driving</p> <hr/> <p>1-1. Hybrid system</p> <p style="padding-left: 20px;">Hybrid system ..... 36</p> <p style="padding-left: 20px;">Hybrid system precautions... 40</p> <p style="padding-left: 20px;">Energy monitor/ consumption screen..... 46</p> <p style="padding-left: 20px;">Hybrid vehicle driving tips .. 51</p> <p>1-2. Key information</p> <p style="padding-left: 20px;">Keys ..... 53</p> <p>1-3. Opening, closing and locking the doors</p> <p style="padding-left: 20px;">Smart entry &amp; start system... 58</p> <p style="padding-left: 20px;">Wireless remote control ..... 74</p> <p style="padding-left: 20px;">Side doors..... 77</p> <p style="padding-left: 20px;">Back door ..... 80</p> <p>1-4. Adjustable components (seats, mirrors, steering wheel)</p> <p style="padding-left: 20px;">Front seats ..... 91</p> <p style="padding-left: 20px;">Rear seats ..... 95</p>	<p>Driving position memory ..... 99</p> <p>Head restraints..... 104</p> <p>Seat belts ..... 106</p> <p>Steering wheel..... 112</p> <p>Anti-glare inside rear view mirror ..... 114</p> <p>Outside rear view mirrors .. 116</p> <p>1-5. Opening and closing the windows and moon roof</p> <p style="padding-left: 20px;">Power windows ..... 119</p> <p style="padding-left: 20px;">Moon roof ..... 122</p> <p style="padding-left: 20px;">Electronic sunshade..... 126</p> <p>1-6. Refueling</p> <p style="padding-left: 20px;">Opening the fuel tank cap .. 128</p> <p>1-7. Theft deterrent system</p> <p style="padding-left: 20px;">Immobilizer system..... 133</p> <p style="padding-left: 20px;">Double locking system..... 138</p> <p style="padding-left: 20px;">Alarm ..... 139</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1-8. Safety information	
Correct driving posture .....	145
SRS airbags .....	147
Child restraint systems .....	158
Installing child restraints ....	166
Airbag manual on/off system .....	177

---

**2** When driving

---

2-1. Driving procedures	
Driving the vehicle .....	182
Power (ignition) switch .....	193
Hybrid transmission .....	200
Turn signal lever .....	208
Parking brake .....	209
Horn .....	210
2-2. Instrument cluster	
Gauges and meters .....	211
Indicators and warning lights .....	215
Multi-information display ..	219
Head-up display .....	228

2-3. Operating the lights and windshield wipers		
Headlight switch .....	233	
Fog light switch .....	237	
Windshield wipers and washer .....	238	1
Rear window wiper and washer .....	241	
Headlight cleaner switch ....	242	2
2-4. Using other driving systems		
Cruise control .....	243	
Dynamic radar cruise control .....	247	3
Lexus parking assist-sensor	262	
Electronically modulated air suspension .....	269	4
Rear view monitor system..	276	
Driving assist systems .....	280	
Hill-start assist control .....	286	5
Pre-Crash Safety system ....	288	
2-5. Driving information		
Utility vehicle precautions .	296	6
Cargo and luggage .....	301	
Winter driving tips .....	304	
Trailer towing (AWD models) .....	307	
Trailer towing (2WD models) .....	318	

**3 Interior features**

3-1. Using the air conditioning system and defogger

- Automatic air conditioning system ..... 322
- Rear window defogger switch ..... 330
- Windshield wiper de-icer ... 331

3-2. Using the audio system

- Audio system..... 332
- Using the radio ..... 335
- Using the CD player..... 339
- Playing MP3 and WMA discs ..... 346
- Operating an iPod..... 353
- Operating a USB memory.. 361
- Optimal use of the audio system ..... 369
- Using the AUX port ..... 371
- Using the steering wheel audio switches ..... 373

3-3. Using the Bluetooth® audio system

- Bluetooth® audio system ... 376
- Using the Bluetooth® audio system ..... 380
- Operating a Bluetooth® enabled portable player .... 383

- Setting up a Bluetooth® enabled portable player .... 386
- Bluetooth® audio system setup ..... 390

3-4. Using the hands-free phone system (for mobile phones)

- Hands-free system for mobile phones ..... 391
- Using the hands-free system (for mobile phones)..... 397
- Making a phone call ..... 403
- Setting a mobile phone..... 407
- Security and system setup.. 411
- Using the phone book ..... 417

3-5. Using the interior lights

- Interior lights list ..... 423
- Interior lights..... 424
- Personal lights ..... 425

3-6. Using the storage features

 
- List of storage features ..... 426
- Glove box..... 427
- Bottle holders/door pockets ..... 428
- Cup holders ..... 430
- Console box ..... 432
- Auxiliary box ..... 434
- Under tray ..... 435

3-7. Other interior features

- Sun visors ..... 436
- Vanity mirror..... 437
- Clock ..... 438
- Outside temperature display ..... 439
- Multi-display light control . 440
- Power outlets..... 441
- Seat heaters and ventilators 443
- Armrest..... 445
- Coat hooks..... 446
- Floor mat ..... 447
- Luggage compartment features ..... 448

**4 Maintenance and care**

- 4-1. Maintenance and care
  - Cleaning and protecting the vehicle exterior..... 454
  - Cleaning and protecting the vehicle interior ..... 458
- 4-2. Maintenance
  - Maintenance requirements . 461
- 4-3. Do-it-yourself maintenance
  - Do-it-yourself service precautions ..... 464
  - Hood..... 468
  - Positioning a floor jack ..... 469
  - Engine compartment ..... 471
  - 12-volt battery ..... 481
  - Tires ..... 488
  - Tire inflation pressure ..... 491
  - Wheels..... 493
  - Air conditioning filter ..... 495
  - Electronic key battery ..... 498
  - Checking and replacing fuses ..... 501
  - Light bulbs ..... 517



**5** When trouble arises

5-1. Essential information

- Emergency flashers ..... 532
- If your vehicle needs to be towed ..... 533
- If you think something is wrong ..... 539

5-2. Steps to take in an emergency

- If a warning light turns on or a warning buzzer sounds... ..... 540
- If a warning message is displayed ..... 545
- If you have a flat tire ..... 565
- If the hybrid system will not start ..... 579
- If the shift lever cannot be shifted from P..... 581
- If you lose your keys ..... 582
- If the electronic key does not operate properly ..... 583
- If the vehicle 12-volt battery is discharged..... 586
- If your vehicle overheats.... 591
- If the vehicle becomes stuck ..... 596
- If your vehicle has to be stopped in an emergency ..... 597

**6** Vehicle specifications

6-1. Specifications

- Maintenance data (fuel, oil level, etc.) ..... 600
- Fuel information..... 615

6-2. Customization

- Customizable features ..... 617

6-3. Initialization




- Items to initialize..... 625

**Index**

   Abbreviation ..... 628

Alphabetical index ..... 629

What to do if... ..... 642





Rear window defogger  
P. 330


Fuel filler door P. 128

Side doors P. 77

Tail lights P. 233

Rear window wiper P. 241

Back door  
P. 80

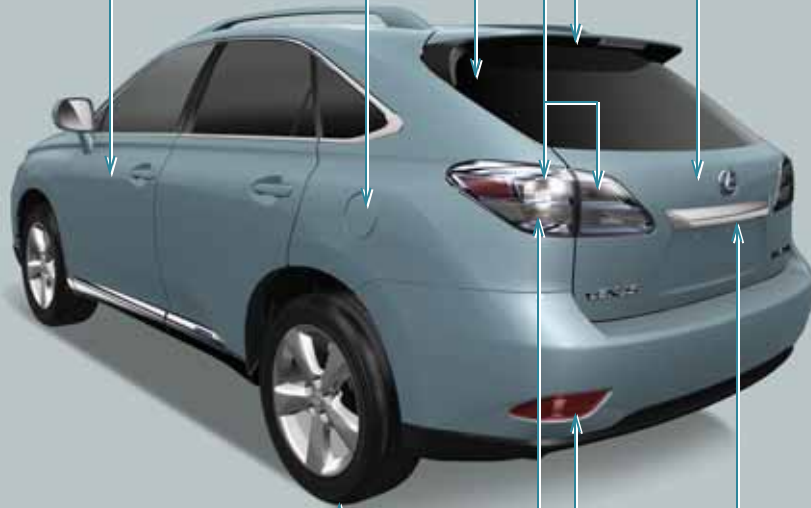

Tires  
● Rotation P. 488  
● Replacement P. 565  
● Inflation pressure P. 610

Back door opener  
button P. 80

Fog lights P. 237


Turn signal lights P. 208


\*: If equipped

\*2: For vehicles with a navigation system, refer to the "Navigation System Owner's

# Pictorial index

# Interior (Left-hand drive vehicles)

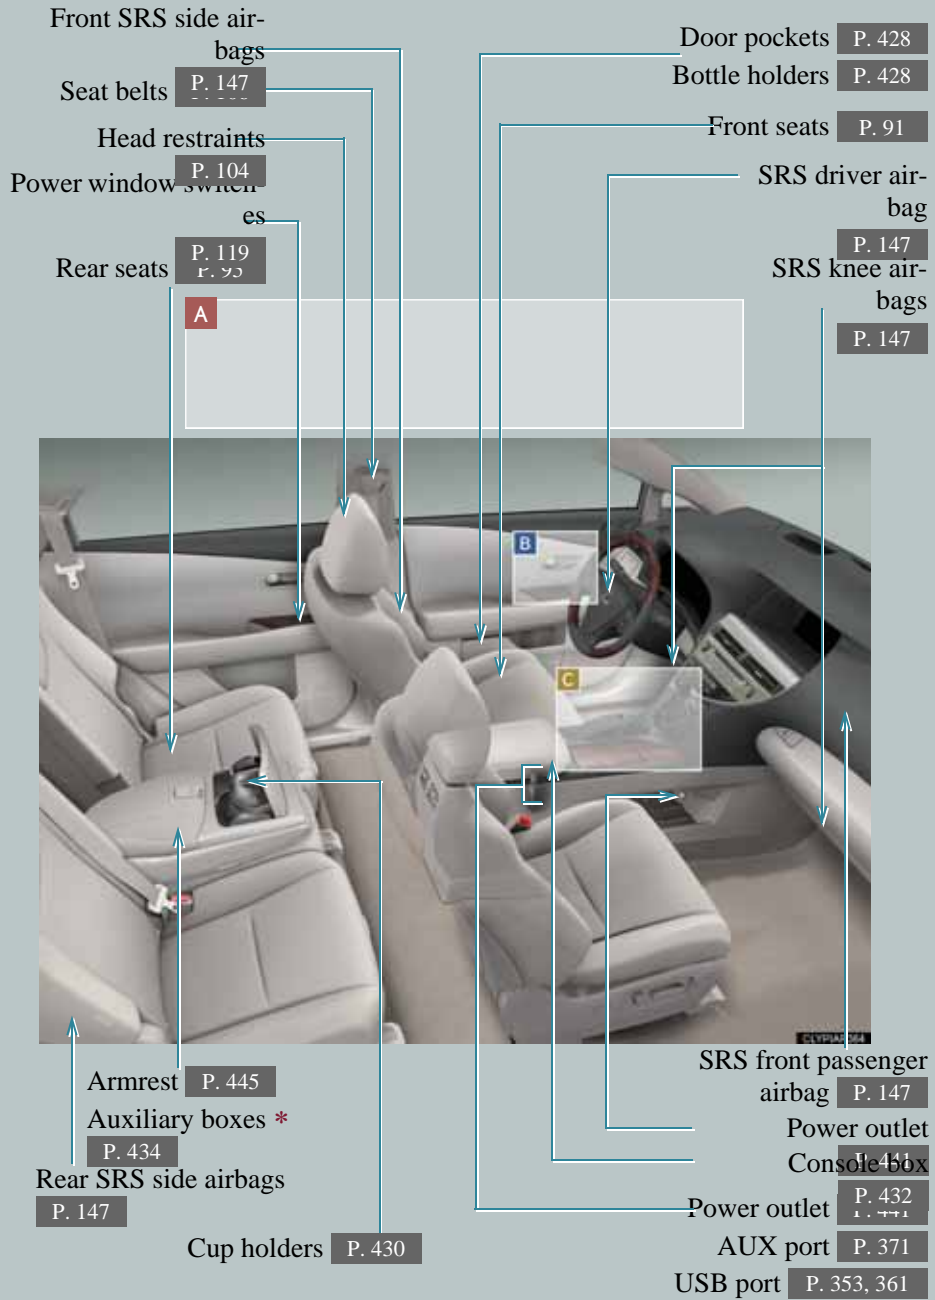


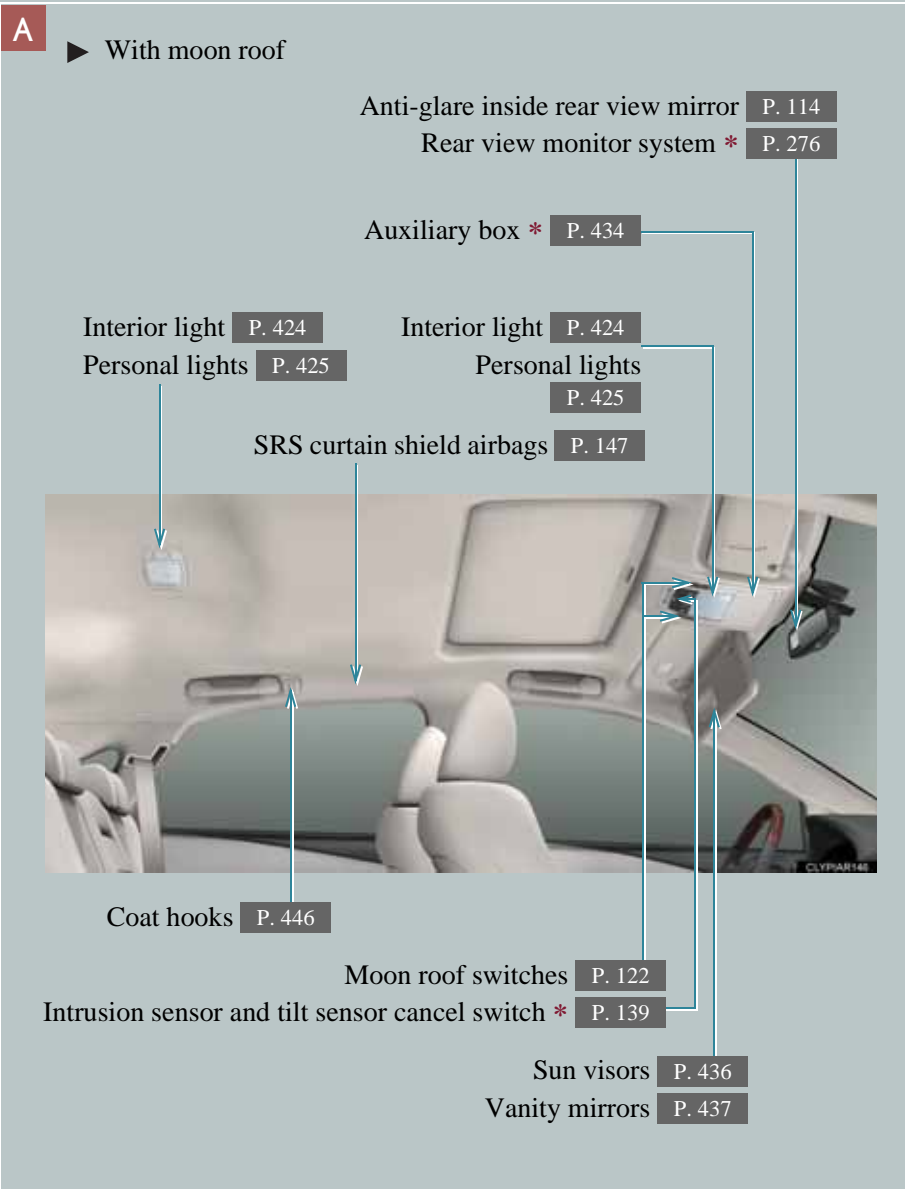

\*: If equipped

**A**

► With panoramic roof

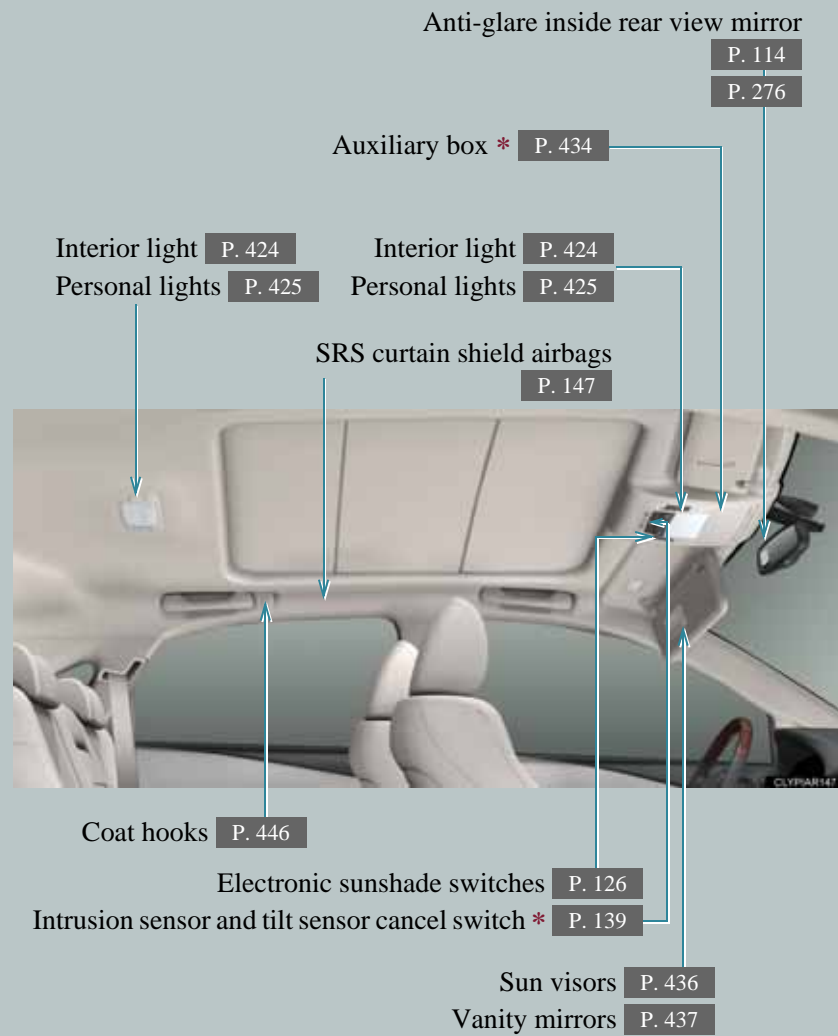

**B**

Inside lock buttons [P. 77](#)

Driving position memory switches \* [P. 99](#)



Outside rear view mirror switches [P. 116](#)

Door lock switches [P. 77](#)

Power window switches [P. 119](#)

Window lock switch [P. 119](#)

\*: If equipped

C

Hybrid transmission shift lever P. 200

Shift lock override button P. 581

Remote Touch \*, \*<sup>1</sup>

Cup holders P. 430



Floor mat P. 447

VSC off switch P. 280

Seat heater switches \*/

Seat heater and ventilator switches \* P. 443

\*: If equipped

\*<sup>1</sup>: Refer to "Navigation System Owner's Man-

## Pictorial index

## Instrument panel (Left-hand drive vehicles)

Headlight switch P. 233

Turn signal lever P. 208

Fog light switch P. 237


Glove box P. 427

Power back door main  
switch \* P. 80

Gauges and meters P. 211

Multi-information display P. 219

Horn P. 210

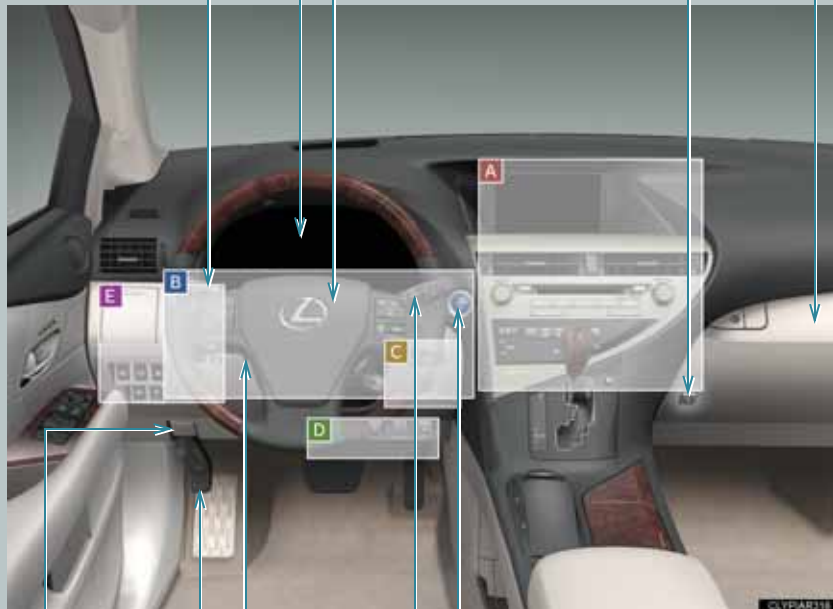

Power (ignition) switch

P. 193

Windshield wiper and washer switch P. 238

Rear window wiper and washer switch P. 241

Tilt and telescopic steering control switch P. 112

Hood lock re-  
lease


P. 468

Parking brake pedal P. 209


\*: If equipped



**A**

▶ With navigation system

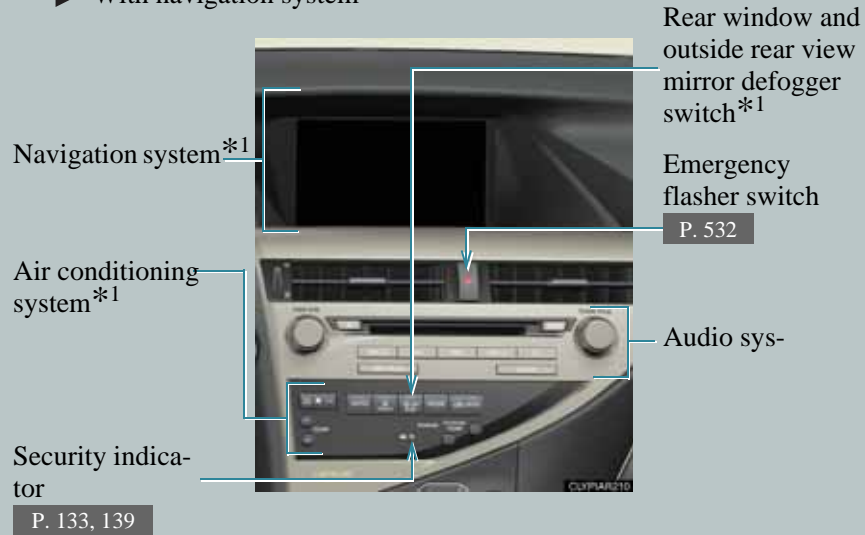

▶ Without navigation system

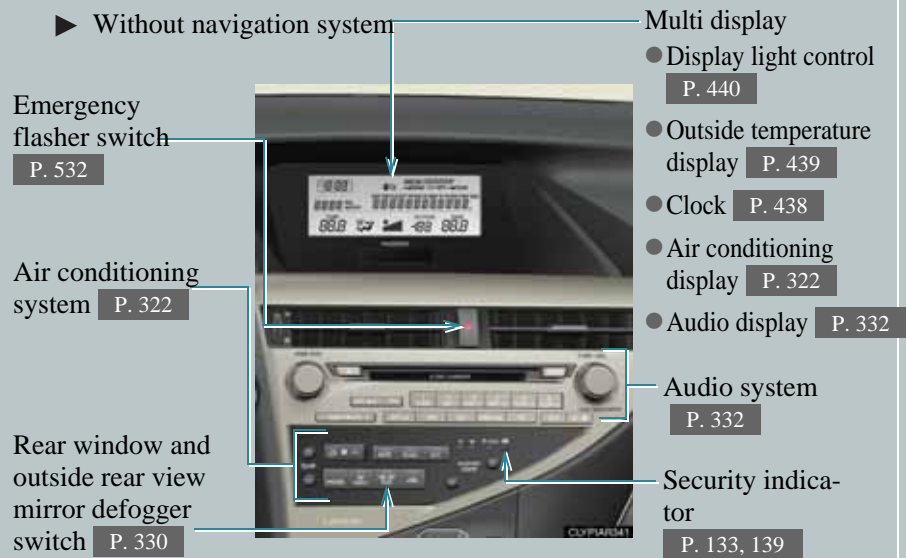

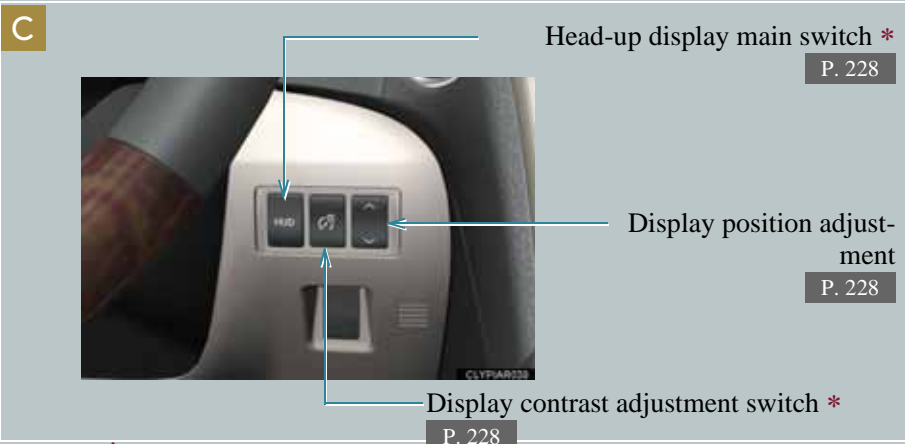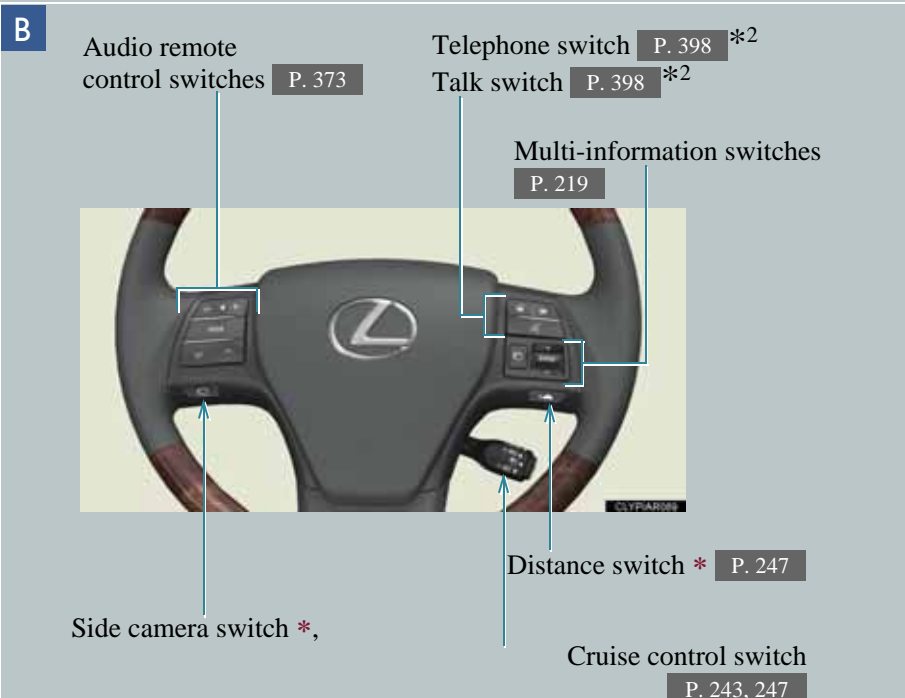

\*: If equipped  
 \*1: Refer to "Navigation System Owner's Manual".  
 \*2: For vehicles with a navigation system, refer to the "Navigation System Owner's

D




Height control off switch \* P. 269

Pre-crash braking off switch \* P. 288

E

Cup holders P. 430

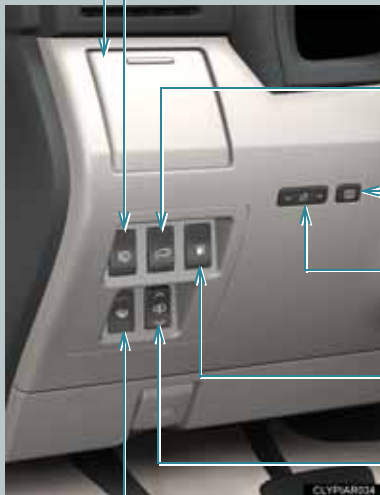

Headlight cleaner switch P. 242

Power back door switch \* P. 80

"ODO/TRIP" button P. 211

Instrument panel light control P. 211

Fuel filler door opener P. 128

Height selector switch \* P. 269


Windshield wiper de-icer switch \* P. 331 \*2

\*: If equipped

\*2: For vehicles with a navigation system, refer to the "Navigation System Owner's

# Pictorial index

# Interior (Right-hand drive vehicles)

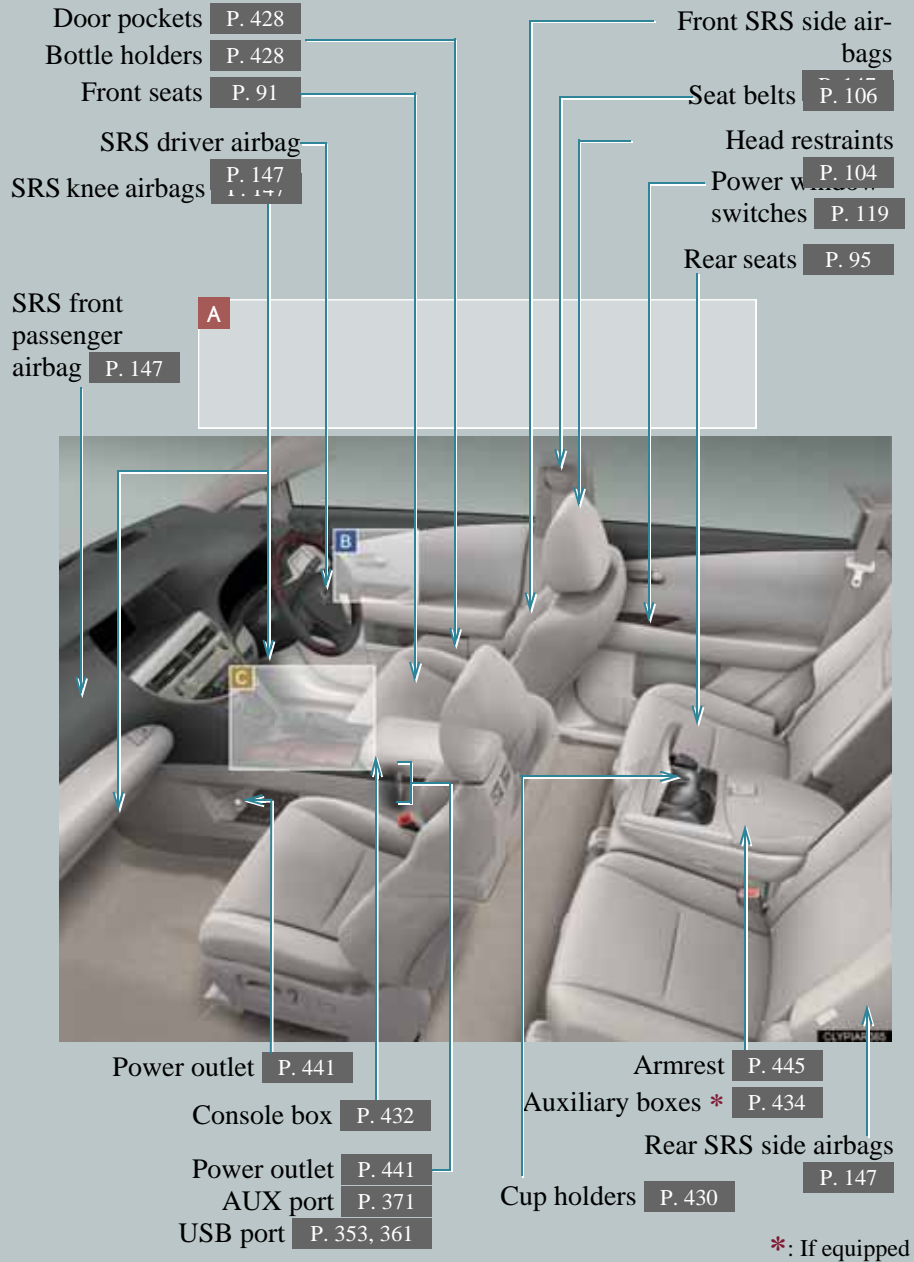

**A**

► With moon roof

Anti-glare inside rear view mirror

P. 114

P. 276

Interior light P. 424


Personal lights P. 425

Interior light P. 424

Personal lights P. 425

SRS curtain shield airbags

P. 147

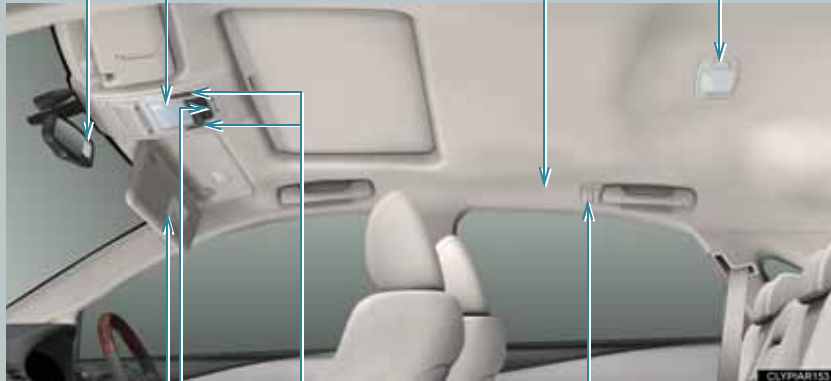

Coat hooks

P. 446


Moon roof switches P. 122

Intrusion sensor and tilt sensor cancel switch

P. 139


Sun visors P. 436

Vanity mirrors P. 437

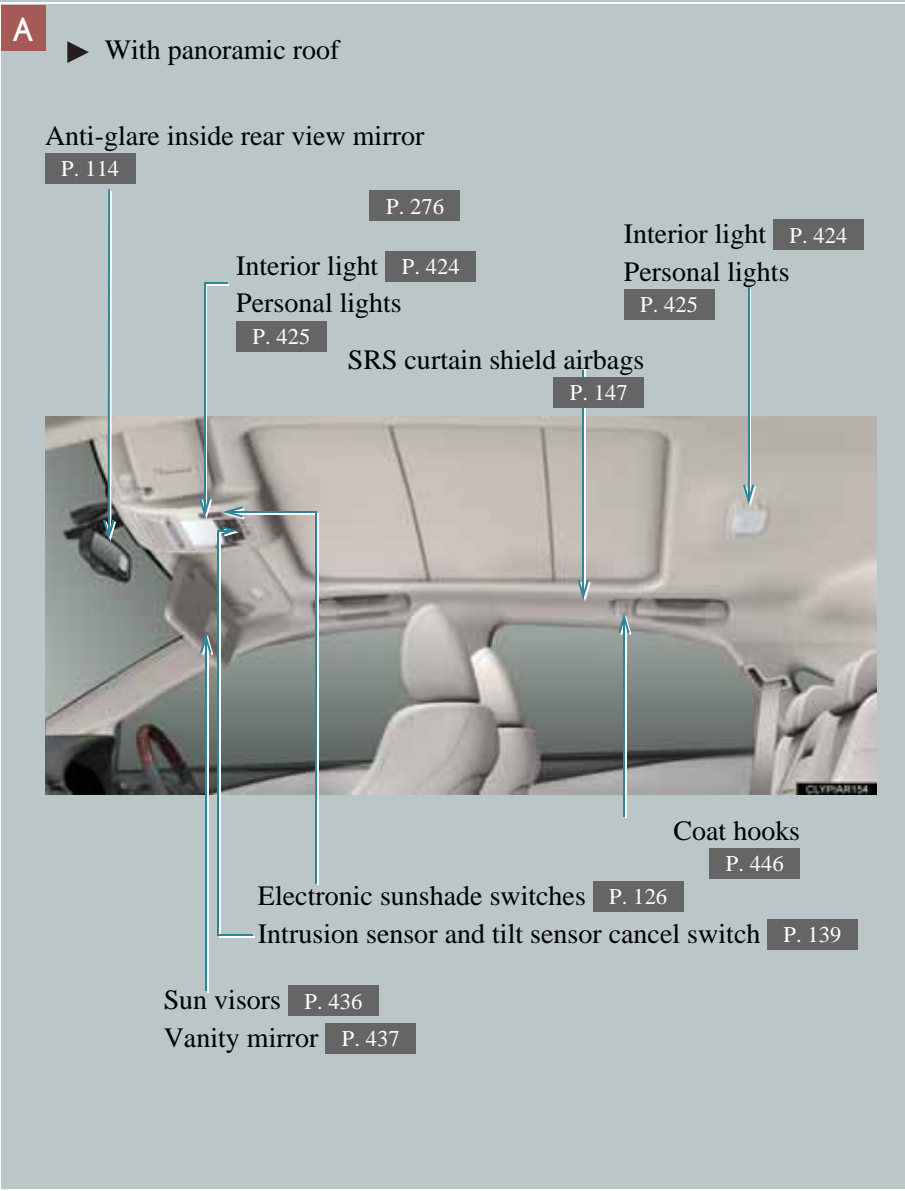


\*: If equipped

B

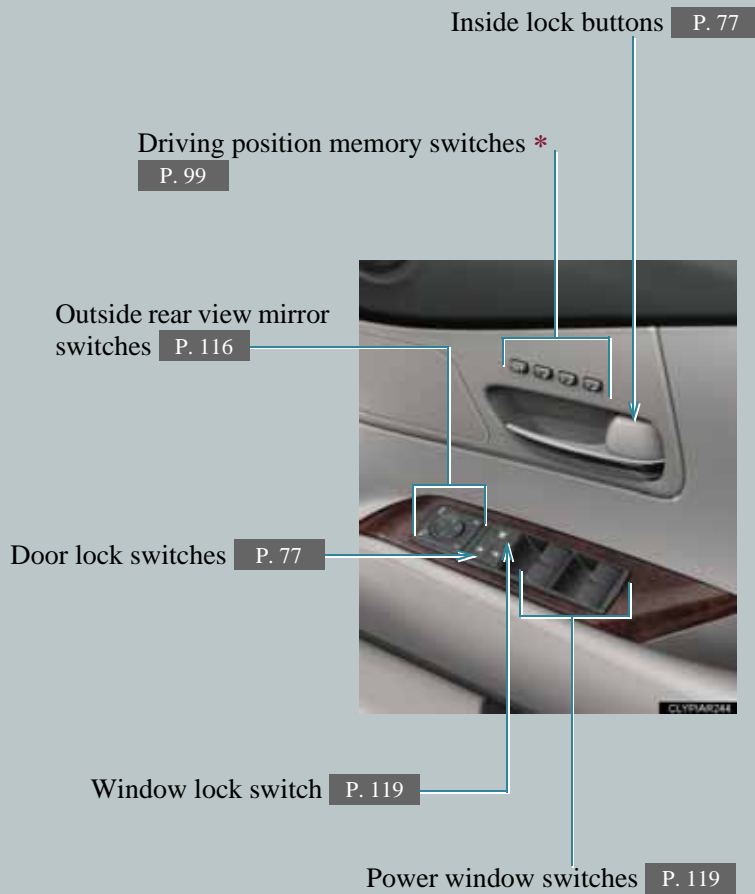


C

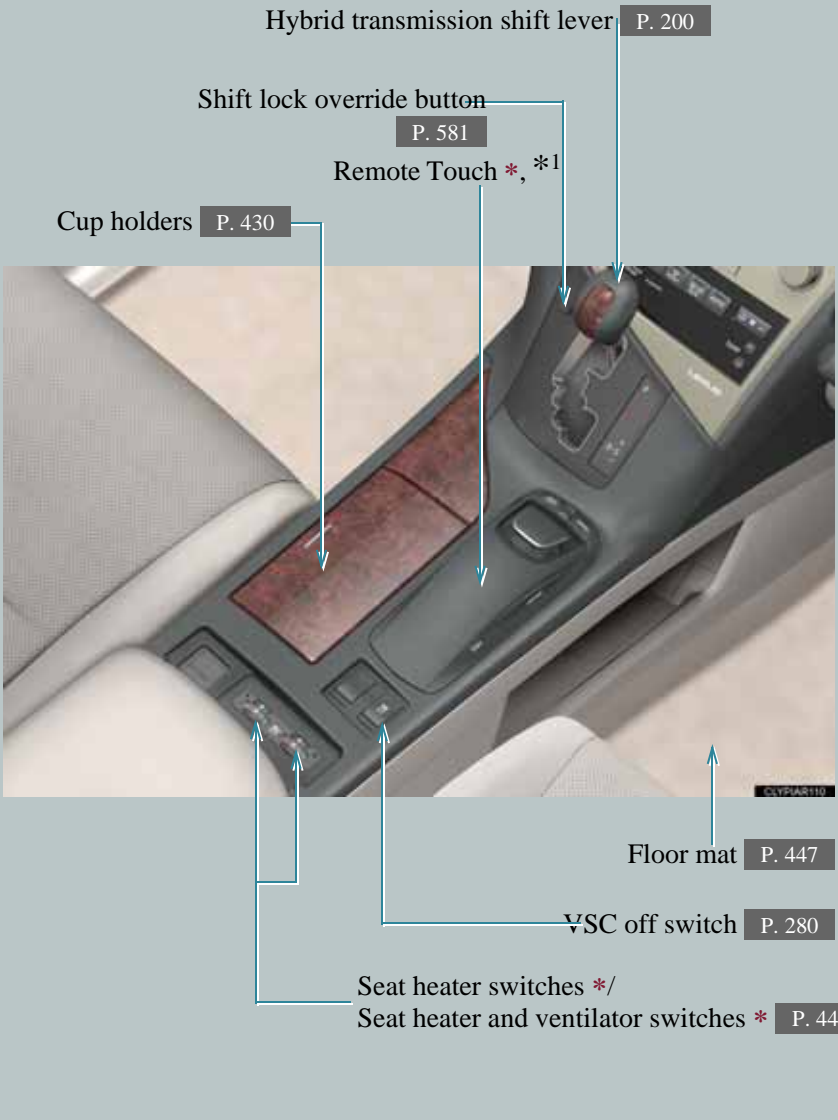


\*: If equipped  
\*1: Refer to "Navigation System Owner's Man-

## Pictorial index


## Instrument panel (Right-hand drive vehicles)

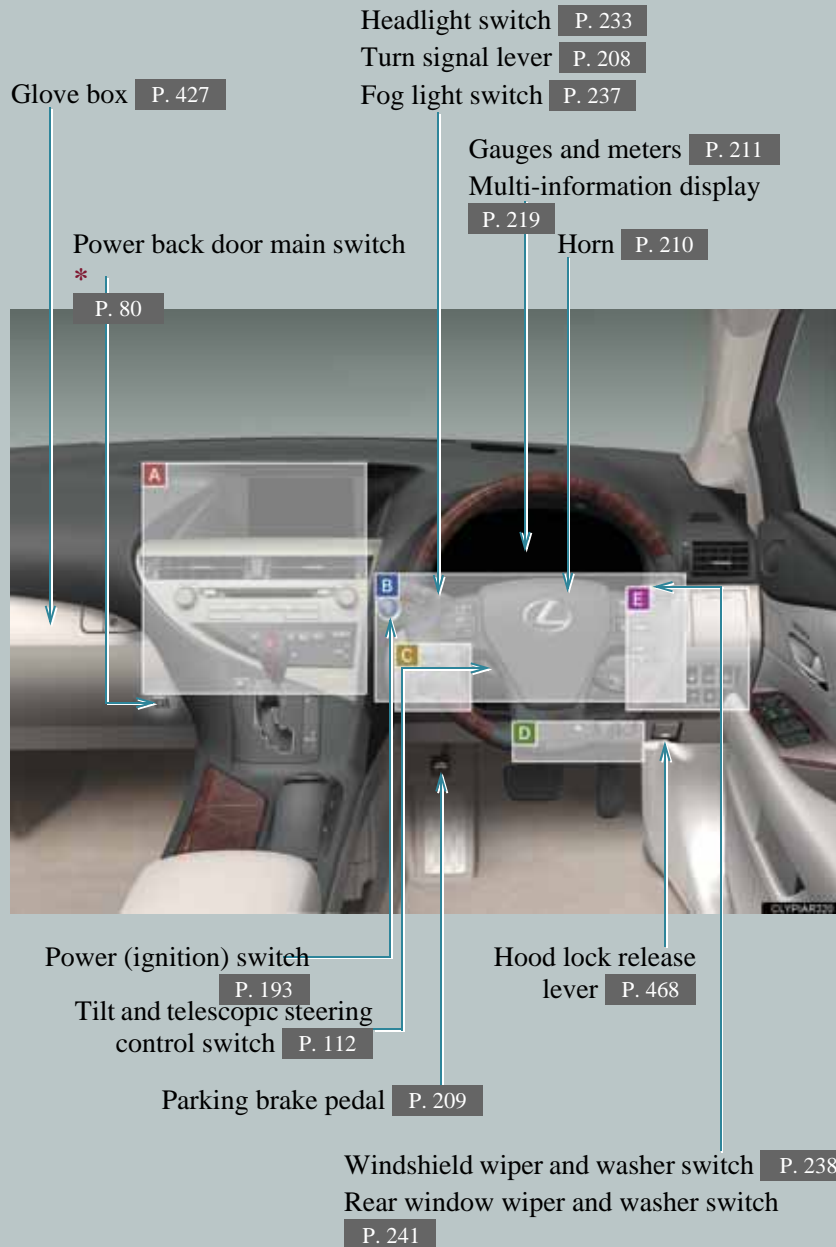

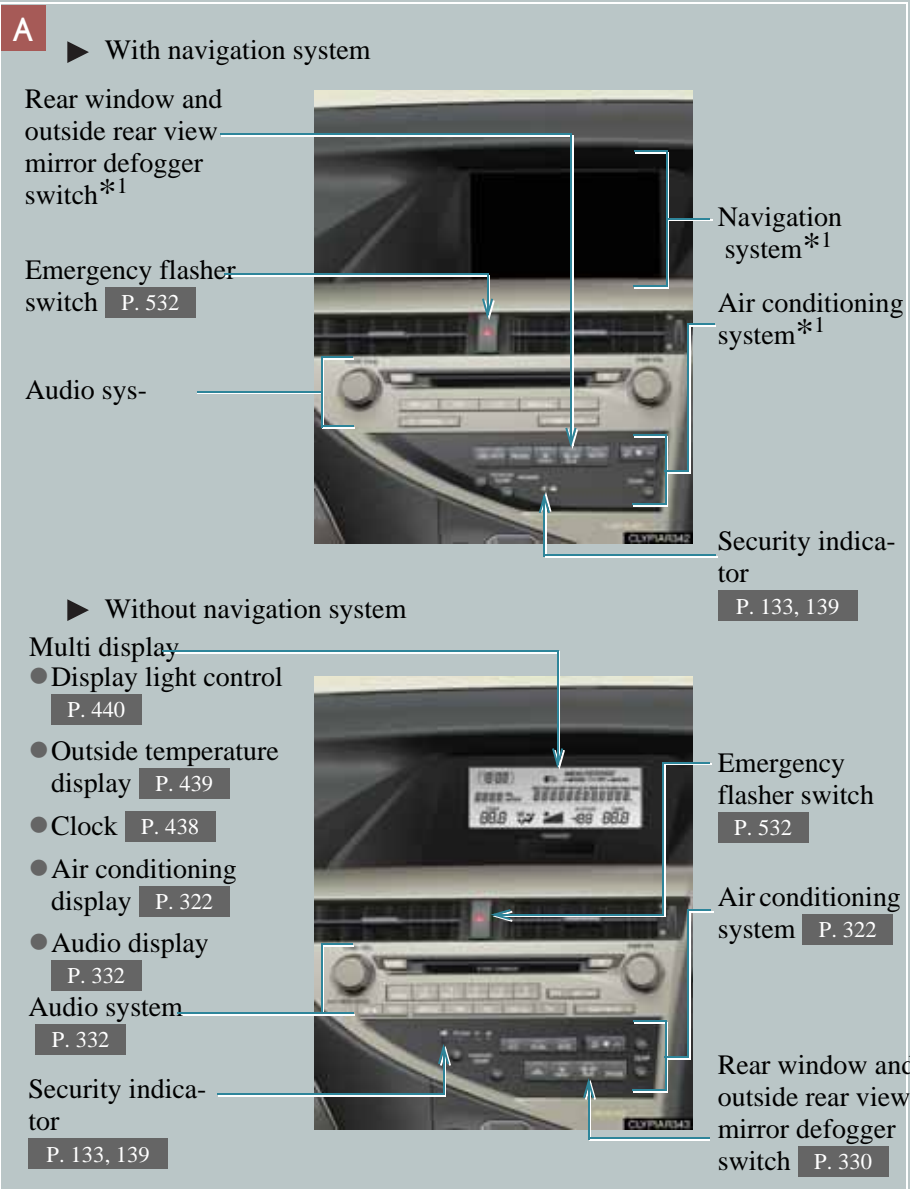


\*: If equipped  
 \*1: Refer to "Navigation System Owner's Man-

B

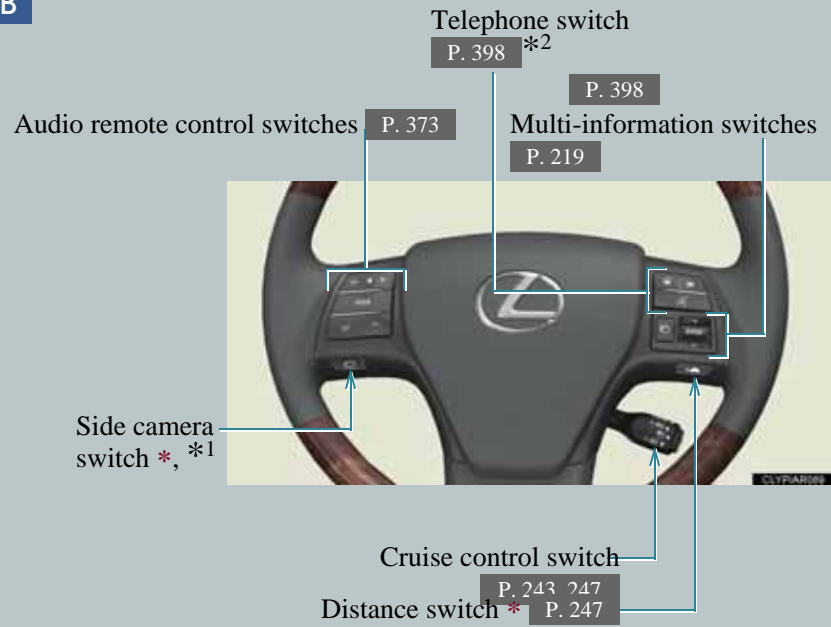

C

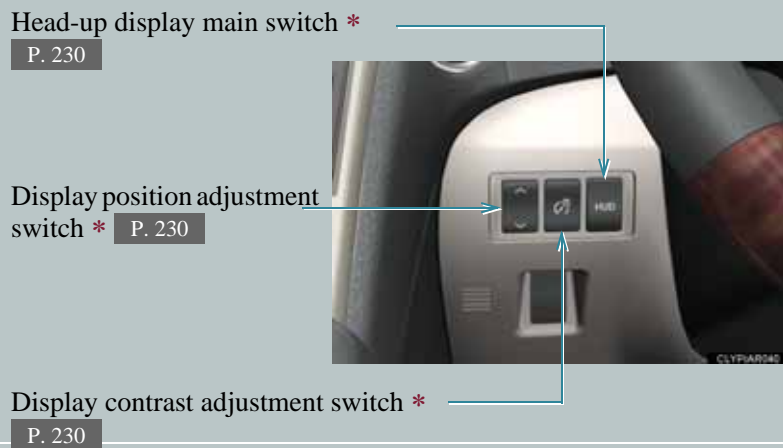

**D** Height control off switch \* P. 269

Pre-crash braking off switch \* P. 288

**E**

Headlight cleaner switch P. 242

Power back door switch \* P. 80

“ODO/TRIP” button P. 211

Instrument panel light control buttons P. 211

Fuel filler door opener P. 128

Height selector switch \* P. 269

Cup holders P. 430

Windshield wiper de-icer switch \* P. 331

\*: If equipped

\*1: Refer to “Navigation System Owner’s Manual”.

\*2: For vehicles with a navigation system, refer to the “Navigation System Owner’s



- Power outlet P. 441
- Auxiliary boxes P. 448
- Luggage cover P. 449
- Cargo hooks P. 448
- Cargo hooks P. 448

**A**

Power back door switch \* P. 80



**B**

Luggage compartment lights P. 80



Rear seatback lock release lever P. 95

Height selector switch \* P. 269

\*: If equipped

## For your information

### Main Owner's Manual

Please note that this manual covers all models and all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

### Accessories, spare parts and modification of your Lexus

Both genuine Lexus and a wide variety of other spare parts and accessories for Lexus vehicles are currently available on the market. Should it be determined that any of the genuine Lexus parts or accessories supplied with the vehicle need to be replaced, Toyota Motor Corporation recommends that genuine Lexus parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used. Lexus cannot accept any liability or guarantee spare parts and accessories which are not genuine Lexus products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Lexus spare parts or accessories may not be covered under warranty.

## Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Hybrid system
- Multiport fuel injection system/sequential multiport fuel injection system
- Cruise control system
- Dynamic radar cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Unwanted noise may occur in the reception of the RF-transmitter.

## Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, before you scrap your vehicle.

 CAUTION

■ General precautions while driving

**Driving under the influence:** Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

**Defensive driving:** Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

**Driver distraction:** Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

 CAUTION

■ Disposal of the hybrid battery (traction battery)

If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.



Your vehicle contains batteries and/or accumulators. Do not discard them into the environment but cooperate with separate collection (Directive 2006/66/EC).

## Symbols used throughout this manual

### Cautions & Notices

#### CAUTION

This is a warning against something which, if ignored, may cause injury to people. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

#### NOTICE

This is a warning against something which, if ignored, may cause damage to the vehicle or its equipment. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your Lexus and its equipment.

### Symbols used in illustrations





#### Safety symbol

The symbol of a circle with a slash through it means “Do not”, “Do not do this”, or “Do not let this happen”.



#### Arrows indicating operations

 Indicates the action (pushing, turning, etc.) used to operate switches and other devices.

 Indicates the outcome of an operation (e.g. a lid opens).

## Before driving

# 1


1-1. Hybrid system	Anti-glare inside rear view mirror ..... 114
Hybrid system ..... 36	Outside rear view mirrors . 116
Hybrid system precautions. 40	
Energy monitor/ consumption screen ..... 46	1-5. Opening and closing the windows and moon roof
Hybrid vehicle driving tips 51	Power windows..... 119
	Moon roof ..... 122
1-2. Key information	Electronic sunshade ..... 126
Keys ..... 53	
1-3. Opening, closing and locking the doors	1-6. Refueling
Smart entry & start system. 58	Opening the fuel tank cap 128
Wireless remote control .... 74	
Side doors ..... 77	1-7. Theft deterrent system
Back door ..... 80	Immobilizer system ..... 133
	Double locking system .... 138
1-4. Adjustable components (seats, mirrors, steering wheel)	Alarm ..... 139
Front seats ..... 91	1-8. Safety information
Rear seats ..... 95	Correct driving posture .... 145
Driving position memory... 99	SRS airbags..... 147
Head restraints ..... 104	Child restraint systems..... 158
Seat belts ..... 106	Installing child restraints . 166
Steering wheel..... 112	Airbag manual on/off system ..... 177

## 1-1. Hybrid system

### Hybrid system

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

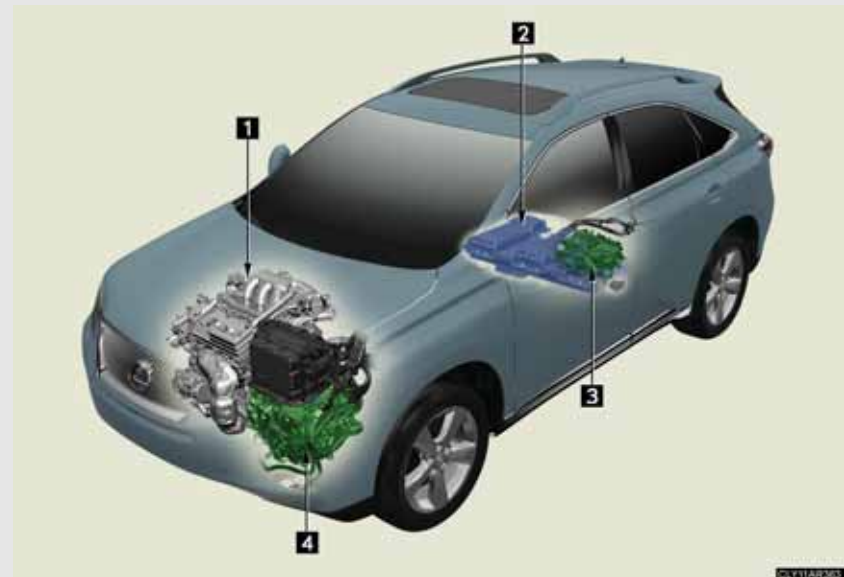

- 1 Gasoline engine
  - 2 Hybrid battery (traction battery)
  - 3 Rear electric motor (Traction motor)\*
  - 4 Front electric motor (Traction motor)
- \*: AWD models only

**■ When stopped/during start-off**

The gasoline engine stops when the vehicle is stopped. During start-off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped and the motor is used.

**■ During normal driving**

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery as necessary.

**■ When accelerating sharply**

The power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

**■ When braking (regenerative braking)****■ Charging the hybrid battery (traction battery)**

- As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes. If the hybrid battery becomes fully discharged and you are unable to jump-start the vehicle with the 12-volt battery, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.

## 1-1. Hybrid system

### ■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released.
- The brake pedal is depressed with the shift lever in D or S.

### ■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

### ■ Charging the 12-volt battery

→P. 588

### ■ After the 12-volt battery has discharged or has been changed or removed

The gasoline engine may not stop even if the vehicle is running on the hybrid battery (traction battery). If this continues for a few days, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibration even though the vehicle is able to move. Always shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seat.


■ Maintenance, repair, recycling, and disposal

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

## 1-1. Hybrid system

### Hybrid system precautions

Take care when handling the hybrid system, as it contains a high voltage system (about 650V at maximum) as well as parts that become extremely hot when the hybrid system is operating. Obey the caution labels attached to the vehicle.

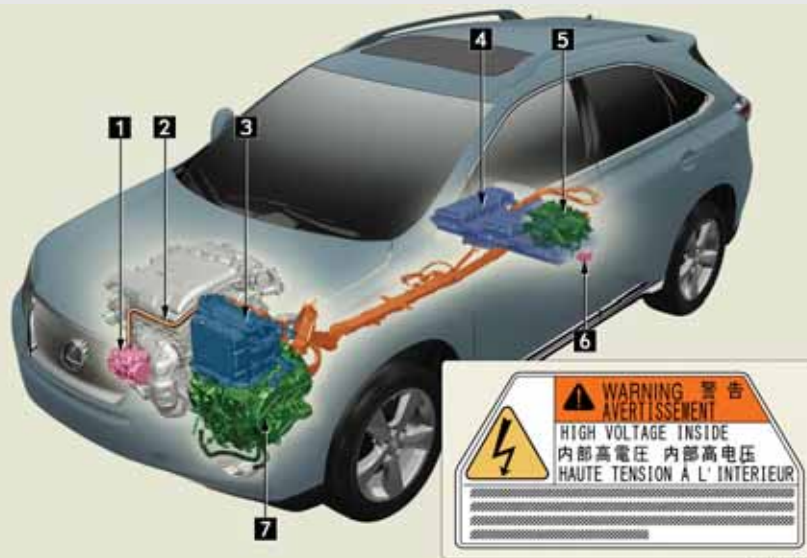

- |                                                  |                                                |
|--------------------------------------------------|------------------------------------------------|
| <b>1</b> Air conditioning compressor             | <b>5</b> Rear electric motor (traction motor)* |
| <b>2</b> High voltage cables (orange)            | <b>6</b> Service plug                          |
| <b>3</b> Power control unit with DC/DC converter | <b>7</b> Front electric motor (traction motor) |
| <b>4</b> Hybrid battery (traction battery)       |                                                |

### Hybrid battery air vents



There are air intake vents under the rear seats for the purpose of cooling the hybrid battery (traction battery). If the vents become blocked, it may become the cause of malfunctions such as the hybrid battery overheating, a reduction in battery output power etc.

1  
Before driving

### Emergency shut off system

When the vehicle receives an impact due to an accident, the hybrid system automatically stops, blocking off the high voltage current. Also, the emergency shut off system cuts the fuel supply, minimizing the risk of fuel leakage. If this occurs, the hybrid system will not be able to be restarted, therefore contact your Lexus dealer or repairer, or another duly qualified and equipped professional.

### Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display read the message and follow the instructions. (→P. 545)

- 
- If a warning light comes on or a warning message is displayed  
The hybrid system may not start. In that case, try to start the system again. If the “READY” indicator does not come on, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - When the 12-volt battery is reconnected  
→P. 485
  - Electromagnetic waves
    - High voltage parts and cables on the hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
    - Your vehicle may cause sound interference in some third party-produced radio parts.

### ■ Running out of fuel

In order to start the hybrid system, fuel is required. Therefore the hybrid system cannot be started on electrical energy only.

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P. 543) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 10.1 L [2.7 gal., 2.2 Imp. gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

### ■ Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

1

Before driving

## ⚠ CAUTION

### ■ High voltage and high temperature precautions

The vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables and their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the caution labels attached to the vehicle.



- Never try to open the service plug access hole located under the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

 CAUTION

■ Road accident cautions

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, shift the shift lever to P, apply the parking brake, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fluid leak occurs, do not touch it as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with all front wheels (for 2WD models) or four wheels (for AWD models) raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause an electricity leakage leading to a fire. (→P. 533)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possible.

■ Nickel-metal hydride battery

Your vehicle contains a sealed nickel-metal hydride battery. If disposed of improperly, it is hazardous to the environment and there is a risk of severe burns and electrical shock that may result in death or serious injury.

■ Hybrid battery collection

When disposing of your vehicle, always contact your Lexus dealer or repairer, or another duly qualified and equipped professional. Hybrid batteries are collected through Lexus dealer or repairer, or another duly qualified and equipped professional, as such we appreciate your cooperation.

 CAUTION

## ■ Emergency shut off system

Carefully check to see if there are exposed high voltage parts or cables. Never touch the parts or cables. (→P. 40)

 NOTICE

## ■ Hybrid battery air vents

- Do not put foreign objects in front of the air vents. The hybrid battery (traction battery) may overheat or lose power and be damaged.
- Clean the air vents regularly to prevent the hybrid battery (traction battery) from overheating.
- Do not wet or allow foreign substances to enter the air vents as this may cause a short circuit and damage the hybrid battery (traction battery).
- Do not carry large amount of water such as an aquarium into the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

1

Before driving

## 1-1. Hybrid system

### Energy monitor/consumption screen

You can view the status of your hybrid system on the multi-information display and the navigation system screen.



- 1 Navigation system screen (if equipped)
- 2 Multi-information display



Remote Touch\* (if equipped)

- 1 "MENU" button
- 2 Remote Touch knob
- 3 "ENTER" button

\*:For use of the Remote Touch, refer to "Navigation System Owner's Manual".

### Energy monitor

#### ► Navigation system screen



Press the "MENU" button on the Remote Touch.



Select  on the **Start** screen and press the “ENTER” button on the Remote Touch.



Select  and press the “ENTER” button.

If the **Consumption** or **Past record** screen is displayed, select the **Energy** and press the “ENTER” button.

► Multi-information display

















Toggle the “ENTER” switch on the steering wheel upward or downward through several items to select the energy monitor display.

1

Before driving

## 1-1. Hybrid system

	Navigation system screen	Multi-information display
When the vehicle is powered by the electric motor (traction motor)		
When the vehicle is powered by both the gasoline engine and the electric motor (traction motor)		
When the vehicle is powered by the gasoline engine		
When the vehicle is charging the hybrid battery (traction battery)		
When there is no energy flow		

	Navigation system screen		Multi-information display				
Hybrid battery (traction battery) status	Low 	↔	Full 	↔	Low 	↔	Full 

1


Before driving

These images are examples only, and may vary slightly from actual conditions.


■ Consumption (vehicles with a navigation system)

**STEP 1** Press the “MENU” button on the “Remote Touch” and



**STEP 2** Select  and press the “ENTER” button.

If the **Consumption** screen does not appear, select the **Consumption** and press the “ENTER” button.

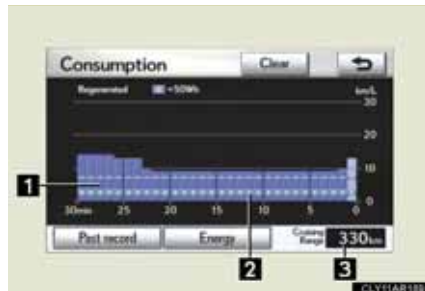

- 1** Fuel consumption in the past 30 minutes
- 2** Regenerated energy in the past 30 minutes  
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3** Cruising range


The image is example only, and may vary slightly from actual conditions.

## 1-1. Hybrid system


### ■ Past record (vehicles with a navigation system)

**STEP 1** Press the “MENU” button on the “Remote Touch” and

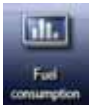

**STEP 2** Select  and press the “ENTER” button.

If the **Past record** screen does not appear, select the **Past record** and press the “ENTER” button.

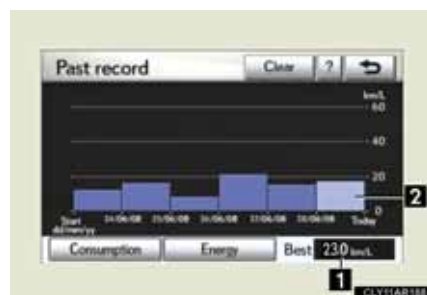

**1** Best past fuel consumption

**2** Average fuel consumption

Displays a maximum of five past record of the total average fuel consumption on the multi-information display.

The image is example only, and may vary slightly from actual conditions.

---

### ■ Resetting the consumption data

Selecting **Clear** on the **Consumption** screen will reset the fuel consumption and the regenerated energy for the past 30 minutes. Selecting **Clear** on the **Past record** screen will reset the past records and best past fuel consumption. Selecting **Yes** on the following screen will confirm resetting of all the data.

For economical and ecological driving, pay attention to the following points:

■ Use of Hybrid System Indicator

More Eco-friendly driving is possible by keeping the indicate of Hybrid System Indicator within Eco area.

■ When braking the vehicle

Make sure to operate the brakes gently and early. A greater amount of electrical energy can be retained when slowing down.

■ Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel consumption. Check traffic reports before leaving and avoid delays as much as possible. When encountering a delay, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

■ Highway driving

Control your speed and keep at a constant speed. Also, before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be retained when slowing down.

■ Air conditioning

Use the air conditioning only when necessary. Doing so can help control excessive gasoline consumption.

In summer: In high temperatures, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until the gasoline engine and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be

■ **Checking tire inflation pressure**

Make sure to check the tire inflation pressure frequently. (→P. 610)  
Improper tire inflation pressure can cause poor fuel consumption.  
Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel consumption. Use a tire that is appropriate for the season.

■ **Luggage**

Carrying heavy luggage can lead to poor fuel consumption. Avoid carrying unnecessary luggage. Installing a large roof rack can also cause poor fuel consumption.

■ **Warming up before driving**

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to poor fuel consumption.

## 1-2. Key information

# Keys

The following keys are provided with the vehicle.



### 1 Electronic keys

- Operating the smart entry & start system (→P. 58)
- Operating the wireless remote control function (→P. 74)

### 2 Mechanical keys

### 3 Key number plate

### 4 Card key (electronic key) (if equipped)

Operating the smart entry & start system (→P. 58)

1

Before driving

### Using the mechanical key



To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it. Mechanical keys with grooves on one side can be inserted in one direction only.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.  
(→P. 583)

■ Card key

- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the card key does not operate properly.
- If it is difficult to take out the mechanical key, press down the lock release button using a pen tip etc. If it is still difficult to pull it out, use a coin etc.



- To store the mechanical key in the card key, insert it while pressing the lock release button.

## 1-2. Key information



- If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.

- The card key is not waterproof.
- When required to leave the vehicle's key with a parking attendant  
Lock the glove box as circumstances demand. (→P. 427)  
Remove the mechanical key for your own use and provide the attendant with the electronic key only.
- Key number plate  
Keep the plate in a safe place such as your wallet, not in the vehicle. In the event that a mechanical key is lost, a new key can be made by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional using the key number plate. (→P. 582)
- When riding in an aircraft  
When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

 NOTICE

## ■ To prevent key damage

Observe the following:

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for a long period of time.
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems, glass top ranges, or medical electrical equipment, such as low-frequency therapy equipment.

## ■ Carrying the electronic key on your person

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

## ■ In case of a smart entry &amp; start system malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle, including the card key, to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## ■ When a vehicle key is lost

If the key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately with all remaining electronic keys and the card key that was provided with your vehicle.


 NOTICE

■ Precautions for handling the card key

- Do not apply excess force when inserting the mechanical key into the card key. Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode and the card key may stop working.  
If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, replace the battery.
- Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery.  
Installing the battery in the wrong direction may cause the battery to deplete rapidly.
- The surface of the card key may be damaged, or its coating may peel off in the following situations:
  - The card key is carried together with hard objects, such as coins and keys.
  - The card key is scraped with a sharp object, such as the tip of a mechanical pencil.
  - The surface of the card key is wiped with thinner or benzene.


### 1-3. Opening, closing and locking the doors Smart entry & start system

By simply carrying the electronic key or card key on your person, for example in your pocket, the following operations can be performed without using a key. The driver should always carry the electronic key.

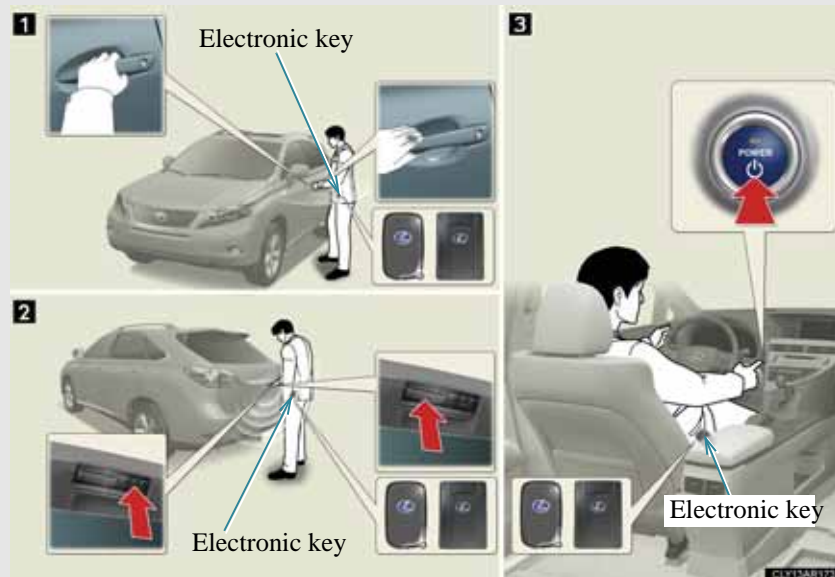

- 1** Locks and unlocks the side doors (→P. 59)
- 2** Locks and unlocks the back door (→P. 59)
- 3** Starts the hybrid system (→P. 193)


Unlocking and locking the side doors (front door handles only)

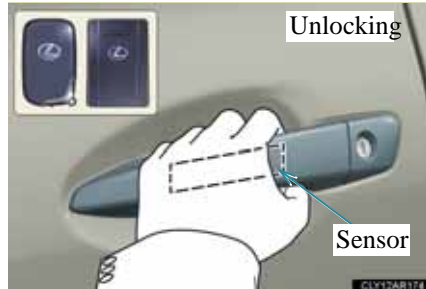

Grip the handle to unlock the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

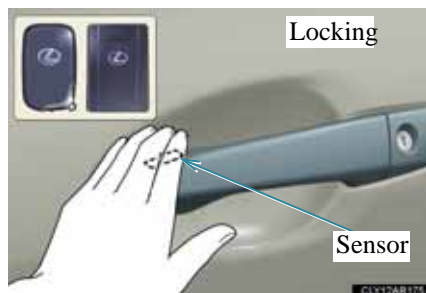

Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

If locking/unlocking cannot be performed correctly, use the wireless remote control or mechanical key to perform the operations. (→P. 75, 583)

Unlocking and locking the back door



Press the button to unlock the door.

The door cannot be unlocked for 3 seconds after the door is locked.

1  
Before driving

### 1-3. Opening, closing and locking the doors



Press the button to lock the door.

If locking/unlocking cannot be performed correctly, use the wireless remote control to perform the operations. (→P. 75)

#### Effective range (areas within which the electronic key is detected)



- When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside door handle. (Only the doors detecting the key can be operated.)

- When starting the hybrid system or changing “POWER” switch modes (→P. 194)

The system can be operated when the electronic key is inside the vehicle.

---

■ Operation signals

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

- When the door cannot be locked by the lock sensor on the upper part of the door handle



Touch both lock sensors on the upper and lower part of the door handle simultaneously.

1  
Before driving

### 1-3. Opening, closing and locking the doors

#### ■ Alarms and warning indicators

A combination of exterior and interior alarms as well as warning messages shown on the multi-information display is used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures in response to any warning message on the multi-information display. (→P. 545)

The following table describes circumstances and correction procedures when only alarms are sounded.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings repeatedly	The “POWER” switch was turned to ACCESSORY mode while the driver's door was open. (The driver's door was opened when the “POWER” switch was in ACCESSORY mode.)*	Close the driver's door.
	The “POWER” switch was turned off while the driver's door was open.*	Close the driver's door.

\*: For “POWER” switch mode explanations: →P. 194

#### ■ If the smart entry & start system does not operate properly

The reception conditions may be poor or the battery may have depleted.

- Steps to take in an emergency: →P. 583
- Changing the electronic key battery: →P. 498

■ Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly.

(Ways of coping: →P. 583)

- When the electronic key battery is depleted
- When the vehicle is stopped near a TV tower, electric power plant, gas station, radio station, large display, airport or a similar facility that generates strong radio waves or electrical noise.
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When multiple electronic keys are in the vicinity
- When another wireless key (that emits radio waves) is being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window

### 1-3. Opening, closing and locking the doors

#### ■ Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
- If the battery becomes low, an alarm will sound in the cabin when the hybrid system stops. (→P. 557)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P. 498)
  - The smart entry & start system or the wireless remote control does not operate.
  - The detection area becomes smaller.
  - The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
  - TVs
  - Personal computers
  - Cellular phones, cordless phones and battery chargers
  - Recharging cellular phones or cordless phones
  - Glass top ranges
  - Table lamps

#### ■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

#### ■ Battery-saving function

If the vehicle is parked for a long period of time, the battery-saving function is activated in order to prevent the vehicle 12-volt battery from being discharged and the electronic key battery from being depleted.

- In the following circumstances, unlocking the vehicle using the entry function may take longer than usual:
  - When the entry function has not been used for 5 days or more
  - When the electronic key has been left within approximately 2 m (6 ft.) of the vehicle for 10 minutes or more

### 1-3. Opening, closing and locking the doors

1

Before driving



### 1-3. Opening, closing and locking the doors

- If the entry function has not been used for 14 days or more, the vehicle cannot be unlocked by a door other than the driver's door. To unlock the vehicle, grip the driver's door handle or use the wireless remote control or the mechanical key.

The system will resume operation when:

- The vehicle is locked using the lock sensor.
- The vehicle is locked/unlocked using the wireless remote control function.  
(→P. 75)
- The vehicle is locked/unlocked using the mechanical key. (→P. 583)

#### ■ Points to remember regarding electronic key detection

- If there is a problem with the manner by which the electronic key is held or is placed as outlined below, the electronic key may not be detected and therefore may not be able to be operated despite being in the effective range. Also, the alarm may be triggered accidentally or the door lock prevention function may not operate.
  - Outside the vehicle: When the doors are locked/unlocked with the electronic key too close to the door window, door handle or rear bumper, or with the electronic key too close to the ground or in a high location.
  - Inside the vehicle: When the electronic key is placed on top of the instrument panel, on the floor, in a door pocket, inside the glove box etc.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- The doors may lock or unlock if the electronic key is within the effective range and a large amount of water splashes on the door handle, such as in the rain or in a car wash. The doors will automatically be locked after approximately 30 seconds if a door is not opened and closed.
- If the key is too close to the vehicle when the  button on the wireless remote control is used for locking and then unlocking is attempted, the smart entry and start system may not operate. If this occurs, perform unlocking by pressing the  button on the wireless remote control.

■ Notes for locking the doors

- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- If ice, snow, mud, etc. is attached to the surface of the lock sensor, the sensor may not work. If this occurs, operate the sensor again after the ice, snow, mud, etc. has been cleaned off.
- Fingernails may scrape against the door during operation of the door handle. Be careful not to injure fingernails or damage the surface of the door.

■ Notes for the unlocking function

- Gripping the door handle when wearing a glove may not unlock the door.
- A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

■ When the vehicle is not driven for extended periods

- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P. 617)

■ Customization

Settings (e.g. smart entry & start system) can be changed.  
(Customizable features →P. 617)

### 1-3. Opening, closing and locking the doors

#### ■ Certification for the smart entry & start system

This system meets the certification requirements of Radio Law.

Hereby, Tokai Rika Co., Ltd., declares that this B74EA is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Ovim, Tokai Rika Co., Ltd., izjavljuje da ovaj B74EA je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive

**TOKAI RIKA**

#### R&TTE Declaration of Conformity

We,

Manufacturer's Name: Tokai Rika Co., Ltd.  
Manufacturer's Address: 260, Toyota 3-chome, Oguchi-cho, Niwa-gun, Aichi-ken,  
480-0195, Japan


hereby declare under our sole responsibility that the product:

Product Name: Electronic Key  
Product Model: B74EA

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is compliant with the following standards and/or other normative documents:

Safety: EN60950-1  
EMC: EN301 489-1 & -3  
Spectrum: EN300 220-2, EN300 330-2


Supplementary information:

* CE mark	
* Member states intended for use	EU and EFTA
* Member states with restrictive use	None

Date:

8 January 2008

Signature:

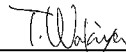

Position of the signatory:

Tadashi Wakiya  
General Manager,  
Electronics Engineering Div.

Hereby, Tokai Rika Co., Ltd., declares that this B81UA is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Ovim, Tokai Rika Co., Ltd., izjavljuje da ovaj B81UA je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive

**TOKAI RIKA**

**R&TTE Declaration of Conformity**

We,

Manufacturer's Name: Tokai Rika Co., Ltd.  
Manufacturer's Address: 260, Toyota 3-chome, Oguchi-cho, Niwa-gun, Aichi-ken,  
480-0195, Japan


hereby declare under our sole responsibility that the product:

Product Name: Tuner  
Product Model: B81UA

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is compliant with the following standards and/or other normative documents:

Safety: EN60950-1  
EMC: EN301 489-1 & -3  
Spectrum: EN300 220-2


Supplementary information:

* CE mark	
* Member states intended for use	EU and EFTA
* Member states with restrictive use	None

Date:

31 March 2008

Signature:

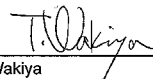

Position of the signatory:

Tadashi Wakiya  
General Manager,  
Electronics Engineering Div.

1

Before driving

### 1-3. Opening, closing and locking the doors

-Replace only with the same or equivalent type recommended by the manufacturer.

-Dispose of used batteries according to the local laws.

Hereby, DENSO CORPORATION declares that this 14AEC is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Ovim, DENSO CORPORATION, izjavljuje da ovaj 14AEC je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

## TOYOTA

### TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571 (Head Office)  
or 471-8572 (Research & Development Group) JAPAN  
TEL. +81-565-28-2121

### R&TTE Declaration of Conformity

We,

Manufacturer's Name: TOYOTA MOTOR CORPORATION

Manufacturer's Address: 1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

hereby declare under our sole responsibility that the product:

Product Name: LF Oscillator

Product Model: TMLF8-6

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is compliant with the following standards and/or other normative documents:

-Health & safety requirements:	EN60950-1
-EMC requirements	EN 301 489-01 & EN 301 489-03
-Effective uses of radio spectrum:	EN 300 330-2

Supplementary information:

* CE mark	
* Member states intended for use	EU and EFTA

Date: February 18, 2008

Signature: *Takaaki Enomoto*

Takaaki Enomoto

### 1-3. Opening, closing and locking the doors

#### English

Hereby, Toyota Motor Corporation, declares that this TMLF8-6 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

#### Finnish

Toyota Motor Corporation vakuuttaa täten että TMLF8-6 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

#### Dutch

Hierbij verklaart Toyota Motor Corporation dat het toestel TMLF8-6 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

#### French

Par la présente Toyota Motor Corporation déclare que l'appareil TMLF8-6 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

#### Swedish

Härmed intygar Toyota Motor Corporation att denna TMLF8-6 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

#### Danish

Undertegnede Toyota Motor Corporation erklærer herved, at følgende udstyr TMLF8-6 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

#### German

Hiermit erkläre Toyota Motor Corporation, dass sich das Gerät TMLF8-6 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

#### Greek

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Toyota Motor Corporation ΔΗΛΩΝΕΙ ΟΤΙ ΤΜΛΦ8-6 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

1

Before driving

### 1-3. Opening, closing and locking the doors

#### Italian

Con la presente Toyota Motor Corporation dichiara che questo TMLF8-6 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

#### Spanish

Por medio de la presente Toyota Motor Corporation declara que el TMLF8-6 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

#### Portuguese

Toyota Motor Corporation declara que este TMLF8-6 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

#### Maltese

Hawnhekk, Toyota Motor Corporation, jiddikjara li dan TMLF8-6 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.

#### Estonian

Käesolevaga kinnitab Toyota Motor Corporation seadme TMLF8-6 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

#### Hungarian

Alulírott, Toyota Motor Corporation nyilatkozom, hogy a TMLF8-6 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

#### Slovak

Toyota Motor Corporation týmto vyhlasuje, že TMLF8-6 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

#### Czech

Toyota Motor Corporation tímto prohlašuje, že tento TMLF8-6 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

#### Slovenian

Toyota Motor Corporation izjavlja, da je ta TMLF8-6 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

### 1-3. Opening, closing and locking the doors

#### Lithuanian

Šiuo Toyota Motor Corporation deklaruoja, kad šis TMLF8-6 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

#### Latvian

Ar šo Toyota Motor Corporation deklarē, ka TMLF8-6 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

#### Polish

Niniejszym Toyota Motor Corporation oświadcza, że TMLF8-6 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

#### Icelandic

Hér með lýsir Toyota Motor Corporation yfir því að TMLF8-6 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

#### Norwegian

Toyota Motor Corporation erklærer herved at utstyret TMLF8-6 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

#### Montenegro

Ovim, Toyota Motor Corporation, izjavljuje da ovaj TMLF8-6 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.


1

Before driving

### 1-3. Opening, closing and locking the doors

#### CAUTION

##### ■ Caution regarding interference with electronic devices

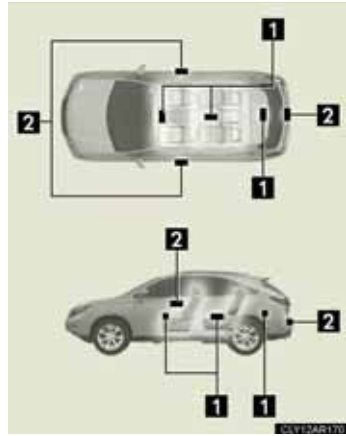

- People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the antenna inside the cabin (1) and antenna outside the cabin (2).

The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable

- User of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for disabling the entry function.

The wireless remote control can be used to lock and unlock the vehicle.

It also opens and closes the back door.

► Vehicles without a power back door



- 1 Locks all the doors
- 2 Closes the windows and moon roof (press and hold)\*
- 3 Unlocks all the doors
- 4 Opens the windows and moon roof (press and hold)\*

\*:This setting must be customized at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

► Vehicles with a power back door



- 1 Locks all the doors
- 2 Closes the windows and moon roof (press and hold)\*
- 3 Unlocks all the doors
- 4 Opens the windows and moon roof (press and hold)\*
- 5 (Function not specified in the provided text)

---

### ■ Operation signals

Side doors: The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

Back door: The emergency flashers flash twice to indicate that the back door is opening/closing.

Windows and moon roof: The emergency flashers flash to indicate that the windows and moon roof are operating.

### ■ Door lock buzzer

If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously. Fully close the door to stop the buzzer, and lock the vehicle once more.

### ■ Security feature

→P. 64

### ■ Back door operation

The back door will not lock automatically after it has been opened and then closed. Lock the back door again when you leave the vehicle.

### ■ Alarm

Using the wireless remote control to lock the doors will set the alarm system.

(→P. 139)

### ■ Reversing the operation of the power back door

Pressing the wireless remote control switch again while the power back door is operating will cause the operation to reverse.

### ■ Conditions affecting operation

→P. 63

### ■ If the wireless remote control does not operate properly

Locking and unlocking the doors: Use the mechanical key. (→P. 583)

### 1-3. Opening, closing and locking the doors

#### ■ Electronic key battery depletion

→P. 64

#### ■ When the electronic key battery is fully depleted

→P. 498

#### ■ Customization

Settings (e.g. door unlocking function) can be changed.  
(Customizable features →P. 617)

#### CAUTION

#### ■ When closing the windows or moon roof using wireless remote control

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window or moon roof is being operated.
  - To prevent inadvertent power windows and moon roof operation, never let a small child have and use the wireless remote control.
- #### ■ Jam protection function
- Never try jamming any part of your body to activate the jam protection function intentionally.
  - The jam protection function may not work if something gets caught just before the window or moon roof fully closes.

### 1-3. Opening, closing and locking the doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

■ Entry function

→P. 59

■ Wireless remote control

→P. 75

■ Door lock switches



**1** Locks all the doors

**2** Unlocks all the doors

■ Inside lock buttons



**1** Locks the door

**2** Unlocks the door

The driver's door can be opened by pulling the inside handle even if the lock button is in the lock position.

### Locking the front door from the outside without a key

**STEP 1** Move the inside lock button to the lock position.

**STEP 2** Close the door while pulling the door handle.

The door cannot be locked if the “POWER” switch is in ACCESSORY or ON mode, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be locked.

### Rear door child-protector lock



The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

1

Before driving

#### ■ Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

#### ■ Using the mechanical key

The doors can also be locked and unlocked with the mechanical key. (→P. 583)

#### ■ If a wrong key is used

The key cylinder rotates freely to isolate inside mechanism.

#### ■ Customization

Settings (e.g. unlocking function using a key) can be changed. (Customizable features →P. 617)

### 1-3. Opening, closing and locking the doors

#### CAUTION

##### ■ To prevent an accident

Observe the following precautions while driving the vehicle.

Failure to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Always use a seat belt.
- Ensure that all the doors are properly closed.
- Do not pull the inside handle of the doors while driving.  
The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.  
Be especially careful with the driver's door, as the door may be opened even if the inside lock button is in the locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

##### ■ When opening or closing a door

Check the surroundings of the vehicle such as whether the vehicle is on an incline, whether there is enough space for a door to open and whether a strong wind is blowing. When opening or closing the door, hold the door handle tightly to prepare for any unpredictable movement.

### 1-3. Opening, closing and locking the doors

1

Before driving

### 1-3. Opening, closing and locking the doors

The back door can be locked/unlocked and opened/closed by the following procedures:

■ Locking and unlocking the back door

▶ Door lock switches

→P. 78

▶ Entry function


→P. 59

▶ Wireless remote control

→P. 75

■ Opening the back door from outside the vehicle

▶ Back door opener button

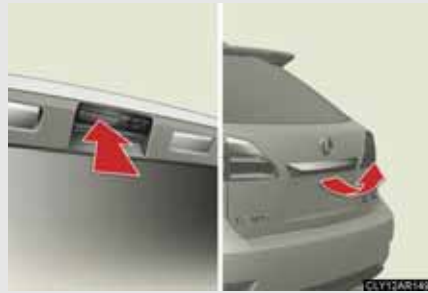

Raise the back door while pressing the back door opener to release the lock to open the back door.

▶ Wireless remote control (vehicles with a power back door)

→P. 75

■ Opening the back door from inside the vehicle (vehicles with a power back door)



Press the switch to open/close.

Pressing the switch again while the power back door is operating will cause the operation to reverse.

**Power back door switch (vehicles with a power back door)**




Press the switch to close the back door.

Pressing the switch again while the power back door is closing will cause it to open again.

1  
Before driving

**Canceling the power back door system (vehicles with a power back door)**

Turn off the main switch in the glove box to disable the power back door system.

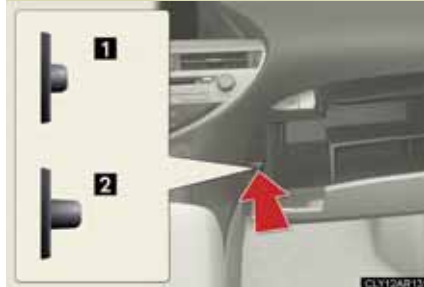

- 1 On
- 2 Off

The back door cannot be operated even with the wireless remote control or power back door opener button.

### 1-3. Opening, closing and locking the doors

- The power back door can be operated when
  - The back door is unlocked.
  - The power back door main switch is on.
  - To open the power back door when the “POWER” switch is in ON mode, the power back door main switch must be on, the vehicle speed must be lower than 3 km/h (1 mph) and the shift lever must be in P. (When using the power back door open button only)
  - The “POWER” switch is turned off. (When using the wireless remote control only)

- When closing the back door using the back door handle



Use the back door handle when lowering the back door.

Do not close the back door fully while still holding the door handle as an injury may result.

- Luggage compartment lights



The luggage compartment lights turn on when the back door is opened with the luggage compartment light switch on.

- Back door closer (vehicles with a power back door)

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

- The back door closer will operate regardless of “POWER” switch mode.
- The back door can be opened while the back door closer is operating by pressing the back door opener button.

■ Power back door operation

- A buzzer sounds to indicate that the back door is opening/closing.
- The back door can still be opened and closed manually, even when the power back door main switch is off.
- Pressing the back door opener button while the power back door system is operating will cause the back door to switch to manual operation.
- If anything obstructs the power back door while it is closing/opening, a buzzer will sound and the back door will automatically operate in the opposite direction.
- If two or more successive attempts are made to close the back door, a buzzer will sound and the back door will switch to manual operation.

■ Jam protection function (vehicles with a power back door)



Sensors are attached to the left and right sides of the power back door. If these sensors detect an obstruction while the power back door is closing, the jam protection function will return the door to the fully open position.

■ After the back door has been opened and then closed

Lock the back door again as the back door will not lock automatically.

■ Luggage mode (vehicles with electronically modulated air suspension)

Pressing the vehicle height selector switch to lower the vehicle height makes loading luggage easier. (→P. 269)

### 1-3. Opening, closing and locking the doors

#### ■ If the back door opener is inoperative

The back door can be opened from the inside.



Remove the cover.

**STEP 2** Move the lever.

► Vehicles with a power back door



► Vehicles without a power back door



#### ■ When reconnecting the 12-volt battery or changing a fuse while the back door is open:

To enable the power back door to operate properly, initialize the system by completely closing the back door manually. If the 12-volt battery is reconnected or a fuse is changed while the back door is closed, initializing the system is not necessary.

 CAUTION

- Caution while driving
  - Keep the back door closed while driving.  
If the back door is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident.  
In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
  - Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.
  - Never let anyone sit in the luggage compartment. In the event of sudden braking or a collision, they are susceptible to death or serious injury.
- When children are in the vehicle

Observe the following precautions.  
Failure to do so may result in death or serious injury.

  - Do not leave children alone in the luggage compartment.  
If a child is accidentally locked in the luggage compartment, they could have heat exhaustion.
  - Do not allow a child to open or close the back door.  
Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door, which may result in death or serious injury of the child.

### 1-3. Opening, closing and locking the doors

#### CAUTION

##### ■ Operating the back door

Observe the following precautions.

Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to fall closed again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.



- The back door may fall if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.
- When closing the back door, take extra care to prevent your fingers etc. from being caught.
- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.

**CAUTION**

- Do not pull on the back door damper stay to close the back door, and do not hang on the back door damper stay. Doing so may cause hands to be caught or the back door damper stay to break, causing an accident.
- If a bicycle carrier or similar heavy object is attached to the back door, it may fall closed again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended.

■ Back door closer



- In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious injuries.

- Use caution when using the back door closer as it still operates when the power back door system is cancelled.

■ Power back door

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- If the power back door system is turned off with the main switch while the back door is operating automatically, the automatic operation is stopped. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close unexpectedly.

 CAUTION

- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
- If the power back door main switch is turned off while the power back door is operating, the back door will change to manual operation. In this case, be careful as the back door may move suddenly.
- On an incline, the back door may fall after it opens. Make sure the back door is fully open and secure.
- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
  - When the back door contacts an obstacle
  - When the 12-volt battery voltage suddenly drops, such as when the “POWER” switch is turned to ON mode or the hybrid system is started during automatic operation
- If a bicycle carrier or similar heavy object is attached to the back door, the power back door may not operate, causing itself to malfunction, or the back door may fall closed again after being opened, causing someone’s hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Lexus part is recommended.

 CAUTION

■ Jam protection function

Observe the following precautions.

Failure to do so may cause death or serious injury.

- Be careful while the jam protection function is operating. Being hit by the back door may result in an injury.
- Although the back door stops closing when the jam protection function detects an object, take extra care as you may still be injured if part of your body is already caught.
- If anything obstructs the power back door while it is closing, the jam protection function will cause the back door to automatically operate in the opposite direction. However, be careful not to jam body parts in the door-frame, as an injury may result.
- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.
- The sensors located on the right and left sides of the power back door detect obstructions and prevent them from becoming jammed in the door. Some objects may not be detected depending on their shape or how they are jammed. Be careful not to get fingers or other body parts caught in the back door while it is operating as this may result in a serious injury.

1-3. Opening, closing and locking the doors

### 1-3. Opening, closing and locking the doors



NOTICE

1

Before driving

■ Back door damper stays

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions.

Failure to do so may cause damage to the back door damper stay, resulting in malfunction.



- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Lexus parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

■ To prevent back door closer malfunction


- Do not apply excessive force to the back door while the back door closer is operating.
- If the back door is opened and closed repeatedly in a short amount of time, the back door closer may stop operating. In this case, manually open the back door once and wait for a while before attempting to close it again.

■ To prevent damage to the power back door

- Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.
- Do not apply excessive force to the back door while the power back door is operating.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If the sensor is disconnected, the power back door will not operate in automatic operation.
- When manually closing the back door immediately after the power back door has been automatically opened fully, some resistance may be felt.

1-4. Adjustable components (seats, mirrors, steering wheel)

Front seats

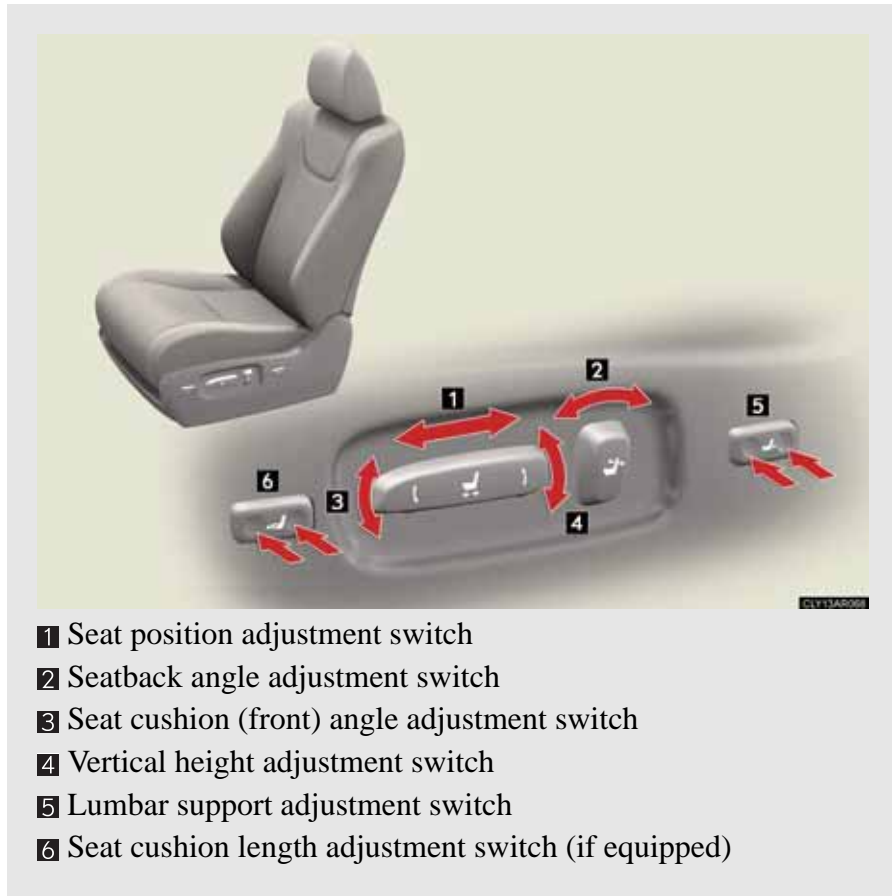


1  
Before driving

### Flattening the front seatbacks

■ Before flattening the front seatbacks

Slide the rear seats as far back as possible. (→P. 95)

■ Flattening the front seatbacks

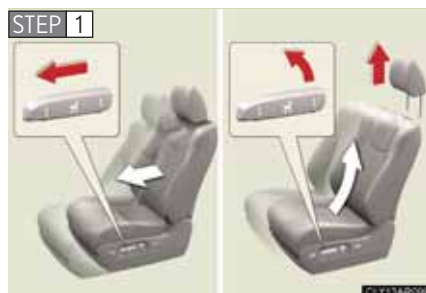

Move the front seat forward, raise the seat, and remove the headrest. (→P. 105)

After returning the seat to its original position, make sure to replace the head restraint.



Move the seatback angle adjustment switch backward to flatten the seatback.

### Active head restraints




When the occupant's lower back presses against the seatback during a rear-end collision, the head restraint moves slightly forward and upward to help reduce the risk of whiplash to the seat occupant.

1  
Before driving

#### ■ Active head restraints

Even small forces applied to the seatback may cause the head restraint to move. Pushing up a locked head restraint forcibly may appear the head restraint inner structure. These do not indicate problems.

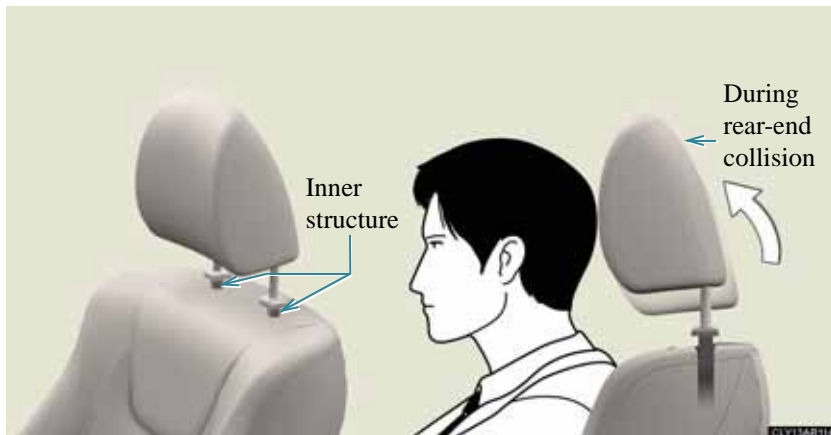

#### 1-4. Adjustable components (seats, mirrors, steering wheel)

##### CAUTION

###### ■ Seat adjustment

- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.


- Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

###### ■ While driving

Do not allow passengers to ride on the flattened seat.

1-4. Adjustable components (seats, mirrors, steering wheel)

Rear seats

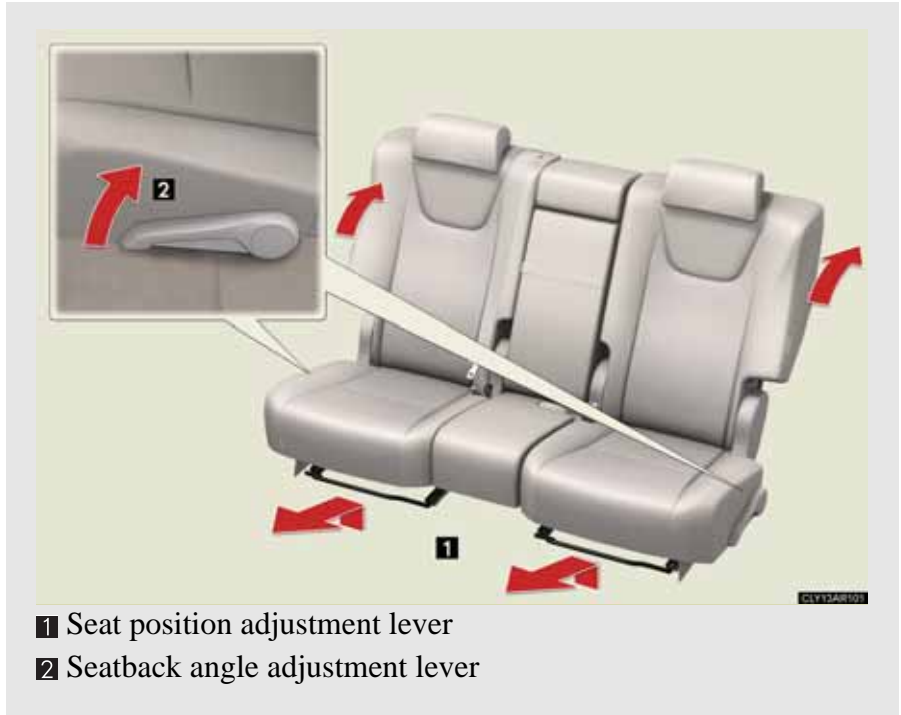

1  
Before driving

Folding down the rear seatbacks

- Before folding down the rear seatbacks



Stow all the head restraints and the rear center seat belt buckle.

#### 1-4. Adjustable components (seats, mirrors, steering wheel)



Stow the seat belts inside the rear seat side pockets.

When not in use, the seat belts should be stored inside the rear seat side pockets at all times.

#### ■ Folding down rear seatbacks

##### ► From inside



Pull the seatback angle adjustment lever.

To return the rear seatbacks to their original positions, lift them up until they lock.

##### ► From outside



Pull the levers.

Left side lever: Folds down the left side rear seat

Right side lever: Folds down the right side and center rear seats

To return the rear seatbacks to their original positions, lift them up until they lock.

■ Folding down the rear center seatback



Pull the center seatback lever behind the seatback and fold the seatback down.

To return the rear center seatback to its original position, lift it up until it locks.

1  
Before driving

**⚠ CAUTION**

■ When folding the rear seatbacks down

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not fold the seatbacks down while driving.
- Do not fold seatbacks down while passengers are seated or luggage is placed on the seats.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P.
- After folding the seatback, lightly move the seat back and forth to lock it in place.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.

■ Seat adjustment

- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.  
If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
- Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

#### 1-4. Adjustable components (seats, mirrors, steering wheel)

##### CAUTION

- After returning the rear seatback to the upright position  
Observe the following precautions.  
Failure to do so may result in death or serious injury.
  - Make sure the seatback is securely locked by pushing it forward and rearward on the top.
  - Check that the seat belts are not twisted or caught in the seatback.

##### NOTICE

- Stowing the center seat belt buckle  
Before folding down the rear seatbacks, stow the center seat belt buckle to prevent it from becoming caught in the seatbacks.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

### Driving position memory\*

Your preferred driving position (the position of the driver's seat, steering wheel and outside rear view mirrors) can be memorized and recalled with the touch of a button. It is also possible to set this function to activate automatically when the doors are unlocked.

Three different driving positions can be entered into memory.

On some models, the same buttons are found on the front passenger's side, allowing the position of the front passenger's seat to be memorized.

#### ■ Entering a position to memory

**STEP 1** Turn the "POWER" switch to ON mode.

**STEP 2** Adjust the driver's seat, steering wheel and outside rear view mirrors to the desired positions.



Press the "SET" button, then within 3 seconds press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position

\*: If equipped

## 1-4. Adjustable components (seats, mirrors, steering wheel)

### ■ Recalling the memorized position

**STEP 1** Check that the shift lever is set in P.

**STEP 2** Turn the “POWER” switch to ON mode.

**STEP 3**



Press button “1”, “2” or “3” until the signal beeps to recall the desired position.

### ■ Linking driving position memory with door unlock operation (driver's side only)

Record your driving position to button “1”, “2” or “3” before performing the following.

Carry only the key (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

**STEP 1** Shift the shift lever to P and close the driver's door. Turn the “POWER” switch to ON mode.

**STEP 2**



Press the desired button (“1”, “2” or “3”) to recall the position. Then, while keep pressing the button, press the driver's door lock switches (either lock or unlock) until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry func-

1-4. Adjustable components (seats, mirrors, steering wheel)

tion or wireless remote control  
and the driver's door is opened.

1

Before driving

#### 1-4. Adjustable components (seats, mirrors, steering wheel)

##### Power easy access system (driver's side only)

When the driver enters and exits the vehicle, the driver's seat and steering wheel will automatically perform the following operations:



Exiting the vehicle: When all of the following actions have been performed, the steering wheel will move up and back to the point farthest away from the driver and the seat will move backward (auto away function):

- The shift lever has been shifted to P
- The “POWER” switch has been turned off
- The driver seat belt has been unfastened

Entering the vehicle: When either of the following actions has been performed, the steering wheel will move toward the driver and seat will move forward (auto return function):

- The “POWER” switch has been turned to ACCESSORY mode
- The driver seat belt has been fastened

■ When driving position memory is linked with door unlock operation

If the driver's door is opened, the driver's seat will move toward the memorized position but stop slightly beforehand to allow easy access to the vehicle.

Turning the "POWER" switch to ACCESSORY mode or fastening the driver's seat belt moves the seat fully into the memorized position.

■ Canceling the linked door unlock operation

**STEP 1** Turn the "POWER" switch to ON mode and close the driver's door.

**STEP 2** While pressing the "SET" button, press the driver's door lock switches (either lock or unlock) until the signal beeps.

■ Operating the driving position memory after turning the "POWER" switch off

Memorized positions (except for the steering wheel position) can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again, even after turning the "POWER" switch off.

■ Stopping seat position operation part-way through

Perform any of the following operations:

- Press the "SET" button.
- Press button "1", "2" or "3".
- Adjust the seat using the switches (only cancels seat position recall).
- Adjust the steering wheel using the tilt and telescopic steering control switch (only cancels steering wheel position recall).

■ Correct seat position

When the seat is in the most forward or most backward position, and the seat is being moved in those directions, the system may not correctly recognize the current position and the memorized position will not be correctly recalled.

■ The auto away function for exiting the driver seat

If the seat is already close to the rearmost position, the auto away function may not operate when the driver exits the vehicle.

■ Customization

The distance that the driver's seat moves backward during the auto away function can be changed. (Customizable features →P. 619)


#### 1-4. Adjustable components (seats, mirrors, steering wheel)

 CAUTION

■ Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

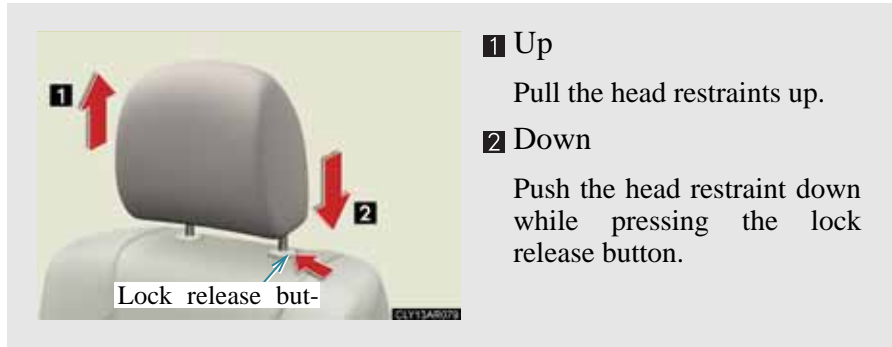

1  
Before driving

### ■ Removing the head restraints



Pull the head restraint up while pressing the lock release button.

### ■ Adjusting the height of the head restraints (front seats)



Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

### ■ Adjusting the rear seat head restraints

Always raise the head restraints to the uppermost lock position during use.

#### 1-4. Adjustable components (seats, mirrors, steering wheel)

##### CAUTION

###### ■ Head restraint precautions

Observe the following precautions regarding the head restraints.  
Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.


Make sure that all occupants are wearing their seat belts before driving the vehicle.

■ Correct use of the seat belts



- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.


■ Fastening and releasing the seat belt

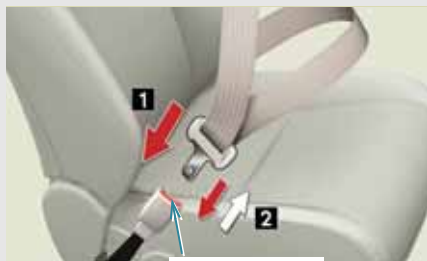

- 1 To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- 2 To release the seat belt, press the release button.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

### ■ Adjusting the seat belt shoulder anchor height (front seats)

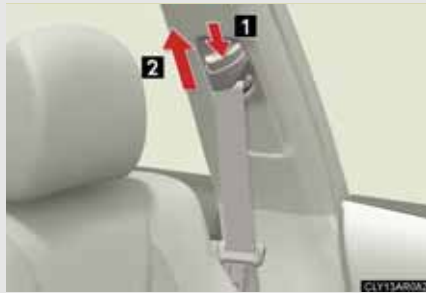

**1** Push the seat belt shoulder anchor down while pressing the release button.

**2** Push the seat belt shoulder anchor up.


Move the height adjuster up and down as needed until you hear a click.

### Seat belt comfort guide (outside rear seats)

If the shoulder belt sits close to a person's neck, use the seat belt comfort guide.



Pull the comfort guide from the pocket.

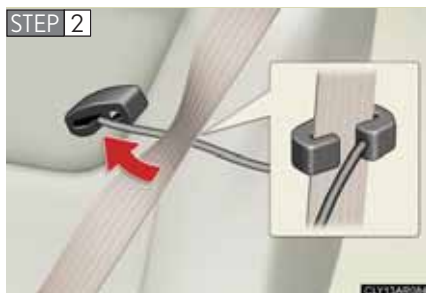

Slide the belt past the slot of the guide.

The elastic cord must be behind the seat belt.

## 1-4. Adjustable components (seats, mirrors, steering wheel)



Buckle the seat belt and position it comfortably.

### Seat belt pretensioners (front and outside rear seats)



The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.

### Pre-crash seat belts (front seats of vehicles with a pre-crash safety system)

If the pre-crash sensor detects that a collision is unavoidable, the pre-crash safety system will retract the seat belt, thus enhancing the effectiveness of the seat belt pretensioner in a crash.

The same will happen if the driver makes an emergency braking or loses control of the vehicle. (→P. 288)


1

Before driving

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. To allow the belt to extend, retract the belt and then pull it slowly.

■ Pregnant women

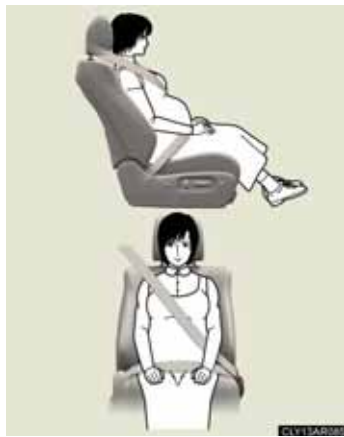

Obtain medical advice and wear the seat belt in the proper way. (→P. 107)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the round part of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way.

■ Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 158)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 107 regarding seat belt usage.

■ Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, for seat belt replacement or installation.

 CAUTION

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failing to do so may cause death or serious injury.

■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

■ When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

#### 1-4. Adjustable components (seats, mirrors, steering wheel)

##### CAUTION

###### ■ Seat belt pretensioners

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

###### ■ Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and tab are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. Inappropriate handling of the pretensioner may prevent it from operating properly, resulting in death or serious injury.

###### ■ Using a seat belt comfort guide

Failure to observe the following precautions could reduce the effectiveness of the seat belt in an accident, causing death or serious injury.

- Make sure the belt is not twisted and that it lies flat. The elastic cord must be behind the belt and the guide must be on the front.
- To reduce the chance of injury in case of a sudden stop, sudden swerve or accident while driving, remove and store the comfort guide in its pocket when it is not in use.
- Always make sure the shoulder belt is positioned across the center of the shoulder. The belt should be kept away from the neck, and should not fall off the shoulder.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

The steering wheel can be adjusted to a comfortable position.

Operating the switch moves the steering wheel in the following directions:



- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

1

Before driving

### Auto tilt away



When the “POWER” switch is turned off, the steering wheel returns to its stowed position by moving up and away to enable easier driver entry and exit.

Turning the “POWER” switch to ACCESSORY or ON mode will return the steering wheel to the original position.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

- The steering wheel can be adjusted when

The “POWER” switch is in ACCESSORY or ON mode\*.

\*: Vehicles with driving position memory: If the driver's seat belt is fastened, the steering wheel can be adjusted regardless of “POWER” switch mode.

- Automatic adjustment of the steering position (vehicles with driving position memory)

A desired steering position can be entered to memory and recalled automatically by the driving position memory. (→P. 99)

- Notes for the auto tilt away function (vehicles with driving position memory)

The auto tilt away function can only operate when the “POWER” switch has been turned off, the driver seat belt has been unfastened and the driver’s seat movement (→P. 617) is in a setting other than off.

When the driver fastens the seat belt again, the steering wheel will return to the original position. (→P. 102)

### CAUTION


- Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

Glare from the headlights of vehicles behind can be reduced by using the following functions.


■ Manual anti-glare inside rear view mirror (if equipped)

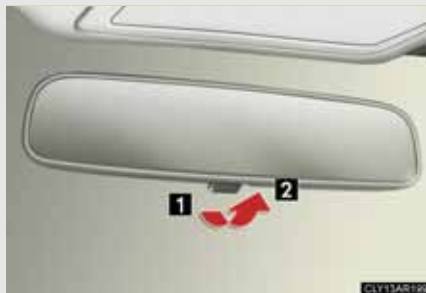

- 1 Normal position
- 2 Anti-glare position

■ Auto anti-glare inside rear view mirror (if equipped)

In automatic mode, sensors are used to detect the headlights of vehicles behind and automatically reduced.

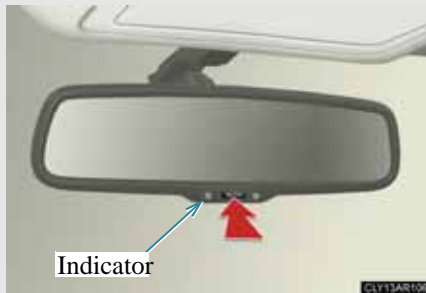


Turns automatic mode on/off

The indicator comes on when automatic mode is turned on.

The mirror will revert to automatic mode each time the “POWER” switch is turned to ON mode.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

### Adjusting the height of rear view mirror

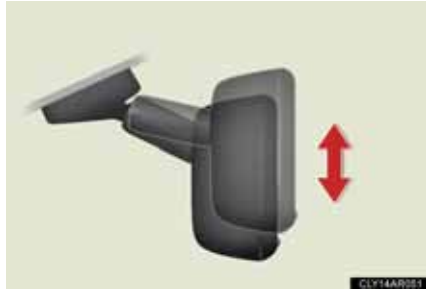

Adjust the height of the rear view mirror by moving it up and down.

- To prevent sensor error (vehicles with auto anti-glare inside rear view mirror)



To ensure that the sensors operate properly, do not touch or cover them.

#### CAUTION

##### ■ Caution while driving

Do not adjust the position of the mirror while driving.  
Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

## 1-4. Adjustable components (seats, mirrors, steering wheel)

Mirror angle can be adjusted using the switch.

### STEP 1



To select a mirror to adjust, press the switch.

- 1** Left
- 2** Right

Pressing the same switch again will put the switch in neutral.

### STEP 2



To adjust the mirror, press the switch.

- 1** Up
- 2** Right
- 3** Down
- 4** Left

1

Before driving

### Manually folding and extending the mirrors



Push the mirror back in the direction of the vehicle's rear.

### Automatically folding and extending the mirrors (if equipped)

#### ■ Using the switch



Press the switch to fold the mirrors.

Press it again to return them.

#### ■ Setting automatic mode



Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

Press the “AUTO” switch to set automatic mode.

The indicator will come on.

---

#### ■ Mirror angle can be adjusted when

The “POWER” switch is in ACCESSORY or ON mode.

#### ■ Linked mirror function when reversing

The right and left outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. This function only operates when either the “L” or “R” mirror select switch is selected.

#### ■ When the mirrors are fogged up

Turn on the mirror defoggers to defog the mirrors. (→P. 330)

## 1-4. Adjustable components (seats, mirrors, steering wheel)

- Automatic adjustment of the mirror angle (vehicles with driving position memory)

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P. 99)

- Auto anti-glare function (if equipped)

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P. 115)

### CAUTION

- When driving the vehicle

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

- When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

- When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

1

Before driving

## 1-5. Opening and closing the windows and moon roof Power windows

The power windows can be opened and closed using the switches.  
Operating the switch moves the windows as follows:



- 1 Closing
- 2 One-touch closing\*
- 3 Opening
- 4 One-touch opening\*

\*: Pushing the switch in the opposite direction will stop window travel partway.

1  
Before driving

### Window lock switch



Press the switch to lock the passenger window switches.

The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the power window switches on the driver's side even if the lock switch is on.

- The power windows can be operated when

The “POWER” switch is in ON mode.

- Operating the power windows after turning the hybrid system off

The power windows can be operated for approximately 45 seconds even after the “POWER” switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.

- Jam protection function

If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.

- When the power window does not close normally

If the jam protection function is operating abnormally and a window cannot be closed, perform the following operations using the power window switch on the relevant door.

- After stopping the vehicle, the window can be closed by holding the power window switch in the one-touch closing position while the “POWER” switch is turned to ON mode.
- If the window still cannot be closed even by carrying out the operation explained above, initialize the function by performing the following procedure.

**STEP 1** Hold the power window switch in the one-touch closing position. Continue holding the switch for a further 6 seconds after the window has closed.

**STEP 2** Hold the power window switch in the one-touch opening position. Continue holding the switch for a further 2 seconds after the window has opened completely.

**STEP 3** Hold the power window switch in the one-touch closing position once again. Continue holding the switch for a further 2 seconds after the window has closed.

If you release the switch while the window is moving, start again from the beginning.

If the window continues to close but then re-open slightly even after performing the above procedure correctly, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Door lock linked window operation

- The power windows can be opened and closed using the mechanical key. (→P. 583)
- The power windows can be opened and closed using the wireless remote control if customized at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. (→P. 75)

■ Window close suggestion mode

If the “POWER” switch is turned off with the windows open, a suggestion to close all the windows is shown on the multi-information display. (→P. 224)

■ When the 12-volt battery is disconnected

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the battery.

■ Customization

Settings (e.g. linked door lock operation) can be changed. (Customizable features →P. 617)

 CAUTION

■ Closing the windows

Observe the following precautions.  
Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows.  
Closing a power window on someone can cause serious injury, and in some instances, even death.

■ Jam protection function


- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the window fully closes. Also, the jam protection does not operate when the power window switch is pulled up continually to close the windows.

## 1-5. Opening and closing the windows and moon roof

### Moon roof\*

Use the overhead switches to open and close the moon roof and tilt it up and down.

#### ■ Opening and closing

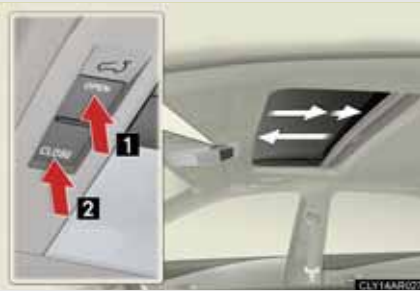

##### **1** Opens the moon roof\*

The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

##### **2** Closes the moon roof\*

\*: Lightly press either of the moon roof switches to stop the moon roof partway.

#### ■ Tilting up and down



##### **1** Tilts the moon roof up\*

##### **2** Tilts the moon roof down\*

\*: Lightly press either of the moon roof switches to stop the moon roof partway.

\*: If equipped

- 
- The moon roof can be operated when  
The “POWER” switch is in ON mode.
  - Operating the moon roof after turning the hybrid system off  
The moon roof can be operated for approximately 45 seconds even after the “POWER” switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.
  - Jam protection function  
If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.
  - Sunshade  
The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.
  - Door lock linked moon roof operation
    - The moon roof can be opened and closed using the mechanical key.  
(→P. 583)
    - The moon roof can be opened and closed using the wireless remote control if customized at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. \* (→P. 75)
- \*: This function cannot be customized unless power window operation using the wireless remote control is enabled.

## 1-5. Opening and closing the windows and moon roof

### ■ When the moon roof does not close normally

Perform the following procedure:

- If the moon roof closes but then re-opens slightly

**STEP 1** Stop the vehicle.

**STEP 2** Press and hold the “CLOSE” switch.\*<sup>1</sup>

The moon roof will close, reopen and pause for approximately 10 seconds.\*<sup>2</sup> Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

**STEP 3** Check to make sure that the moon roof is completely closed and then release the switch.

- If the moon roof tilts down but then tilts back up

**STEP 1** Stop the vehicle.

**STEP 2** Press and hold the “UP” switch\*<sup>1</sup> until the moon roof moves into the tilt up position and stops.

**STEP 3** Release the “UP” switch once and then press and hold the “UP” switch again.\*<sup>1</sup>

The moon roof will pause for approximately 10 seconds in the tilt up position.\*<sup>2</sup> Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.

**STEP 4** Check to make sure that the moon roof is completely closed and then release the switch.

\*<sup>1</sup>: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

\*<sup>2</sup>: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the “CLOSE” or “UP” switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### ■ Customization

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features →P. 617)

 CAUTION

■ Opening the moon roof

Observe the following precautions.

Failing to do so may cause death or serious injury.

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ Closing the moon roof

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.
- Do not allow children to operate the moon roof.  
Closing the moon roof on someone can cause death or serious injury.

■ Jam protection function

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes. Be careful not to catch fingers or anything else.

## 1-5. Opening and closing the windows and moon roof Electronic sunshade\*

Use the overhead switches to open and close the electronic sunshade.

### ■ Opening and closing



- 1 Opens the electronic sunshade\*
- 2 Closes the electronic sunshade\*

\*: Lightly press either of the switches to stop the electronic sunshade partway.

---

### ■ The electronic sunshade can be operated when

The “POWER” switch is in ON mode.

### ■ Jam protection function

If an object is detected between the electronic sunshade and the frame while closing, travel is stopped and the electronic sunshade opens slightly.

\*: If equipped

 CAUTION

■ Closing the electronic sunshade

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the electronic sunshade is being operated.
- Do not allow children to operate the electronic sunshade.  
Closing the electronic sunshade on someone can cause death or serious injury.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the electronic sunshade fully closes.

## 1-6. Refueling

### Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:


- Before refueling the vehicle

Turn the “POWER” switch off and ensure that all the doors and windows are closed.


- Opening the fuel tank cap



Press the opener to open the fuel filler door.

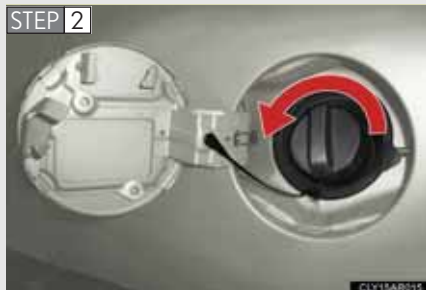


Turn the fuel tank cap slowly to open.

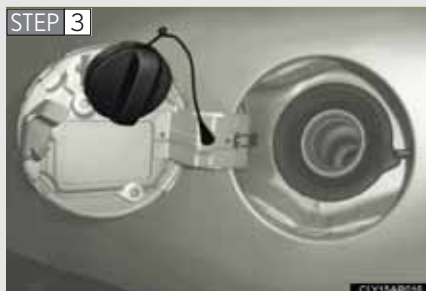

Hang the fuel tank cap on the back of the fuel filler door.

### Closing the fuel tank cap

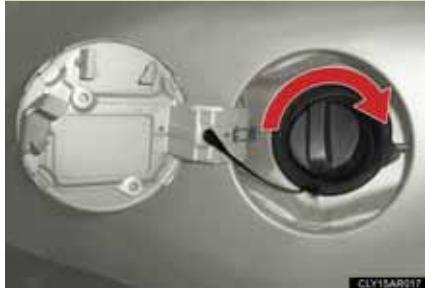

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

1

Before driving

#### ■ Use of ethanol blended gasoline in a gasoline engine

Lexus allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a suitable Research Octane Number. (→P. 603)

## 1-6. Refueling

### ■ If the fuel filler door opener is inoperable

**STEP 1** Lift the deck board up. (→P. 481)

**STEP 2** With a compact spare tire only:


Remove the spare tire cover. (→P. 481)

**STEP 3** Remove the 12-volt battery cover. (→P. 481)



Pull the lever.

The lever can be used to open the fuel filler door if the fuel filler door cannot be opened using the inside switch.

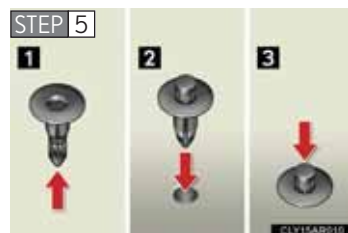

Install the clips.

**⚠ CAUTION****■ When refueling the vehicle**

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.  
Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.  
Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.  
This may cause static electricity to build up, resulting in a possible ignition hazard.

**■ When refueling**

Securely insert the fuel nozzle into the fuel filler neck. If fuel is added with the nozzle slightly lifted away from the fuel filler neck, the automatic shut off function may not operate, resulting in fuel overflowing from the tank.

**■ When replacing the fuel cap**

Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

## 1-6. Refueling

### NOTICE

#### ■ Refueling

Do not spill fuel during refueling.

Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

## 1-7. Theft deterrent system Immobilizer system

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if the key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.



The indicator light flashes after the “POWER” switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the “POWER” switch has been turned to ACCESSORY or ON mode

1  
Before driving

### ■ System maintenance

The vehicle has a maintenance-free type immobilizer system.

### ■ Conditions affecting operation

Depending on surrounding environment and conditions, the immobilizer system may not operate properly. This may prevent the hybrid system from starting.

(→P. 63)

## 1-7. Theft deterrent system

### ■ Certification for Immobilizer

This system meets the certification requirements of Radio Law.

# TOYOTA

## TOYOTA MOTOR CORPORATION

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571(Head Office)  
or 471-8572(Research & Development Group) JAPAN  
TEL : (0565)28-2121

### R&TTE Declaration of Conformity

We,

Manufacturer's Name: TOYOTA MOTOR CORPORATION  
Manufacturer's Address: 1, Toyota-cho, Toyota, Aichi, 471-8572 Japan


hereby declare under our sole responsibility that the product:

Product Name: Immobilizer  
Product Model: TMIMB-1


to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is compliant with the following standards and/or other normative documents:

- Health & safety requirements: EN60950-1:2001
- EMC requirements: EN301 489-1 V1.4.1 & EN301 489-3 V1.4.1
- Effective use of radio spectrum: EN300 330-2 V1.1.1

Supplementary information:

* CE mark	
* Member states intended for use	EU and EFTA

Date: September 17, 2004

Signature:   
Tomoaki Katayama

English

Hereby, Toyota Motor Corporation, declares that this TMIMB-1 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Finnish

Toyota Motor Corporation vakuuttaa täten että TMIMB-1 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Dutch

Hierbij verklaart Toyota Motor Corporation dat het toestel TMIMB-1 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

French

Par la présente Toyota Motor Corporation déclare que l'appareil TMIMB-1 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Swedish

Härmed intygar Toyota Motor Corporation att denna TMIMB-1 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Danish

Undertegnede Toyota Motor Corporation erklærer herved, at følgende udstyr TMIMB-1 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

German

Hiermit erklährt Toyota Motor Corporation, dass sich das Gerät TMIMB-1 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

Greek

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Toyota Motor Corporation ΔΗΛΩΝΕΙ ΟΤΙ ΤΜΙΜΒ-1 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

## 1-7. Theft deterrent system

### Italian

Con la presente Toyota Motor Corporation dichiara che questo TMIMB-1 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

### Spanish

Por medio de la presente Toyota Motor Corporation declara que el TMIMB-1 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

### Portuguese

Toyota Motor Corporation declara que este TMIMB-1 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

### Maltese

Hawnhekk, Toyota Motor Corporation, jiddikjara li dan TMIMB-1 jikkonforma mal-htíjjiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.

### Estonian

Käesolevaga kinnitab Toyota Motor Corporation seadme TMIMB-1 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

### Hungarian

Alulírott, Toyota Motor Corporation nyilatkozom, hogy a TMIMB-1 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

### Slovak

Toyota Motor Corporation týmto vyhlasuje, že TMIMB-1 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

### Czech

Toyota Motor Corporation tímto prohlašuje, že tento TMIMB-1 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

### Slovenian

Toyota Motor Corporation izjavlja, da je ta TMIMB-1 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

## Lithuanian

Šiuo Toyota Motor Corporation deklaruoja, kad šis TMIMB-1 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

## Latvian

Ar šo Toyota Motor Corporation deklarē, ka TMIMB-1 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

## Polish

Niniejszym Toyota Motor Corporation oświadcza, że TMIMB-1 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

## Icelandic

Hér með lýsir Toyota Motor Corporation yfir því að TMIMB-1 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

## Norwegian

Toyota Motor Corporation erklærer herved at utstyret TMIMB-1 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

## Montenegro

Ovim, Toyota Motor Corporation, izjavljuje da ovaj TMIMB-1 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

1

Before driving

 NOTICE

■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

## 1-7. Theft deterrent system

### Double locking system

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.



Vehicles employing this system have labels on the window glass of both front doors.


#### Setting the double locking system

Turn the “POWER” switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function:


Touch the lock sensor on the outside door handle twice within 5 seconds.

Using the wireless remote control:

Press  twice within 5 seconds.

#### Canceling the double locking system

Using the entry function: Hold the outside door handle or press the back door opener button. (→P. 59)

Using the wireless remote control: Press  .

#### CAUTION

##### ■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

## 1-7. Theft deterrent system

### Alarm

The system sounds the alarm and flashes the lights when forcible entry is detected.

#### ■ Triggering of the alarm

The alarm is triggered in the following situations when the alarm is set:

- A locked door is unlocked or opened in any way other than using the entry function or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.)
- The tilt sensor detects a change of vehicle inclination.
- Some models: The back door window is tapped or broken.

#### ■ Setting the alarm system



Close the doors and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

#### ■ Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarms:

- Unlock the doors using the entry function or the wireless remote control.
- Start the hybrid system. (The alarm will be deactivated or

### Intrusion sensor and tilt sensor (if equipped)

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

- The intrusion sensor detects an intruder or movement in the vehicle.
- The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away.

The intrusion sensor and tilt sensor can be canceled using the cancel switch.

### Canceling the intrusion sensor and tilt sensor (if equipped)



Turn the “POWER” switch off and press the intrusion sensor and tilt sensor cancel switch.

A message will be shown on the multi-information display in the instrument cluster.

The intrusion sensor and tilt sensor will revert to on each time the “POWER” switch is turned to ON mode.

#### ■ System maintenance

The vehicle has a maintenance-free type alarm system.

■ Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

■ Triggering of the alarm

The alarm may be triggered in the following situations: (Stopping the alarm deactivates the alarm system.)



- The doors are unlocked using the mechanical key.



- A person inside the vehicle opens a door or the hood.



- The 12-volt battery is disconnected.

1

Before driving

## 1-7. Theft deterrent system

### ■ Alarm-operated door lock

- When the alarm is operating, the doors are locked automatically to prevent intruders.
- Do not leave the key inside the vehicle when the alarm is operating, and make sure the key is not inside the vehicle when recharging or replacing the 12 volt battery.

### ■ Canceling and automatic re-enabling of the intrusion sensor and tilt sensor

- The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
- After the intrusion sensor and tilt sensor are canceled, pressing the “POWER” switch or unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor and tilt sensor.
- When the alarm system is set again, the intrusion sensor and tilt sensor will be set.

### ■ Intrusion sensor considerations

The sensor may trigger the alarm in the following situations:



- Persons or pets are in the vehicle.



- A window or the moon roof is open.

In this case, the sensor may detect the following:

- Wind or the movement of objects such as leaves and insects inside the vehicle
- Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
- The movement of people outside the vehicle



- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.



- The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.



- Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.

- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.

1

Before driving

## 1-7. Theft deterrent system

### ■ Tilt sensor detection considerations

The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.
- Cargo is loaded onto or unloaded from a roof luggage carrier.

### ⚠ NOTICE

#### ■ To ensure the intrusion sensor and tilt sensor functions correctly



- To ensure that the sensors operate properly, do not touch or cover them.



- Do not spray air fresheners or other products directly into the sensor holes.

#### ■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

## 1-8. Safety information

### Correct driving posture

Drive in a good posture as follows:



- 1** Sit upright and well back in the seat. (→P. 91)
- 2** Adjust the position of the seat forward or backward to ensure the pedals can be reached and easily depressed to the extent required. (→P. 91)
- 3** Adjust the seatback so that the controls are easily operable. (→P. 91)
- 4** Adjust the tilt and telescopic positions of the steering wheel downward so the airbag is facing your chest. (→P. 113)
- 5** Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 105)
- 6** Wear the seat belt cor-

1  
Before driving

 CAUTION

■ While driving

- Do not adjust the position of the driver's seat.  
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.  
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint, increasing the risk of death or serious injury to the driver or passenger.
- Do not place anything under the front seats.  
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident, resulting in death or serious injury. The adjustment mechanism may also be damaged.


■ Adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.  
Fingers or hands may become jammed in the seat mechanism.

## 1-8. Safety information

### SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

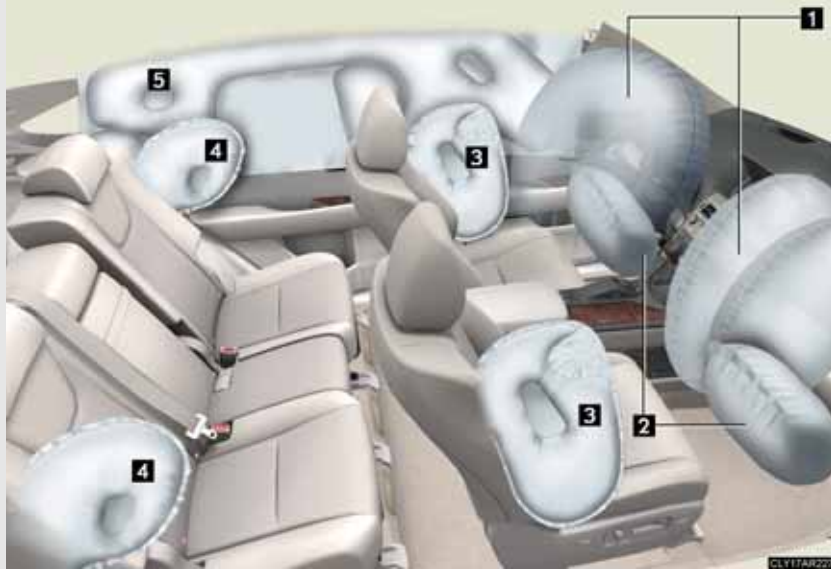

#### ► SRS front airbags

##### 1 SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

##### 2 SRS knee airbags

Can help provide driver and front passenger protection

#### ► SRS side and curtain shield airbags

##### 3 Front SRS side airbags

Can help protect the torso of the front seat occupants

##### 4 Rear SRS side airbags

Can help protect the torso of occupants in the rear outer seats


##### 5 SRS curtain shield airbags

Can help protect primarily the head of occupants in the outer

1

Before driving

SRS airbag system components

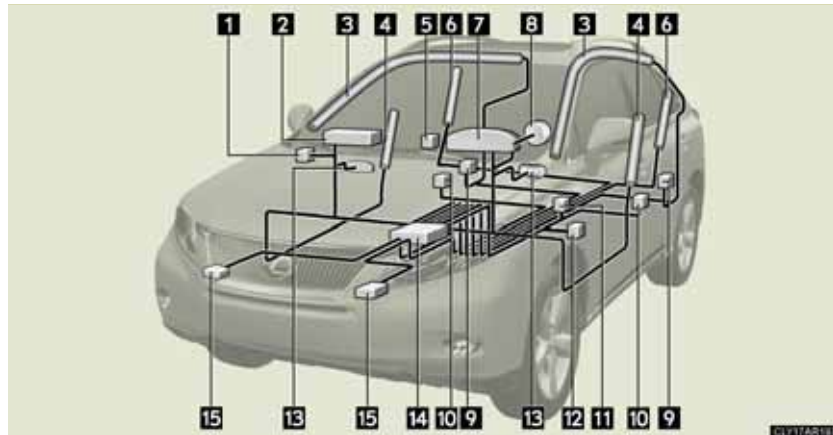

- |                                           |                                                  |
|-------------------------------------------|--------------------------------------------------|
| <b>1</b> Airbag manual on-off switch      | <b>9</b> Curtain shield airbag sensors           |
| <b>2</b> Front passenger airbag           | <b>10</b> Side and curtain shield airbag sensors |
| <b>3</b> Curtain shield airbags           | <b>11</b> Driver's seat belt buckle switch       |
| <b>4</b> Front side airbags               | <b>12</b> Driver's seat position sensor          |
| <b>5</b> Passenger airbag indicator light | <b>13</b> Knee airbags                           |
| <b>6</b> Rear side airbags                | <b>14</b> Airbag sensor assembly                 |
| <b>7</b> SRS warning light                | <b>15</b> Front airbag sensors                   |
| <b>8</b> Driver airbag                    |                                                  |

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and an airbag sensor.

In certain types of severe frontal or side impacts, the SRS airbag system triggers the airbag inflators. A chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

- 
- If the SRS airbags deploy (inflate)
    - Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
    - A loud noise and white powder will be emitted.
    - Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the seats, and parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
    - The windshield may crack.

- SRS airbag deployment conditions (SRS front airbags)

- The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or if the vehicle is involved in an underride collision (e.g. a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck, etc.).

- It is possible that in some collisions where the forward deceleration of the vehicle is very close to the designed threshold level, the SRS front airbags and the seat belt pretensioners may not activate together.


## 1-8. Safety information

### ■ SRS airbag deployment conditions (SRS side airbags and curtain shield airbags)

The SRS side airbags and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).

### ■ Conditions under which the SRS airbags may deploy (inflate), other than a collision (SRS front airbags)

The SRS front airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

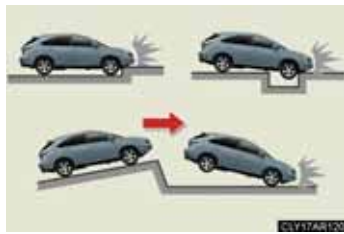

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or vehicle falling

### ■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags are generally not designed to inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.



- Collision from the side
- Collision from the rear
- Vehicle rollover

■ Types of collisions that may not deploy the SRS airbags (SRS side airbags and curtain shield airbags)

The SRS side airbag and curtain shield airbag system may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.



- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

The SRS side airbags and curtain shield airbags are not generally designed to inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.



- Collision from the front
- Collision from the rear
- Vehicle rollover


1  
Before driving

## 1-8. Safety information

### ■ When to contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional

In the following cases, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

- Any of the SRS airbags has been inflated.

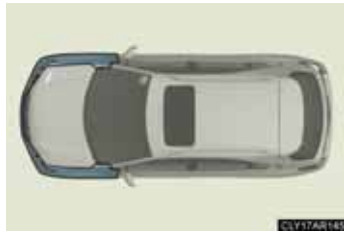

- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS airbags to inflate.



- A portion of the doors is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side airbags and curtain shield airbags to inflate.



- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.



- The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.
- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked, or otherwise damaged.

 CAUTION

## ■ SRS airbag precautions

Observe the following precautions regarding the SRS airbags.  
Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.  
The SRS airbags are supplemental devices to be used with the seat belts.

- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat.  
Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

 CAUTION

■ SRS airbag precautions

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 158)



- Do not sit on the edge of the seat or lean against the dashboard.
- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.

**⚠ CAUTION****■ SRS airbag precautions**

- Do not lean against the door, the roof side rail or the front, side and rear pillars.



- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.



- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad or lower portion of the instrument panel. These items can become projectiles when SRS driver, front passenger and knee airbags deploy.



- Do not attach anything to areas such as the door, windshield glass, side door glass, front and rear pillars, roof side rail or assist grip.
- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.

1

Before driving

 CAUTION

■ SRS airbag precautions

- If a vinyl cover is put on the area where the SRS knee airbags will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components.  
Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

 CAUTION**■ Modification and disposal of SRS airbag system components**

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of snow plows, winches, etc. to the front grille (bull bars or kangaroo bar etc.)
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as an RF-transmitter or CD players
- Modifications to your vehicle for a person with a physical disability

1

Before driving

## Child restraint systems

Lexus strongly urges the use of child restraint systems.

### Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one to the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.  
General installation instructions are provided in this manual. (→P. 167)
- If child restraint system regulations exist in the country where you reside, please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for the child restraint system installation.
- Lexus recommends that you use a child restraint system which conforms to the regulation ECE No.44.

### Types of child restraints

Child restraint systems are classified into the following 5 groups according to the regulation ECE No.44.

Group 0: Up to 10 kg (22 lb.) (0 - 9 months)

Group 0<sup>+</sup>: Up to 13 kg (28 lb.) (0 - 2 years)

Group I: 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)

Group II: 15 to 25 kg (34 to 55 lb.) (4 years - 7 years)

Group III: 22 to 36 kg (49 to 79 lb.) (6 years - 12 years)

In this owner's manual, the following popular 3 types of child restraint systems that can be secured with the seat belts are explained:

1

Before driving

## 1-8. Safety information

### ► Baby seat



Equal to Group 0 and 0<sup>+</sup> of ECE No.44

### ► Child seat



Equal to Group 0<sup>+</sup> and I of ECE No.44

### ► Junior seat



Equal to Group II and III of ECE No.44

**Child restraint system suitability for various seating positions**

Information provided in the table shows your child restraint system suitability for various seating positions.

Seating posi-  Mass groups	Front seat			Rear seat	
	Passenger seat			Outboard	Center
	Standard	Airbag manual on-off switch			
		ON	OFF		
0 Up to 10 kg (22 lb.) (0 - 9 months)	X Never put	X Never put	U	U	L1
0 <sup>+</sup> Up to 13 kg (28 lb.) (0 - 2 years)	X Never put	X Never put	U	U	L1
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	Rear facing — X Never put	Rear facing — X Never put	U	U	L2
	Forward facing — UF	Forward facing — UF			
II, III 15 to 36 kg (34 to 79 lb.)	UF	UF		U	L3

1  
Before driving

## 1-8. Safety information

Key of letters inserted in the above table:

U: Suitable for “universal” category restraint system approved for the use in this mass group

UF: Suitable for forward-facing “universal” category restraint system approved for the use in this mass group

L1: Suitable for “LEXUS BABY-SAFE (0 to 13 kg [0 to 28 lb.])” approved for the use in this mass group

L2: Suitable for “LEXUS DUO+ (without ISOFIX, 9 to 18 kg [20 to 39 lb.])” approved for the use in this mass group

L3: Suitable for “LEXUS KID (15 to 36 kg [34 to 79 lb.])” approved for the use in this mass group

X: Not suitable seat position for children in this mass group

The child restraint systems mentioned in the table may not be available outside of the EU area.

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer and retailer.

### Child restraint system suitability for various seating positions (with ISOFIX rigid anchor)

Information provided in the table shows your child restraint system suitability for various seating positions.

Mass groups	Size class	Fixture	Vehicle ISOFIX positions
			Rear seat
Carrycot	F	ISO/L1	X
	G	ISO/L2	X
		(1)	X
0 Up to 10 kg (22 lb.)	E	ISO/R1	X
		(1)	X
0 <sup>+</sup> Up to 13 kg (28 lb.) (0 - 2 years)	E	ISO/R1	X
	D	ISO/R2	X
	C	ISO/R3	X
		(1)	X
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	D	ISO/R2	X
	C	ISO/R3	X
	B	ISO/F2	IUF
	B1	ISO/F2X	IUF
	A	ISO/F3	IUF
		(1)	X
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)		(1)	X

1  
Before driving

- (1) For the CRS which do not carry the ISO/XX size class identification (A to G) for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child restraint system(s) recommended for each position.

Key of letters inserted in the above table:

IUF: Suitable for ISOFIX forward-facing child restraint systems of universal category approved the use in this mass group.

X: ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or size class.

The child restraint systems mentioned in the table may not be available outside of the EU area.

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer and retailer.

■ When installing the child restraint system on the front passenger seat



When you have to use a child restraint system in the front passenger seat, adjust the seatback to the most upright position and adjust the seat to the uppermost position.

■ Selecting an appropriate child restraint system

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 107)

**!** CAUTION

■ Using a child restraint system

The use of a child restraint system not suitable for the vehicle may not properly secure the infant or child. It may result in death or serious injury (in the event of sudden braking or an accident).

■ Child restraint precautions

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior. This may cause death or serious injury to the child in the event of a sudden stop or an accident.
- Lexus strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

## 1-8. Safety information

### CAUTION

#### ■ Child restraint precautions

- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 178)  
In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.
- A forward-facing child restraint system may be allowed to be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top tether strap should not be used in the front passenger seat since there is no top tether strap anchor for the front passenger seat. Adjust the seatback as upright as possible and always move the seat as far back as possible because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop, sudden swerve or an accident.

#### ■ When children are in the vehicle

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

#### ■ When the child restraint system is not in use

- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment. This will prevent it from injuring passengers in the event of a sudden stop, sudden swerve or an accident.

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the seats using a seat belt or ISOFIX rigid anchors. Attach the top strap when installing a child restraint.



Installation with a seat belt  
(→P. 168)



ISOFIX rigid anchors (ISOFIX  
child restraint system)  
(→P. 172)

Lower anchors are provided for the outer rear seats. (Buttons displaying the location of the anchors are attached to the seats.)



Anchor brackets  
(for the top strap) (→P. 173)


An anchor bracket is provided for each rear seat.

1

Before driving

**Installing child restraints using a seat belt (child restraint lock function belt)**

**■ Rear-facing — Baby seat/child seat**

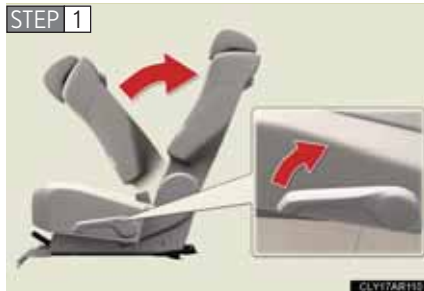

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (→P. 95)




Place the child restraint system on the rear seat facing the rear of the vehicle.



Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.


Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

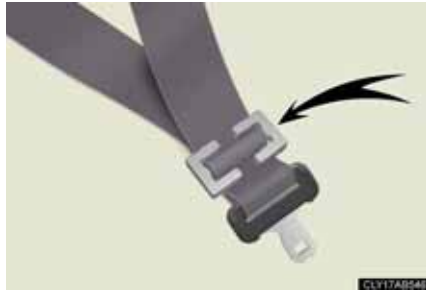

If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

After installing the child restraint system, rock it back and forth to ensure that it is installed securely.

■ Forward-facing — Child seat

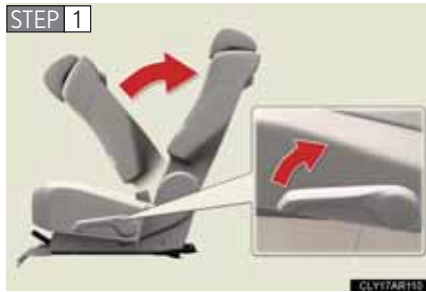

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (→P. 95)




Place the child restraint system on the seat facing the front of the vehicle.



Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.


Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

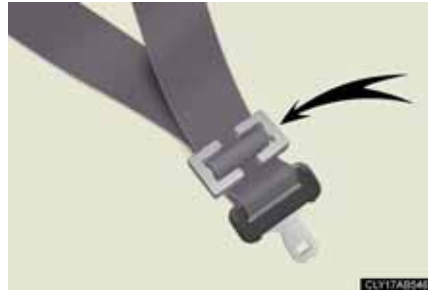

If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

After installing the child restraint system, rock it back and forth to ensure that it is installed securely.

■ Junior seat

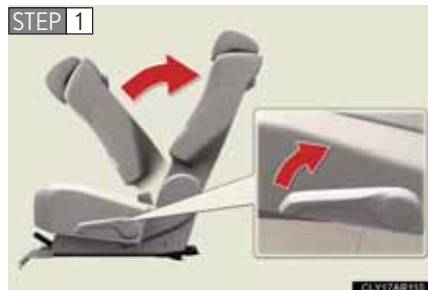

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (→P. 95)



Place the child restraint system on the seat facing the front of the vehicle.




Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

Check that the shoulder belt is correctly positioned over the child's shoulder, and that the lap belt is as low as possible. (→P. 107)


1

Before driving

**Installation with ISOFIX rigid anchors (ISOFIX child restraint system)**

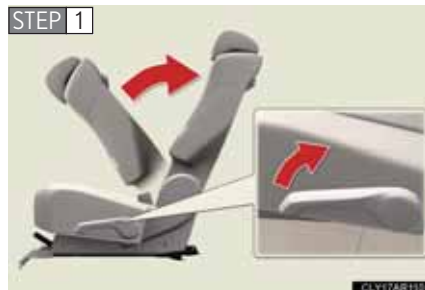

Fold the seatback while pulling the seatback angle adjustment lever. Return the seatback and secure it at the first lock position. (→P. 95)

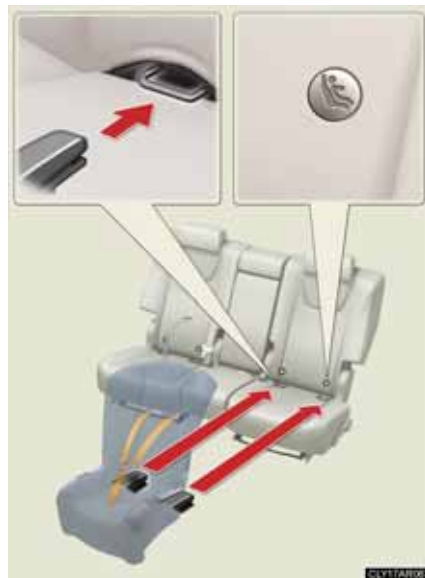

**STEP 2** Widen the gap between the seat cushion and seatback slightly.

**STEP 3** Latch the buckles onto the exclusive fixing bars.

If the child restraint has a top strap, the top strap should be latched onto the anchor bracket.

Child restraint systems with a top strap



Secure the child restraint system using the seat belt or ISO-FIX rigid anchors, and remove the head restraint.



Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top strap.

Make sure the top strap is securely latched.



Replace the head restraint and lift it up to the uppermost lock position.

1

Before driving

---

■ When restraining a child restraint system

Depending on the type of your child restraint system, you will need a locking clip to install a child restraint system properly. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Locking clip for child restraint system  
(Part No. 73119-22010)

**⚠ CAUTION****■ When installing a child restraint system**

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving or an accident.



- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles).

- Adjust the front passenger seat so that it does not interfere with the child restraint system.



- Only put a forward-facing child restraint system on the front seat when unavoidable.

When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible.

- When installing a child restraint system in the rear center seat, adjust both seat cushions to the same position and align both seatbacks at the same angle. The seatbacks must be adjusted to the same angle. Otherwise, the child restraint system cannot be securely restrained and this may cause death or serious injuries in the event of sudden braking, sudden swerving or an accident.

**⚠ CAUTION**

■ When installing a child restraint system



- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on.  
(→P. 178)

The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

- A warning label on the passenger side instrument panel reminds you not to install a rear-facing child restraint system on the front passenger seat.
- If child restraint system regulations exist in the country where you reside, please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for the child restraint system installation.
- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failing to do so may result in death or serious injury in the event of sudden braking, sudden swerving or an accident.
- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, choking or other serious injuries may result in death.  
If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.
- Ensure that the belt and tab are securely locked and the seat belt is not twisted.
- Push and pull the child restraint system from side to side and forward to be sure it is secure.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.

## 1-8. Safety information

### CAUTION

#### ■ To correctly attach a child restraint system to the anchors

When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of a sudden stop, sudden swerve or accident.

1

Before driving

1-8. Safety information

This system deactivates the front passenger airbag, front passenger knee airbag.

Only deactivate the airbags when using a child restraint system on the front passenger seat.

■ System location

▶ Vehicles with a navigation system



1 "PASSENGER AIR BAG" indicator

This indicator light turns on when the airbag system is on (only when the "POWER" switch is in ON mode).

▶ Vehicles without a navigation system



2 Airbag manual on-off switch

1

Before driving

## Deactivating the front seat passenger airbag and front passenger side airbag

### ▶ Vehicles with a navigation system



Insert the mechanical key into the cylinder and rotate to the “OFF” position.

The “OFF” indicator light turns on (only when the “POWER” switch is in ON mode).

### ▶ Vehicles without a navigation system



### ■ “PASSENGER AIR BAG” indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Neither “ON” nor “OFF” comes on.
- The indicator does not change when the airbag manual on-off switch is switched to “ON” or “OFF”.

 CAUTION

■ When installing a child restraint system

For safety reasons, always install the child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to “OFF”.

If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause death or serious injury.

■ When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to “ON”.

If it is left off, the airbag may not deploy in the event of an accident, which may result in death or serious injury.

1-8. Safety information

2-1. Driving procedures	2-4. Using other driving systems
Driving the vehicle..... 182	Cruise control ..... 243
Power (ignition) switch.... 193	Dynamic radar cruise control..... 247
Hybrid transmission..... 200	Lexus parking assist-sensor ..... 262
Turn signal lever ..... 208	Electronically modulated air suspension ..... 269
Parking brake ..... 209	Rear view monitor system ..... 276
Horn ..... 210	Driving assist systems ..... 280
2-2. Instrument cluster	Hill-start assist control..... 286
Gauges and meters ..... 211	Pre-Crash Safety system.. 288
Indicators and warning lights ..... 215	2-5. Driving information
Multi-information display 219	Utility vehicle precautions..... 296
Head-up display ..... 228	Cargo and luggage ..... 301
2-3. Operating the lights and windshield wipers	Winter driving tips ..... 304
Headlight switch ..... 233	Trailer towing (AWD models)..... 307
Fog light switch ..... 237	Trailer towing (2WD models) ..... 318
Windshield wipers and washer ..... 238	
Rear window wiper and washer ..... 241	
Headlight cleaner switch.. 242	

## 2-1. Driving procedures

### Driving the vehicle

The following procedures should be observed to ensure safe driving.

#### ■ Starting the hybrid system

→P. 195

#### ■ Driving

**STEP 1** With the brake pedal depressed, shift the shift lever to D.  
(→P. 203)

**STEP 2** Release the parking brake. (→P. 212)

**STEP 3** Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

#### ■ Stopping

**STEP 1** With the shift lever in D, depress the brake pedal.

**STEP 2** If necessary, set the parking brake.

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P. 203)

#### ■ Parking the vehicle

**STEP 1** With the shift lever in D, depress the brake pedal.

**STEP 2** Set the parking brake. (→P. 212)

**STEP 3** Shift the shift lever to P. (→P. 203)

If parking on a hill, block the wheels as needed.

**STEP 4** Press the “POWER” switch to stop the hybrid system.

**STEP 5** Lock the door, making sure that you have the electronic key on your person.

#### Starting off on a steep uphill

**STEP 1** Make sure that the parking brake is set and shift the shift lever to D.

**STEP 2** Gently depress the accelerator pedal.

**STEP 3** Release the parking brake.

---

**■ Driving in the rain**

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

**■ Breaking in your new Lexus**

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles):  
Avoid sudden stops.
- For the first 800 km (500 miles):  
Do not tow a trailer.
- For the first 2000 km (1200 miles):
  - Do not drive at extremely high speeds.
  - Avoid sudden acceleration.
  - Do not drive continuously in low gears.
  - Do not drive at a constant speed for extended periods.

**■ Drum-in-disc type parking brake system**

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, perform the bedding down operation.

**■ Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 603)

## 2-1. Driving procedures

### ■ For efficient use

- Shift the shift lever to D when driving.  
In the N position, the gasoline engine operates but electricity cannot be generated. The hybrid battery (traction battery) will discharge, requiring unnecessary engine power to recharge.
- Drive your vehicle smoothly.  
Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration.  
Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor acceleration. Battery power can be restored by driving with the accelerator pedal slightly released.
- Shift the shift lever to P when parking.  
In the N position, the hybrid battery (traction battery) does not recharge. Leaving the shift lever in the N position for an extended period of time may discharge the hybrid battery. The vehicle cannot run if the hybrid battery is discharged.

### ■ Eco-friendly driving



During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.

If the accelerator pedal is depressed more than necessary, the indicator will turn off. (→P. 213)

### ■ Customization

Setting of Eco Driving Indicator Light can be changed.  
(Customizable features →P. 617)

**⚠ CAUTION****■ When starting the vehicle**

Always keep your foot on the brake pedal while stopped with the hybrid system operating. This prevents the vehicle from creeping.

**■ When driving the vehicle**

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
  - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident that could result in death or serious injury.
  - When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
  - Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
  - Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). Because there is no engine noise, the pedestrians may misjudge the vehicle's movement.
- Do not drive the vehicle over or stop the vehicle near flammable materials.  
The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.  
Doing so may result in an accident or damage to the vehicle.
- If the smell of exhaust is noticed inside the vehicle, open the windows and check that the back door is closed. Large amounts of exhaust in the vehicle can cause driver drowsiness and an accident, resulting in death or a serious health hazard. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

## 2-1. Driving procedures

## 2-1. Driving procedures

 CAUTION

2

When driving

## 2-1. Driving procedures

- Do not shift the shift lever to P while the vehicle is moving.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to D while the vehicle is moving backward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Moving the shift lever to N while the vehicle is moving will disengage the hybrid system. Engine braking is not available with the hybrid system disengaged.
- During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.  
However, in the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 597
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.  
Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 203)
- When stopped on an incline, use the brake pedal and parking brake to prevent the vehicle from rolling backward or forward, causing an accident.
- Do not adjust the position of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.  
Doing so may result in a loss of vehicle control that can cause accidents, resulting in death or serious injury.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle, as this may result in death or serious injury.
- On vehicles with an electronically modulated air suspension, if you drive through water, such as when crossing shallow streams, first check the depth of the water and the firmness of the river bed. Put the vehicle in "HI" (high) mode with the height selector switch and then turn off the electronically modulated air suspension by pressing the height control off switch. Drive your vehicle at 30 km/h (19 mph) or lower.

 CAUTION

- When driving on slippery road surfaces
  - Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle, resulting in an accident.
  - Sudden changes in engine speed, such as engine braking caused by up-shifting and down-shifting, may cause the vehicle to skid, resulting in an accident.
  - After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected, resulting in an accident.
- When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.
- If you hear a squealing or scraping noise (brake pad wear indicators)

Have the brake pads checked and replaced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

The rotor damage can result if the pads are not replaced when needed.

Moderate levels of brake pad and disc wear allow enhanced front braking power. As a result, the discs may wear more quickly than conventional brake discs. Therefore, when replacing the brake pads, Lexus recommends that you also have the thickness of the discs measured.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

## 2-1. Driving procedures

### CAUTION

- When the vehicle is stopped
  - Do not depress the accelerator pedal unnecessarily.  
If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
  - Do not leave the vehicle with the hybrid system on for a long time.  
If such a situation cannot be avoided, park the vehicle in an open space and check that exhaust fumes do not enter the vehicle interior.
  - In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the “READY” indicator is on. Apply the parking brake as necessary.
  - If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
  - Avoid revving or racing the engine.  
Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

**⚠ CAUTION****■ When the vehicle is parked**

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.  
Doing so may result in the following:
  - Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
  - The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
  - Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the hybrid system and lock the vehicle.  
Do not leave the vehicle unattended while the hybrid system is operating.
- Do not touch the exhaust pipes while the hybrid system is operating or immediately after turning the hybrid system off.  
Doing so may cause burns.
- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.

## 2-1. Driving procedures

### CAUTION

#### ■ Exhaust gases

Exhaust gases include harmful carbon monoxide (CO) that is colorless and odorless. Inhaling exhaust gases may lead to death or a serious health hazard.

- If the vehicle is in a poorly ventilated area, stop the hybrid system. In a closed area, such as a garage, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.
- The exhaust system should be checked occasionally. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. Failure to do so may allow exhaust gases to enter the vehicle, resulting in death or a serious health hazard.

#### ■ When taking a nap in the vehicle

Always turn the hybrid system off. Otherwise, if you may accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

## 2-1. Driving procedures

### CAUTION

#### ■ When braking the vehicle

- When the brakes are wet, drive more cautiously.  
Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.
- If the power brake assist function does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.  
In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase.
- The brake system consists of 3 individual hydraulic systems; if one of the systems fails, the others will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. If this happens, do not continue to drive the vehicle. If the brake system warning light (red indicator) comes on together with buzzer sound while driving, immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ■ If the vehicle becomes stuck

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

### NOTICE

#### ■ When driving the vehicle

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

#### ■ When parking the vehicle

Always shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

 NOTICE

■ Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.  
Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

■ If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds.
- The vehicle will behave abnormally.

Information on what to do in case of a flat tire (→P. 565)

■ When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, hybrid transmission, etc., and, for AWD models, the rear electric motor (traction motor).
- Lubricant condition for the bearings and suspension joints (where possible) and the function of all joints, bearings, etc.

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes “POWER” switch modes.

■ Starting the hybrid system

**STEP 1** Check that the parking brake is set.

**STEP 2** Check that the shift lever is set in P.

**STEP 3** Firmly depress the brake pedal.

The “POWER” switch indicator will turn green. If the indicator does not turn green, the hybrid system cannot be started.

**STEP 4**



**STEP 5** Check that the “READY” indicator is on.

Press the “POWER” switch.

After a while, the “READY” indicator comes on with a beep sound.

The vehicle can move when the “READY” indicator is on even if the engine is stopped.

Continue depressing the brake pedal until the hybrid system is completely started.

The hybrid system can be started from any “POWER” switch mode.

■ Stopping the hybrid system

**STEP 1** Stop the vehicle.

**STEP 2** Shift the shift lever to P.

**STEP 3** Set the parking brake. (→P. 212)

**STEP 4** Press the “POWER” switch.

**STEP 5** Release the brake pedal and check that the indicator on the “POWER” switch is off.

■ Changing “POWER” switch modes

Modes can be changed by pressing the “POWER” switch with the brake pedal released. (The mode changes each time the switch is pressed.)



**1** Off\*

The emergency flashers can be used.

**2** ACCESSORY mode

Some electrical components such as the audio system can be used.

The “POWER” switch indicator turns amber.

**3** ON mode

All electrical components can be used.

The “POWER” switch indicator turns amber.

\*: If the shift lever is in a position other than P when turning off the hybrid system, the “POWER” switch will be turned to ACCESSORY mode, not to Off.

When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the “POWER” switch will not be turned off but instead be turned to ACCESSORY mode. Perform the following procedure to turn the switch off:

**STEP 1** Check that the parking brake is set.

**STEP 2** Shift the shift lever to P.

**STEP 3** Check that the indicator on the “POWER” switch is illuminated in amber and then press the “POWER” switch once.

**STEP 4** Check that the indicator on the “POWER” switch is off.

2

When driving

## 2-1. Driving procedures

---

### ■ Auto power off function

When the shift lever is in P, if the vehicle is left in ACCESSORY or ON mode with the hybrid system not operating for more than 20 minutes (ACCESSORY mode) or one hour (ON mode), the “POWER” switch will automatically turn off. However, this function cannot entirely prevent 12-volt battery discharge. Do not leave the vehicle with the “POWER” switch in ACCESSORY or ON mode for long periods of time when the hybrid system is not operating.

### ■ Operation of the “POWER” switch

When operating the “POWER” switch, one short, firm press is enough. If the switch is pressed improperly, the engine may not start or the “POWER” switch mode may not change. It is not necessary to press and hold the switch.

### ■ Sounds and vibrations specific to a hybrid vehicle

→P. 39

### ■ Electronic key battery depletion

→P. 64

### ■ When the ambient temperature is low, such as during winter driving conditions

It may take time until the “READY” indicator comes on.

### ■ Conditions affecting operation

→P. 63

### ■ Note for the entry function

→P. 66

- If the hybrid system does not start

The immobilizer system may not have been deactivated. (→P. 133)

- Steering lock

After turning the “POWER” switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the “POWER” switch again automatically cancels the steering lock.

- When the steering lock cannot be released



The green indicator light on the “POWER” switch will flash and a message will be shown on the multi-information display. Press the “POWER” switch again while turning the steering wheel left and right.

- Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the hybrid system. After about 2 seconds, the steering lock motor will resume functioning.

- When the “POWER” switch indicator flashes in amber

The system may be malfunctioning. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, immediately.

- If the “READY” indicator does not come on

If the “READY” indicator does not come on when you press the “POWER” switch with the shift lever in P and the brake pedal depressed, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

- If the hybrid system is malfunctioning

→P. 545

- If the electronic key battery is depleted

→P. 498

## 2-1. Driving procedures

### CAUTION

#### ■ When starting the hybrid system

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances.

Doing so may cause an accident resulting in death or serious injury.

#### ■ Caution while driving

If a hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.

#### ■ Stopping the hybrid system in an emergency

If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the "POWER" switch for more than 3 seconds.

However, do not touch the "POWER" switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control, but the power assist to these systems will be lost. This will make it more difficult to steer and brake, so you should pull over and stop the vehicle as soon as it is safe to do so.

 NOTICE

- To prevent the 12-volt battery discharged
  - Do not leave the “POWER” switch in ACCESSORY or ON mode for long periods of time without the hybrid system on.
  - If the indicator on the “POWER” switch is illuminated, the “POWER” switch is not off. When exiting the vehicle, always check that the “POWER” switch is off.
  - Do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the “POWER” switch will not be turned off but instead be turned to ACCESSORY mode. If the vehicle is left in ACCESSORY mode, 12-volt battery discharge may occur.
- When starting the hybrid system  
Do not depress the accelerator pedal unnecessarily.
- Symptoms indicating a malfunction with the “POWER” switch  
If the “POWER” switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

## 2-1. Driving procedures

Select a shift position appropriate for the driving conditions.

■ Shifting the shift lever



← While the “POWER” switch is in ON mode, depress the brake pedal and move the shift lever.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

■ Shift position purpose

Shift position	Function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving* <sup>1</sup>
S	S mode driving* <sup>2</sup> (→P. 207)

\*<sup>1</sup>:Shifting to the D position allows the system to select a gear suitable for the driving conditions. Setting the shift lever to the D position is recommended for normal driving.

\*<sup>2</sup>:Selecting shift ranges using S mode controls engine braking forces.

■ Selecting Eco drive mode

When the vehicle is driven in Eco drive mode, vehicle driving force and the operation of the air conditioning system (heating/cooling) is controlled to improve fuel efficiency.



1 Press the menu switch.

The multi-information display will change modes to electronic features control mode.

2 Press the “ENTER” switch upwards or downwards until “ECO MODE” appears.



Press the “ENTER” switch to change to “ON”.

The “ECO MODE” indicator will be displayed.

Each pressing of the switch turns Eco drive mode on and off.

■ Selecting snow mode

Use snow mode for accelerating and driving on slippery road surfaces such as snow.



1 Press the menu switch.

The multi-information display will change modes to electronic features control mode.

2 Press the “ENTER” switch upwards or downwards until “HYBRID SNOW” appears.



Press the “ENTER” switch to change to “ON”. The “Hybrid SNOW” indicator will be displayed.

Each pressing of the switch turns snow mode on and off.

Press the menu switch to

■ Selecting EV drive mode

In EV drive mode, the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas late at night or in indoor parking lots etc. without concern for noises and exhaust gas emissions.



- 1 Press the menu switch.

The multi-information display will change modes to electronic features control mode.

When the menu switch is pressed within 10 seconds of the hybrid system being started, "EV" will be the first mode displayed.

- 2 Press the "ENTER" switch upwards or downwards until "EV" appears.




Press the "ENTER" switch to change to "ON".

The EV drive mode indicator will be displayed.

Each pressing of the switch turns EV drive mode on and off

### Changing shift ranges in S mode

When the shift lever is in the S position, the shift lever can be operated as follows:

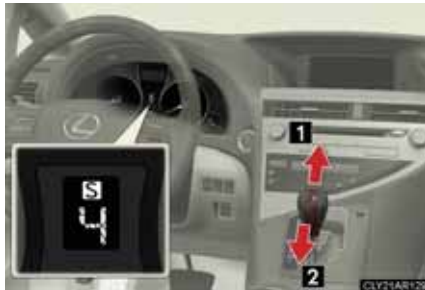

- 1 For upshifting
- 2 For downshifting

The initial shift range in S mode is set automatically to “5” or “4” according to vehicle speed.

#### ■ Shift ranges and their functions

- You can choose from 6 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine speed will also increase.

---

#### ■ Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. (→P. 322) To improve air conditioning performance, adjust the fan speed or turn off Eco drive mode.

#### ■ Automatic return to normal driving mode

If snow mode or EV drive mode is selected, the driving mode will automatically return to normal mode when the hybrid system is turned off.

## 2-1. Driving procedures

### ■ S mode

- When the shift range is “5” or lower, holding the shift lever toward “+” sets the shift range to “6”.
- To prevent the engine from over-revving, upshifting may automatically occur.

### ■ AI-SHIFT

AI-SHIFT automatically selects the optimal gear according to driver performance and driving conditions.

AI-SHIFT automatically operates when the shift lever is in the D position. (Shifting the shift lever to the S position cancels the function.)

The engine speed may remain high after releasing the accelerator pedal. This does not indicate a malfunction.

### ■ When driving with the cruise control or dynamic radar cruise control

Engine braking will not occur in S mode, even when downshifting to “5” or “4”. (→P. 243, 247)

### ■ If the shift lever cannot be shifted from P

→P. 581

### ■ If S does not come on even after shifting the shift lever to S

This may indicate a malfunction in the hybrid transmission system. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

(In this situation, the hybrid transmission will operate in the same as manner as when the shift lever is in D.)

### ■ Downshift restriction warning buzzer (S mode)

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (The buzzer will sound twice.)

## 2-1. Driving procedures

### ■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.  
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.  
The vehicle has been left in extremely low temperatures for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
- Vehicle speed is about 40 km/h (25 mph) or more.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

### ■ Automatic cancelation of EV drive mode

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound and the EV drive mode indicator will flash and go off.

- The hybrid battery (traction battery) becomes low.
- Vehicle speed becomes more than about 40 km/h (25 mph).
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

### ■ Possible driving distance when driving in EV drive mode

In EV drive mode, it is possible to drive up about 1 km (1/2 mile) if driving at a speed of about 40 km/h (25 mph) or less.  
(The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

### ■ Fuel economy

RX450h is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

## 2-1. Driving procedures

### CAUTION

#### ■ When driving on slippery road surfaces

Do not accelerate or shift gears suddenly.

Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.

#### ■ Caution while driving



When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

### NOTICE

#### ■ Hybrid battery (traction battery) charge precaution

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

The turn signal lever can be used to show the following intention of the driver:

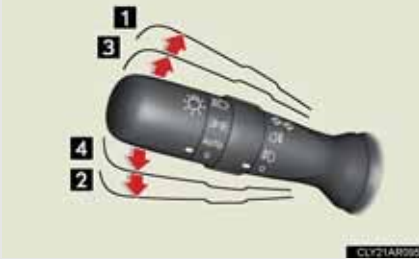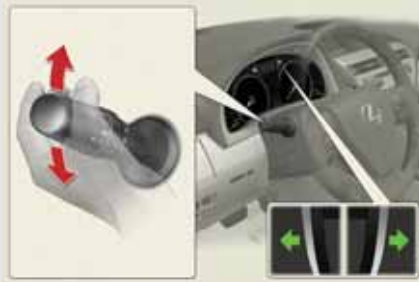

- 1 Right turn
- 2 Left turn
- 3 Lane change to the right (push and hold the lever partway)

The right hand signals will flash until you release the lever.

- 4 Lane change to the left (push and hold the lever partway)


The left hand signals will flash until you release the lever.

2

When driving

- Turn signals can be operated when  
The “POWER” switch is in ON mode.
- If the indicators flash faster than usual  
Check that a light bulb in the front or rear turn signal lights has not burned out.

## 2-1. Driving procedures

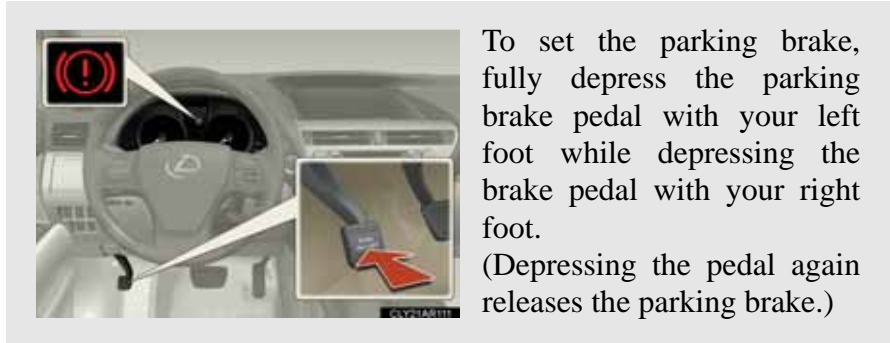

### ■ Usage in winter time

See “Winter driving tips” for parking brake usage in winter time. (→P. 304)

### NOTICE


#### ■ Before driving

Fully release the parking brake.

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

## 2-1. Driving procedures




To sound the horn, press on or close to the  mark.

2

When driving

## 2-2. Instrument cluster Gauges and meters

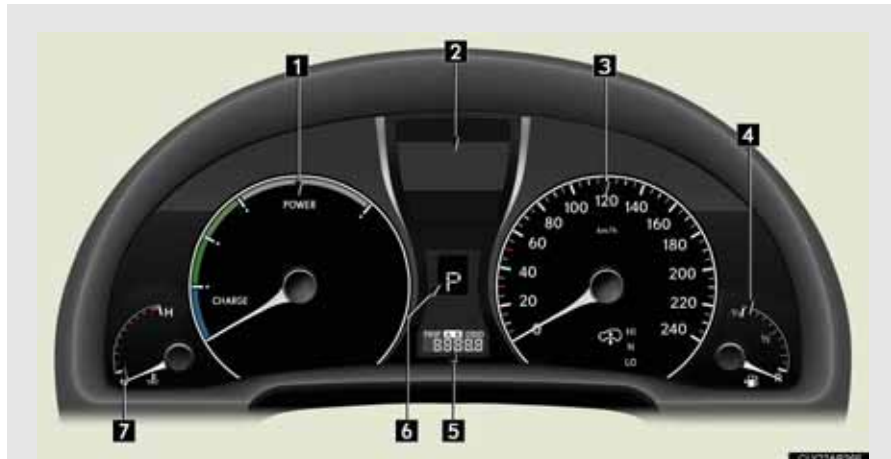

### 1 Hybrid System Indicator

Displays hybrid system power output and regenerative charging level

### 2 Multi-information display

→P. 219

### 3 Speedometer

Displays the vehicle speed

### 4 Fuel gauge

Displays the quantity of fuel remaining in the tank

### 5 Odometer and trip meter

Odometer: Displays the total distance the vehicle has been driven

Trip meter: Displays the distance the vehicle has been driven since the meter was last reset. Trip meters “A” and “B” can be used to record and display different distances independently.

### 6 Shift position and shift range display

→P. 202

### 7 Engine coolant temperature gauge

2

When driving

## 2-2. Instrument cluster

### Changing the display



Switches between odometer and trip meter displays. When the trip meter is displayed, pressing and holding the button will reset the trip meter.


### Instrument panel light control

The brightness of the instrument panel lights can be adjusted.



- 1** Darker
- 2** Brighter

- The meters and display illuminate when  
The “POWER” switch is in ON mode.
- Hybrid System Indicator

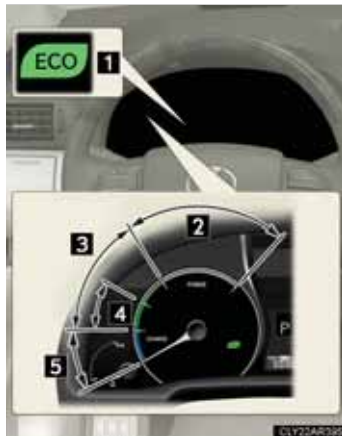

- 1** Eco Driving Indicator Light  
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.

Eco Driving Indicator Light will not operate in the following conditions:

- The shift position is in anything other than D.
- The driving mode is set to snow mode or EV drive mode.
- The vehicle speed is approximately 130 km/h (80 mph) or higher.

- 2** Power area  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

- 3** Eco area  
Shows that the vehicle is being driven in an Eco-friendly manner.

- 4** Hybrid Eco area  
Shows that gasoline engine power is not being used very often.  
The gasoline engine will automatically stop and restart under various conditions.

- 5** Charge area  
Shows that energy is being recovered via regenerative braking

2

When driving

## 2-2. Instrument cluster

- By keeping the indicator within Eco area, more Eco-friendly driving can be achieved.
  - Charge area indicates regeneration\* status. Regenerated energy will be used to charge the hybrid battery (traction battery).
- \*: When used in this manual, “regeneration” refers to the conversion of energy created by the movement of the vehicle into electrical energy.



### NOTICE

- To prevent damage to the engine and its components

The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 591)

## 2-2. Instrument cluster Indicators and warning lights

The indicator and warning lights on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

### ► Instrument cluster



### ► Center panel (without a navigation system)



### ► Center panel (with a navigation system)


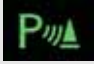
















2

When driving

■ Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

	Turn signal indicator (→P. 211)		Lexus parking assist-sensor indicator (→P. 262) (if equipped)
	Headlight high beam indicator (→P. 233)		*1 "AFS OFF" indicator (→P. 234)
	Tail light indicator (→P. 233)		*1,2 Slip indicator (→P. 281, 286)
	Front fog light indicator (→P. 237)		*1 VSC off indicator (→P. 282)
	Rear fog light indicator (→P. 237)		*1 Electronically modulated air suspension indicator (→P. 269) (if equipped)
	"Hybrid SNOW" indicator (→P. 205)		"READY" indicator (→P. 195)
	"ECO MODE" indicator (→P. 204)		*1 Eco Driving Indicator Light (→P. 184)
	Cruise control indicator (→P. 243, 247)		EV drive mode indicator (→P. 206)



(without navigation system)

SRS airbag on-off indicator (→P. 178)




(with navigation system)

SRS airbag on-off indicator (→P. 178)

\*1: These lights turn on when the “POWER” switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems. (→P. 540)

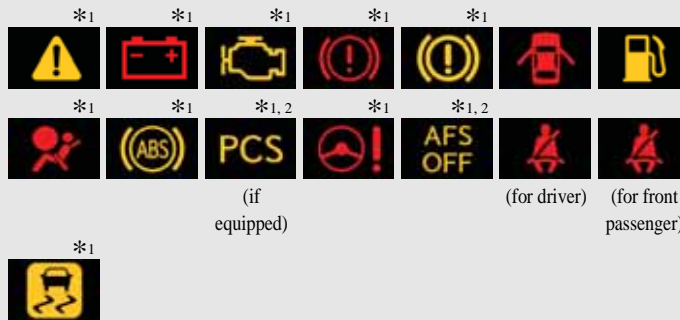

\*1: These lights turn on when the “POWER” switch is turned to ON mode to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

 CAUTION

■ If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS airbag warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately if this occurs.

## 2-2. Instrument cluster

# Multi-information display

The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

### ■ Multi-information switches



#### 1 Menu switch

Changes modes to electronic features control mode, customization mode or back to normal display mode.

#### 2 “ENTER” switch


Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization set-

2

When driving

## 2-2. Instrument cluster

### ■ Display contents

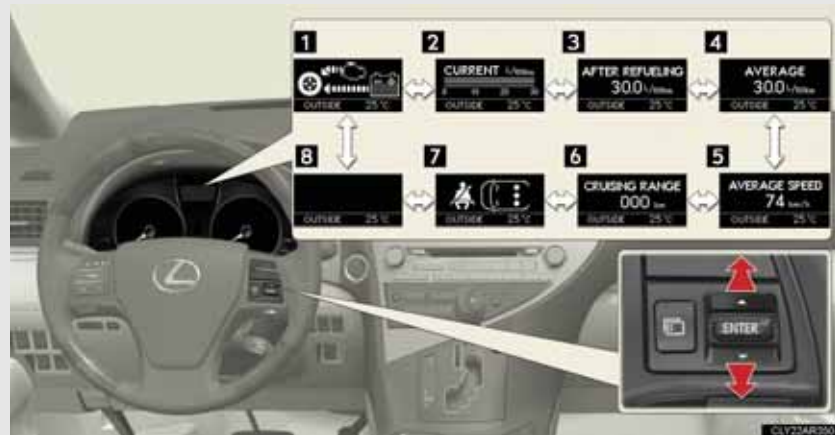

Trip information contents	Switching display items
<b>1</b> Energy monitor	Press the “ENTER” switch upwards or downwards.
<b>2</b> Current fuel consumption	
<b>3</b> Average fuel consumption after refueling	
<b>4</b> Average fuel consumption	
<b>5</b> Average vehicle speed	
<b>6</b> Cruising range	
<b>7</b> Rear seat belt reminder (if equipped)	
<b>8</b> - (off)	

Electronic features control contents	Setting electronic features controls
<b>1</b> Lexus parking assist-sensor (if equipped)	→P. 262
<b>2</b> Eco drive mode	→P. 204
<b>3</b> Snow mode	→P. 205
<b>4</b> AFS	→P. 234
<b>5</b> EV drive mode	→P. 206

2

When driving

## 2-2. Instrument cluster

Other contents	Details
Outside temperature	Displays the outside temperature
Window close suggestion mode (→P. 224)	If you forget to close a window before exiting the vehicle, a suggestion to close all the windows is shown.
Dynamic radar cruise control display (if equipped) (→P. 247)	Automatically displayed when using dynamic radar cruise control
Customization (→P. 617)	Settings of functions such as the door lock and light illumination time can be changed
Warning message (→P. 545)	Automatically displayed when a malfunction occurs in one of the vehicle's systems

### Trip information

- **Energy monitor**  
Displays the status of the hybrid system (→P. 46)
- **Current fuel consumption**  
Displays the current rate of fuel consumption
- **Average fuel consumption after refueling**  
Displays the average fuel consumption since the vehicle was last refueled  
Use the displayed average fuel consumption as a reference.
- **Average fuel consumption**  
Displays the average fuel consumption since the function was reset
  - The function can be reset by pushing the “ENTER” switch for longer than one second when the average fuel consumption is displayed.
  - Use the displayed average fuel consumption as a reference.
- **Average vehicle speed**  
Displays the average vehicle speed since the function was reset  
The function can be reset by pushing the “ENTER” switch for longer than one second when the average vehicle speed is displayed.
- **Cruising range**  
Displays the estimated maximum distance that can be driven with the quantity of fuel remaining
  - This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
  - When only a small amount of fuel is added to the tank, the display may not be updated.  
When refueling, turn the “POWER” switch off. If the vehicle is refueled without turning the “POWER” switch off, the display may not be updated.

## 2-2. Instrument cluster

### ■ Rear seat belt reminder (if equipped)

Indicates which rear seat belt are not fastened

This reminder will be displayed for about 35 seconds in the following situations:

- A rear door is opened and then closed.
- A rear seat belt is unfastened.

### Window close suggestion mode

If any of the windows is open when the “POWER” switch is turned off, a suggestion is shown on the multi-information display asking the driver if they want to close all the windows. Following the procedure below closes all the windows.



**1** Press the “ENTER” switch upwards to select “YES”.

**2** Press the “ENTER” switch in.

If “NO” is selected, the window close suggestion mode will be terminated.



**1** Press the “ENTER” switch upwards to select “START”.

**2** Press the “ENTER” switch in.

All the windows will start to close.

If “CANCEL” is selected, window close suggestion mode will be terminated.

- Electronic features control can be turned on/off when
  - The “POWER” switch is in ON mode.
- Conditions for ending electronic features control
  - In the following situations, the electronic features control will end:
    - The menu switch is pressed
    - The dynamic radar cruise control is operated
    - Lexus parking assist-sensor starts operating
    - No action is performed for some time after the electronic features control screen is displayed
    - A warning message appears after the electronic features control screen is displayed
- Window close suggestion mode
  - In the following situations, the window close suggestion mode will not operate:
    - A warning message appears on the multi-information display.
    - The window lock switch is on.
    - All the windows are closed.
    - The window close suggestion mode has been disabled in the customized settings.
    - The driver's or front passenger's door is open.

- In the following situations, the window close suggestion mode will end:
  - The “POWER” switch is turned to ON mode.
  - About 20 seconds have passed since the “POWER” switch was turned off.
  - A warning message appears on the multi-information display.
  - All the windows are closed.
  - The window lock switch is turned on.
  - The menu switch is pressed.
  - The driver's or front passenger's door is opened.
  - The windows were opened or closed by the wireless remote control.
- In the following situations, the window close operation will stop part-way:
  - The “POWER” switch is turned to ON mode.
  - The “ENTER” switch was pressed.
  - The window lock switch was turned on.
  - The jam protection function was activated.
  - The windows were opened or closed by the wireless remote control.

If the power window switch of any of the door is operated while in windows close suggestion mode, the windows close operation of that door will stop partway.

■ Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 25km/h [15mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

■ The multi-information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

■ Customization

Settings (e.g. available languages) can be changed.  
(Customizable features →P. 617)

 CAUTION

- Operating the windows close suggestion mode
  - Before closing the windows, ensure that there are no objects in the surrounding area that could become caught in the windows.
  - Check that all the windows are closed when exiting the vehicle, as window close suggestion mode may not operate under certain conditions.
- Caution while driving

When operating the electronic features control while driving, take extra notice of the vehicle's surrounding area.

2

When driving

## 2-2. Instrument cluster Head-up display\*

The head-up display can be used to project vehicle speed and other information onto the windshield.



### 1 Head-up display

Display brightness will change automatically according to the brightness of the surrounding area.

### 2 Head-up display main switch

### 3 Display contrast adjustment switch

Display brightness can be adjusted to the desired level.

### 4 Display position adjustment switch

\*: If equipped

### ■ Head-up display contents

In addition to vehicle speed, the following information will be displayed:



#### 1 Audio display

Displays audio information for approximately 3 seconds when the audio system is operated

#### 2 Dynamic radar cruise control (if equipped)

Displays the approach warning message (→P. 551)

#### 3 Pre-crash safety system (if equipped)

Displays the collision warning and the brake warning (→P. 551)

#### 4 Turn-by-turn navigation\*

Displays a notification of upcoming intersections during navigation system route guidance

#### 5 Vehicle speed display

2

When driving

### Head-up display main switch



Pressing the switch turns the head-up display on/off and changes the vehicle speed display units as follows:

- ▶ Type A  
OFF → ON (mph) → ON (km/h) → OFF
- ▶ Type B  
OFF → ON (km/h) → OFF

### Display adjustment

#### ▶ Adjusting display contrast



- 1 Brighter
- 2 Darker

#### ▶ Adjusting display position



- 1 Higher
- 2 Lower

## Display customization

The audio mode display can be shown or hidden.



Pressing and holding the head-up display main switch for more than 2 seconds changes the display to audio display on/off mode. Press the head-up display main switch to turn the audio display on/off.

Customization can be performed when the head-up display is on and the vehicle is traveling at less than 8 km/h (5 mph).

2

When driving

### ■ Brightness of the head-up display

The headlight control sensor detects the brightness of the area surrounding the head-up display and adjusts the brightness accordingly. (→P. 235)

### ■ Head-up display

The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses.

Adjust the brightness of the head-up display or remove your sunglasses.

## ⚠ CAUTION

### ■ Before using the head-up display

Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.

## 2-2. Instrument cluster

### NOTICE

#### ■ To prevent damage to components

- Do not place anything on the head-up display opening.




- If an object falls into the opening of the head-up display, remove it immediately. Also, avoid spilling water or other liquids near the head-up display opening as this may cause mechanical damage.





## 2-3. Operating the lights and windshield wipers

### Headlight switch

The headlights can be operated manually or automatically.

Turning the end of the lever turns on the lights as follows:

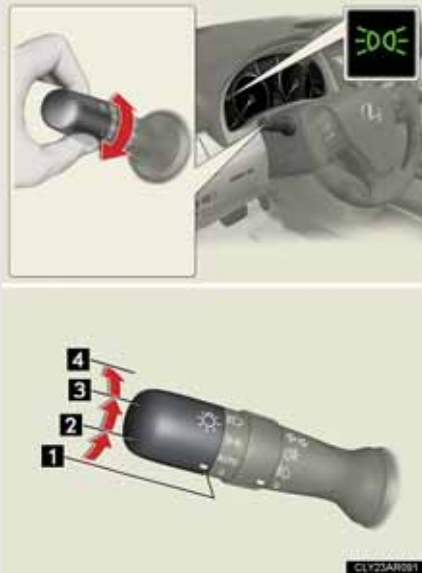


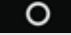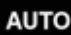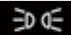- 1  Off
- 2  The headlights and front position lights turn on and off automatically (when the “POWER” switch is in ON mode).
- 3  The front position, tail, license plate and instrument panel lights turn on.
- 4  The headlights and all lights listed above turn on.

2

When driving

### Turning on the high beam headlights

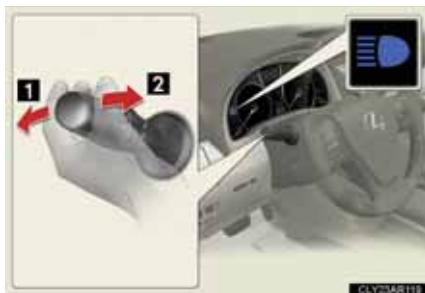

- 1 With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

- 2 Pull the lever toward you to turn on the high beams.

Release the lever to turn them off. You can flash the high beams with the headlights on or off.

### AFS (Adaptive Front-lighting system)

AFS (Adaptive Front-lighting System) improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.

AFS operates at speeds of 10 km/h (6 mph) or higher.

#### ■ Deactivating AFS



- 1 Press the menu switch.

The multi-information display will change modes to electronic features control mode.

- 2 Press the “ENTER” switch upwards or downwards until “AFS” appears.



Press the “ENTER” switch to change to “OFF”.

The “AFS OFF” indicator will be displayed.

Each pressing of the switch turns “AFS” on and off.

Press the menu switch to change to the normal display.

## 2-3. Operating the lights and windshield wipers

---

2

When driving

## 2-3. Operating the lights and windshield wipers

### ■ Daytime running light system (if equipped)

To make your vehicle more visible to other drivers, the headlights and tail lights turn on automatically whenever the hybrid system is started. Daytime running lights are not designed for use at night.


### ■ Headlight control sensor





The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight sys-

### ■ Automatic light off system

- When the light switch is in : The headlights turn off automatically if the “POWER” switch is turned to ACCESSORY mode or turned off.
- When the light switch is in “AUTO” position: The headlights turn off automatically if the “POWER” switch is turned to ACCESSORY mode or turned off and the driver's door is opened.

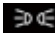To turn the lights on again, turn the “POWER” switch to ON mode, or turn the light switch off once and then back to  or .

### ■ Automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

### ■ If the “AFS OFF” indicator flashes

It may indicate a malfunction in the system. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### ■ Light reminder buzzer

A buzzer sounds when the “POWER” switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on.

### ■ Customization

Settings (e.g. light sensor sensitivity) can be changed.  
(Customizable features →P. 617)

### 2-3. Operating the lights and windshield wipers



#### NOTICE

- To prevent 12-volt battery discharge  
Do not leave the lights on longer than necessary when the hybrid system is off.


2

When driving

## 2-3. Operating the lights and windshield wipers

### Fog light switch

The fog lights improve visibility in difficult driving conditions, such as in rain and fog.

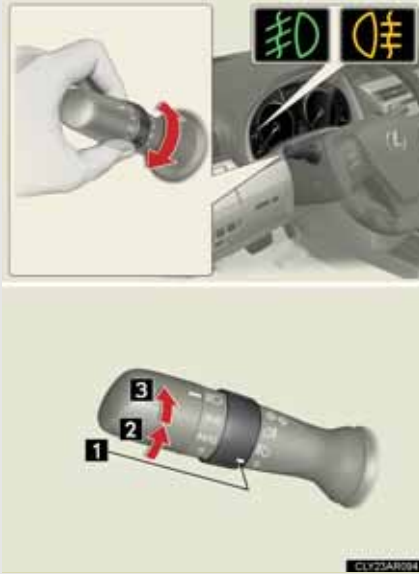

- 1 Turns the front and rear fog lights off
- 2 Turns the front fog lights on
- 3 Turns both front and rear fog lights on

Releasing the switch ring returns it to .

Operating the switch ring again turns only the rear fog lights off.

#### ■ Fog lights can be used when

Front fog lights: The headlights or front position lights are turned on.





Rear fog lights: The front fog lights are turned on.

## 2-3. Operating the lights and windshield wipers

When **AUTO** is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing according to rain volume and vehicle speed.

When **AUTO** is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring:

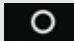

- 1  Off
- 2 **AUTO** Rain-sensing wiper operation
- 3  Low speed wiper operation
- 4  High speed wiper operation
- 5  Temporary operation




- 6 Sensor sensitivity (high)
- 7 Sensor sensitivity (low)

2

When driving

## 2-3. Operating the lights and windshield wipers

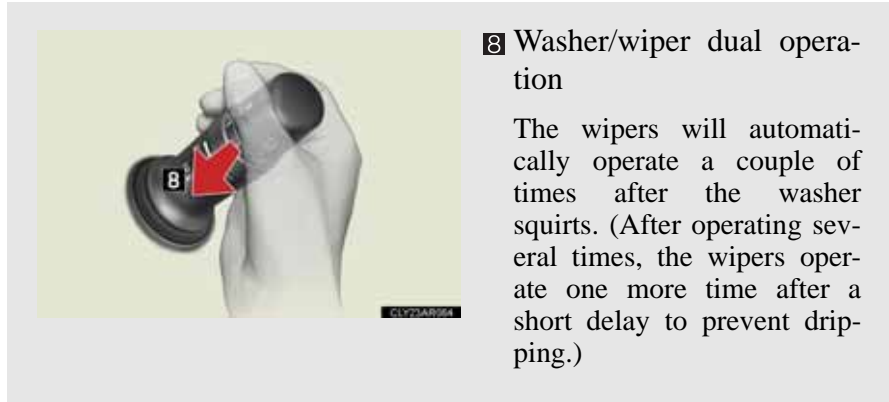

- The windshield wipers and washer can be operated when

The “POWER” switch is in ON mode.

- Effects of vehicle speed on wiper operation

Vehicle speed affects the following even when the wipers are not in “AUTO” mode:

- Intermittent wiper interval
- Wiper operation when the washer is being used (delay until drip prevention wiper sweep occurs)

When low speed wiper operation is selected, wiper operation will be switched from low speed to intermittent wiper operation only when the vehicle is stationary.

(However, when the sensor sensitivity is adjusted to the highest level, the mode cannot be switched.)

- Raindrop sensor



- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

### 2-3. Operating the lights and windshield wipers

- If the wiper switch is turned to the **AUTO** position while the “POWER” switch is in ON mode, the wipers will operate once to show that “AUTO” mode is activated.
- When the sensor sensitivity ring is turned toward high while in “AUTO” mode, the wipers will operate once to indicate that the sensor sensitivity is enhanced.
- If the temperature of the raindrop sensor is 90°C (194°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than “AUTO”.
- If no windshield washer fluid sprays  
Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

#### CAUTION

- Caution regarding the use of windshield wipers in “AUTO” mode  
The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in “AUTO” mode. Take care that your fingers etc. do not become caught in the windshield wipers.


#### NOTICE






- When the windshield is dry  
Do not use the wipers, as they may damage the windshield.
- When the washer fluid tank is empty  
Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.
- When a nozzle becomes blocked  
Do not try to clear it with a pin or other object. The nozzle will be damaged.

## 2-3. Operating the lights and windshield wipers

### Rear window wiper and washer

The wiper operation is selected by moving the lever as follows:

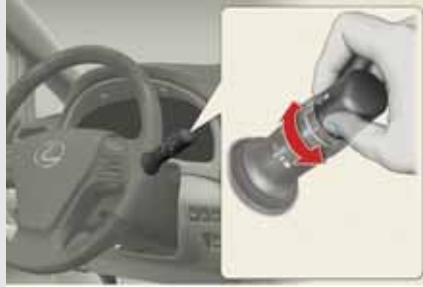

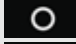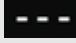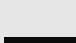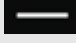- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

- The rear window wiper and washer can be operated when  
The “POWER” switch is in ON mode.

#### NOTICE

- When the rear window is dry  
Do not use the wipers, as they may damage the rear window.
- When the washer fluid tank is empty  
Damage to the washer fluid pump may be caused if the lever is operated continually.
- When a nozzle becomes blocked  
Do not try to clear it with a pin or other object. The nozzle will be damaged.

Washer fluid can be sprayed on the headlights.



Press the switch to clean the headlights.

2

When driving

- The headlight cleaner can be operated when  
The “POWER” switch is in ON mode and the headlight switch is turned on.
- Windshield washer linked operation  
When the windshield washer is operated with the “POWER” switch in ON mode and the headlights on, the headlight cleaner will operate once. (→P. 239)

 NOTICE

- When the washer fluid tank is empty  
Do not press the switch continually as the washer fluid pump may overheat.

## 2-4. Using other driving systems Cruise control\*

Use the cruise control to maintain a set speed without depressing the accelerator pedal.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

### ■ Setting the vehicle speed



STEP 1

Press the “ON-OFF” button to activate the cruise control.

Cruise control indicator will come on.

Press the button again to deactivate the cruise control.

2

When driving

\*: If equipped

## 2-4. Using other driving systems



Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.

### ■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.



**1** Increases the speed

**2** Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.


Large adjustment: Hold the lever in the desired direction.

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

■ Canceling and resuming the constant speed control

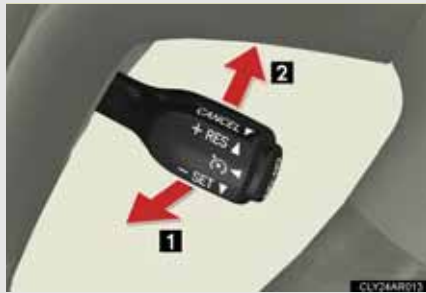

**1** Pulling the lever towards you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

**2** Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 40 km/h

2

When driving

■ Cruise control can be set when

- The shift lever is in the D or 4 or higher range of S has been selected.
- Vehicle speed is above approximately 40 km/h (25 mph).

■ Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the to the desired speed and then pushing the lever down to set the new speed.

■ Automatic cruise control cancelation

Cruise control will stop maintaining the vehicle speed in any of the following situations:

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.  
At this time, the memorized set speed is not retained.
- Actual vehicle speed is below approximately 40 km/h (25 mph).
- VSC is activated.

## 2-4. Using other driving systems

### ■ If the cruise control indicator light flashes

Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### CAUTION

#### ■ To avoid operating the cruise control by mistake

Switch the cruise control off using the “ON-OFF” button when not in use.

#### ■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.


Doing so may result in loss of control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills  
Vehicle speed may exceed the set speed when driving down a steep hill.
- During emergency towing

## 2-4. Using other driving systems

### Dynamic radar cruise control\*

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

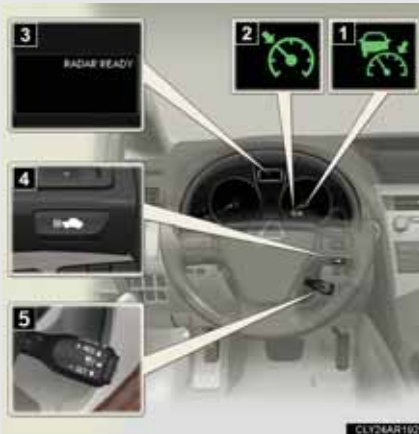

- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant speed control mode)
- 3 Display
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

- Setting the vehicle speed (vehicle-to-vehicle distance control mode)



Press the “ON-OFF” button to activate the cruise control.

Radar cruise control indicator will come on.


Press the button again to deactivate the cruise control.

2

When driving

\*: If equipped

## 2-4. Using other driving systems

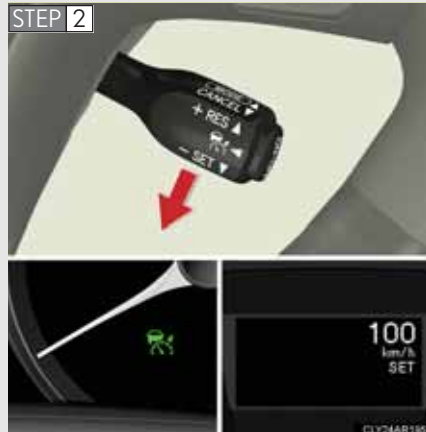

Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.

### ■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.



**1** Increases the speed

**2** Decreases the speed


Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

- ▶ When the set speed is shown in “MPH”
  - Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated
  - Large adjustment: By approximately 8 km/h (5 mph) for each 0.75 seconds the lever is held
- ▶ When the set speed is shown in “km/h”
  - Fine adjustment: By approximately 1 km/h (0.6 mph) each time the lever is operated
  - Large adjustment: By approximately 5 km/h (3.1 mph) for each 0.75 seconds the lever is held
  - In the constant speed control mode (→P. 247), the set speed will be increased or decreased as follows:
    - Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated
    - Large adjustment: The set speed can be increased or decreased continually until the lever is released.

■ Changing the vehicle-to-vehicle distance

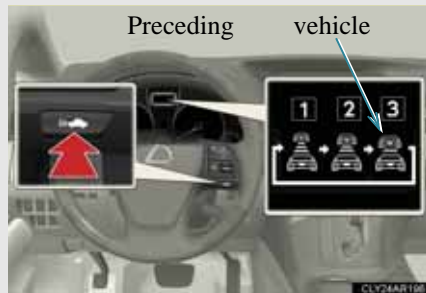

Pressing the button changes the vehicle-to-vehicle distance as follows:

- 1 Long
- 2 Medium
- 3 Short

The vehicle-to-vehicle distance is set automatically to long mode when the “POWER” switch is turned to ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

■ Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (164 ft.)
Medium	Approximately 40 m (132 ft.)
Short	Approximately 25 m (82 ft.)

■ Canceling and resuming the speed control



- 1 Pulling the lever toward you cancels the cruise control.

The speed setting is also canceled when the brakes are applied.

- 2 Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

Resuming is available when the vehicle speed is more than


2

When driving

### Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 120 m (400 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

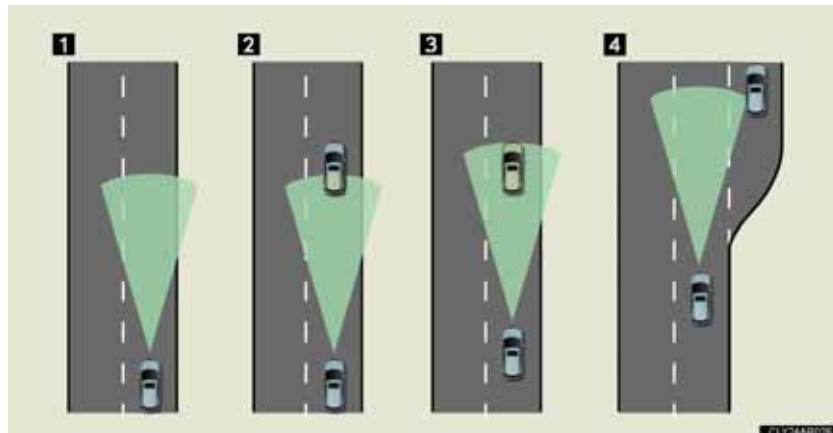

#### 1 Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

#### 2 Example of deceleration cruising

When the vehicle ahead is driving slower than the set speed

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

**3** Example of follow-up cruising

When following a vehicle driving slower than the set speed

The system continues follow-up cruising while adjusting for changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver.

**4** Example of acceleration

When there are no longer any vehicles ahead driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

**Approach warning**

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Apply the brakes to ensure an appropriate vehicle-to-vehicle distance.


**■ Warnings may not occur when**

In the following instances, there is a possibility that the warnings will not occur:

- When the speed of the vehicle ahead matches or exceeds your vehicle speed
- When the vehicle ahead is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- At the instant the accelerator is applied

### Selecting conventional constant speed control mode

Constant speed control mode differs from vehicle-to-vehicle distance control mode. When constant speed control mode is selected, your vehicle will maintain a set speed regardless of whether or not there are other vehicles in the lane ahead.

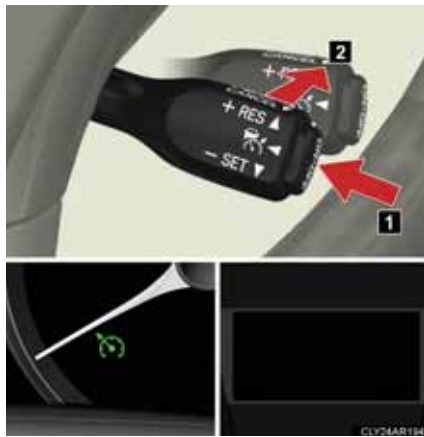

**1** Press the “ON-OFF” button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.

**2** Switch to constant speed control mode.

(Push the lever forward and hold for approximately one second.)

Constant speed control mode indicator will come on.

When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

After the desired speed has been set, it is not possible to return to vehicle-to-vehicle distance control mode.

If the “POWER” switch is turned off and then turned to ON mode again, the vehicle will automatically return to vehicle-to-vehicle distance control mode.

Adjusting the speed setting:  
→P. 248

Canceling and resuming the  
speed setting: →P. 251

- 
- Dynamic radar cruise control can be set when
    - The shift lever is in the D or range 4 or higher of S has been selected.
    - Vehicle speed is above approximately 50 km/h (30 mph).

- Accelerating after setting the vehicle speed

The vehicle can accelerate normally. After acceleration, the set speed resumes.

However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the vehicle ahead.

- Automatic cancelation of vehicle-to-vehicle distance control

Vehicle-to-vehicle distance control driving is automatically canceled in the following situations.

- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.
- The sensor cannot operate correctly because it is covered in some way.
- The windshield wipers are operating at high speed. (when the wiper switch is set to the “AUTO” mode or the high speed wiper operation position).
- When the snow mode is set.

If vehicle-to-vehicle distance control driving is automatically canceled for any other reason, there may be a malfunction in the system. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, and have your Lexus inspected.

## 2-4. Using other driving systems

### ■ Automatic cancelation of constant speed control

The cruise control will stop maintaining the vehicle speed in the following situations:

- Actual vehicle speed is more than 16 km/h (10 mph) below the set vehicle speed.  
At this time, the memorized set speed is not retained.
- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.

### ■ Radar sensor and grille cover

Always keep the sensor and grille cover clean to ensure that the vehicle-to-vehicle distance control operates properly. (Some obstructions, such as snow, ice and plastic objects, cannot be detected by the obstruction sensor.) Dynamic radar cruise control is canceled if an obstruction is detected.



1 Grille cover

2 Radar sensor

### ■ Warning lights and messages for dynamic radar cruise control

Warning lights and messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 551)

## ■ Certification

Hereby, DENSO CORPORATION declares that this DNMWR005 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Hér með lýsir DENSO CORPORATION yfir því að DNMWR005 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Con la presente DENSO CORPORATION dichiara che questo DNMWR005 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Käesolevaga kinnitab DENSO CORPORATION seadme DNMWR005 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Hierbij verklaart DENSO CORPORATION dat het toestel DNMWR005 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ DNMWR005 ΣΥΜΜΟΡΦΩΝ ΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Härmed intygar DENSO CORPORATION att denna DNMWR005 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Por medio de la presente DENSO CORPORATION declara que el DNMWR005 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
DENSO CORPORATION týmto vyhlasuje, že DNMWR005 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
DENSO CORPORATION izjavlja, da je ta DNMWR005 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

## 2-4. Using other driving systems

DENSO CORPORATION tímto prohlašuje, že tento DNMWR005 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr DNMWR005 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt DENSO CORPORATION, dass sich das Gerät DNMWR005 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
DENSO CORPORATION erklærer herved at utstyret DNMWR005 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Alulírott, DENSO CORPORATION nyilatkozom, hogy a DNMWR005 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
DENSO CORPORATION vakuuttaa täten että DNMWR005 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Par la présente DENSO CORPORATION déclare que l'appareil DNMWR005 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Niniejszym DENSO CORPORATION oświadcza, że DNMWR005 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
DENSO CORPORATION declara que este DNMWR005 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Hawnekk, DENSO CORPORATION, jiddikjara li dan DNMWR005 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.
Ar šo, DENSO CORPORATION, deklarē, ka DNMWR005 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Šiuo DENSO CORPORATION deklaruoja, kad šis DNMWR005 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

**⚠ CAUTION****■ Before using dynamic radar cruise control**

Do not overly rely on vehicle-to-vehicle distance control.

Be aware of the set speed. If automatic deceleration/acceleration is not appropriate, adjust the vehicle speed, as well as the distance between your vehicle and vehicles ahead by applying the brakes etc.

**■ Cautions regarding the driving assist systems**

Observe the following precautions.

Failure to do so may cause an accident resulting in death or serious injury.

**● Assisting the driver to measure following distance**

The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

**● Assisting the driver to judge proper following distance**

The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is appropriate or not. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

**● Assisting the driver to operate the vehicle**

The dynamic radar cruise control has no capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

**■ To avoid inadvertent dynamic radar cruise control activation**

Switch the cruise control off using the “ON-OFF” button when not in use.

 CAUTION

■ Situations unsuitable for dynamic radar cruise control

Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice and snow
- On steep downhill, or where there are sudden changes between sharp up and down gradients
- At entrances to expressways
- When weather conditions are bad enough that they may prevent the sensors from functioning correctly (fog, snow, sandstorm, heavy rain, etc.)
- When an approach warning buzzer is heard often
- When your vehicle is towing anything

■ When the sensor may not be correctly detecting the vehicle ahead

Apply the brakes as necessary when any of the following types of vehicles are in front of you.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 253) will not be activated, and a fatal or serious accident may result.

- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving
- Vehicles with small rear ends (trailers with no load on board etc.)
- Motorcycles traveling in the same lane

**⚠ CAUTION****■ Conditions under which the vehicle-to-vehicle distance control may not function correctly**

Apply the brakes as necessary in the following conditions as the radar sensor may not be able to correctly detect vehicles ahead, and an accident may result:

- When water or snow thrown up by the surrounding vehicles hinders the functioning of the radar sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment etc.)
- When the road curves or when the lanes are narrow
- When steering wheel operation or your position in the lane is unstable
- When the vehicle ahead of you decelerates suddenly

**■ Handling the radar sensor**

Observe the following to ensure the cruise control system can function effectively.

Otherwise, the system may not function correctly and could result in an accident.

- Keep the sensor and grille clean at all times.  
Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.  
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.

## 2-4. Using other driving systems Lexus parking assist-sensor\*

The distance to obstacles measured by the sensors is communicated via the multi-information display and a buzzer when parallel parking or maneuvering into a garage is conducted. Always check the surrounding area when using this system.

### ■ Types of sensors



- 1 Front corner sensors
- 2 Rear corner sensors
- 3 Rear center sensors

### ■ Setting the Lexus parking assist-sensor mode



- 1 Press the menu switch.


The multi-information display will change modes to electronic features control mode.

- 2 Press the “ENTER” switch upwards or downwards until the Lexus parking assist-sensor mark appears

\*: If equipped

## 2-4. Using other driving systems

**STEP 2**



Press the “ENTER” switch to change to “ON”.

The Lexus parking assist-sensor indicator will be displayed.

Each pressing of the switch turns the Lexus parking assist-sensor on and off.

When on, the buzzer sounds to inform the driver that the system is operational.

Press the menu switch to

2

When driving

### Display

When the sensors detect an obstacle, a graphic is shown on the multi-information display depending on the position and distance to the obstacle.



- 1 Front corner sensor operation
- 2 Rear corner sensor operation
- 3 Rear center sensor operation




## 2-4. Using other driving systems

### The distance display and buzzer



When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

The site of the obstacle will flash (detection level 4 only).


#### ■ Front corner sensors

Detection level	Multi-information display	Approximate distance to obstacle	Buzzer
2		60 to 47.5 cm (2.0 to 1.6 ft.)	Medium
3		47.5 to 35 cm (1.6 to 1.2 ft.)	Fast
4		35 cm (1.2 ft.) or less	Continuous

#### ■ Rear corner sensors

Detection level	Multi-information display	Approximate distance to obstacle	Buzzer
2		50 to 37.5 cm (1.6 to 1.2 ft.)	Medium
3		37.5 to 25 cm (1.2 to 0.8 ft.)	Fast

2-4. Using other driving systems

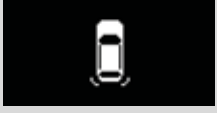



4		25 cm (0.8 ft.) or less	Continuous
---	-----------------------------------------------------------------------------------	-------------------------	------------

2


When driving

## 2-4. Using other driving systems

### ■ Rear center sensors

Detection level	Multi-information display	Approximate distance to obstacle	Buzzer
1		150 to 60 cm (4.9 to 2.0 ft.)	Slow
2		60 to 45 cm (2.0 to 1.5 ft.)	Medium
3		45 to 35 cm (1.5 to 1.2 ft.)	Fast
4		35 cm (1.2 ft.) or less	Continuous

Detection range of the sensors

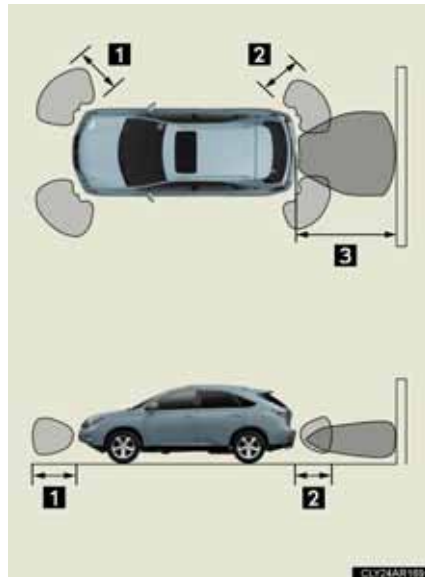

- 1 Approximately 60 cm (2.0 ft.)
- 2 Approximately 50 cm (1.6 ft.)
- 3 Approximately 150 cm (4.9 ft.)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.

2

When driving

- The Lexus parking assist-sensor can be operated when
  - Front corner sensors:
    - The “POWER” switch is in ON mode.
    - The shift lever is in a position other than P.
    - The vehicle speed is less than about 10 km/h (6 mph).
  - Rear corner and center sensors:
    - The “POWER” switch is in ON mode.
    - The shift lever is in R.

## 2-4. Using other driving systems

## 2-4. Using other driving systems

### ■ Sensor detection information

- Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an obstacle. Particular instances where this may occur are listed below.
  - There is dirt, snow or ice on a sensor.
  - A sensor is frozen.
  - A sensor is covered in any way.
  - The vehicle is leaning considerably to one side.
  - On an extremely bumpy road, on an incline, on gravel, or on grass
  - The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
  - There is another vehicle equipped with parking assist sensors in the vicinity.
  - A sensor is coated with a sheet of spray or heavy rain.
  - The vehicle is equipped with a fender pole or radio antenna.
  - Towing eyelets are installed.
  - A bumper or sensor receives a strong impact.
  - The vehicle is approaching a tall or right-angled curb.
  - In harsh sunlight or intense cold weather.
  - A non-genuine Lexus suspension (lowered suspension, etc.) is installed.

In addition to the examples above, there are instances in which, because of their shapes, signs and other objects may be judged by a sensor to be closer than they are.

- The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:
  - Wires, fences, ropes, etc.
  - Cotton, snow and other materials that absorb sound waves
  - Sharply-angled objects
  - Low obstacles
  - Tall obstacles with upper sections projecting outwards in the direction of your vehicle

### ■ If a message is displayed

→P. 545

### ■ Customization

Settings (e.g. buzzer volume) can be changed. (Customizable features →P. 617)

## 2-4. Using other driving systems

### CAUTION

#### ■ Caution when using the Lexus parking assist-sensor

Observe the following precautions.

Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 10 km/h (6 mph).
- Do not attach any accessories within the sensor range.

### NOTICE

#### ■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.


Doing so may result in the sensor malfunctioning.

#### ■ Conditions possibly indicating system malfunctions

If any of the following occurs, the system may be malfunctioning due to a sensor failure etc. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- The buzzer does not sound when the Lexus parking assist-sensor mode is set.
- The sensor operation display flashes and the buzzer sounds even when no obstacle is detected.
- An area of the sensors is hit or subjected to a strong impact.
- Either bumper is hit.
- The sensor operation display remains on even though no buzzer sounds.

The electronically modulated air suspension allows the driver to control vehicle height in order to adjust driving conditions. Select the desired height with the height selector switch.

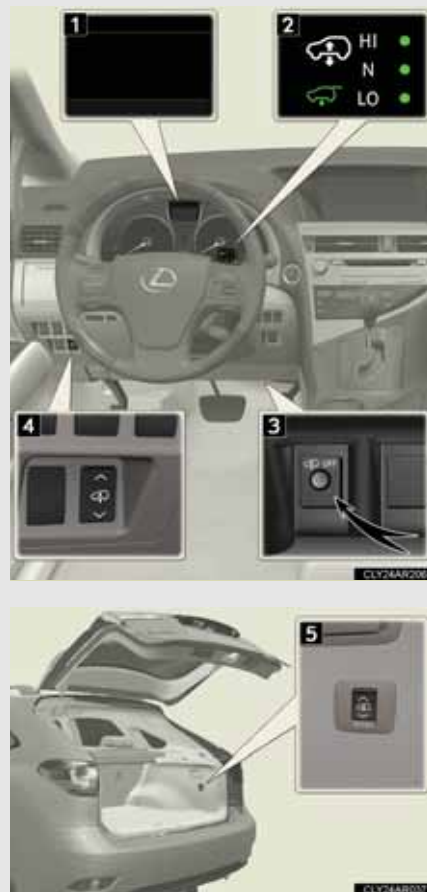

- 1 Multi-information display
- 2 Electronically modulated air suspension indicator
- 3 Height control off switch
- 4 Height selector switch (driver's side instrument panel)
- 5 Height selector switch (luggage compartment)

2

When driving

\*: If equipped

### Selecting vehicle height

#### ■ Height modes

- “HI” mode: For driving on bumpy roads  
30 mm (1.2 in.) higher than the normal height  
“HI” mode cannot be selected when vehicle speed exceeds 30 km/h (19 mph).
- “N” mode: For ordinary driving  
Normal height
- “LO” mode: For sporty driving  
Vehicle front: 20 mm (0.8 in.) lower than the normal height  
Vehicle rear: 5 mm (0.2 in.) lower than the normal height
- Luggage mode: For easy entry/exit and easy luggage loading/unloading  
30 mm (1.2 in.) lower than the normal height

#### ■ Height selector switch

Press the height selector switch for approximately 1 second.

#### ► Driver’s side instrument panel



#### 1 Higher

Pressing this switch while the vehicle is in luggage mode changes the vehicle height to that of “N” mode.

#### 2 Lower

Pressing this switch while the vehicle is in “LO” mode changes the vehicle height to that of luggage mode.

► Luggage compartment



1 Higher

Pressing this switch while the vehicle is in luggage mode changes the vehicle height to that of “N” mode.

2 Lower

Pressing this switch while the vehicle is in “N” mode changes the vehicle height to that of luggage mode, not “LO” mode.

■ Electronically modulated air suspension indicator



The indicator for the selected mode will come on.

The indicator will flash while the vehicle height is being changed to the height of the selected mode.

Disabling the height control



Press the height control off switch while the vehicle is stopped. A message will appear on the multi-information display, and vehicle height will be fixed in the current mode.

When vehicle speed exceeds 30 km/h (19 mph), the electronically modulated air suspension is re-enabled automatically.

2  
When driving

---

### ■ Operating conditions

After stopping the hybrid system, the vehicle will remain lowered for a maximum of 60 seconds.

#### ● Height selector switch (driver's side instrument panel)

- While the hybrid system is operating, any vehicle height mode can be selected.
- Luggage mode can only be selected when the shift lever is in the P position.

#### ● Height selector switch (luggage compartment)

- When the hybrid system is operating and the shift lever is in the P position, any vehicle height other than “LO” mode can be selected.
- When the “POWER” switch is turned off, the vehicle height can only be lowered (only the “v” side of the switch can be operated).

This switch can only be operated when the back door is open.

#### ● Height control off switch

When the vehicle is stopped with the “POWER” switch in ON mode, vehicle height control can be disabled/re-enabled.

### ■ When changing vehicle height modes

Before operating the height selector switch to raise/lower the vehicle height, ensure that there are no objects in the surrounding area that could damage the vehicle.

### ■ When “N” mode is selected

During high speed driving, the vehicle height will automatically change to that of “LO” mode.

### ■ When “HI” mode is selected

The vehicle height will change to that of “N” mode when vehicle speed reaches 50 km/h (31 mph) or when vehicle speed has exceeded 30 km/h (19 mph) for approximately 10 seconds. Even if vehicle speed is reduced below 30 km/h (19 mph), the vehicle height will not automatically return to “HI” mode.

### ■ When “LO” mode is selected

The vehicle height will change to that of “N” mode when the hybrid system is restarted.

■ When luggage mode is selected

If the vehicle begins to move while still in luggage mode, the vehicle will automatically change to “N” mode once speed exceeds 8 km/h (5 mph). Even if vehicle speed is reduced below 8 km/h (5 mph), the vehicle height will not automatically return to luggage mode.

■ Operating sound of the air suspension

When the vehicle height is lowered, such as when entering and loading the vehicle, or when the height selector switch is operated, the sound of the compressor operating or the mode changing may be heard. This does not indicate a malfunction.

■ Automatic leveling function

Regardless of the number of occupants and the luggage load, vehicle height in any mode is always adjusted to a fixed height by the automatic leveling function.

■ Vehicle height mode change time

- If the height control is operated continuously to lower the vehicle, the suspension air tank may become full, causing operation of the vehicle height lowering control to become slow.
- To protect the compressor, the system will only raise the vehicle for a total of 100 consecutive seconds. If it takes longer than this to reach the selected height, operation may be suspended shortly and then restart. However, it may not be possible to change the vehicle's height mode at this time.

■ The electronically modulated air suspension will not operate when

The vehicle height control may not be able to change modes when the vehicle runs over a high curb or other rugged surfaces where the suspension is stretched.

## 2-4. Using other driving systems

### CAUTION

#### ■ The electronically modulated air suspension must be turned off when

The electronically modulated air suspension must be turned off in the following situations as vehicle height may change due to the automatic leveling function, and, you may catch part of your body in the vehicle and cause an accident, resulting in death or serious injury.

- Any of the wheels is stuck in a ditch.
- It is necessary to jack up the vehicle.
- It is necessary to tow the vehicle with part of it lifted.
- When connecting/disconnecting a trailer

For safety, stop the hybrid system if necessary.

#### ■ “HI” mode

- “HI” mode should only be used when driving on rough roads, for example when driving off-road. Because the vehicle's center of gravity will become higher when in the mode, the vehicle may become unstable when turning abruptly and cause an accident, resulting in death or serious injury.
- Do not select “HI” mode when loading cargo on the roof luggage carrier. Because the vehicle's center of gravity will become higher when in the mode, the vehicle may become unstable when turning abruptly, and cause an accident, resulting in death or serious injury.

### NOTICE

#### ■ Do not select “LO” mode when driving on bumpy roads.

If the underbody of the vehicle touches a rugged road surface, the vehicle may be damaged. Also be careful when driving while the vehicle is automatically returning from luggage or “LO” mode to “N” mode.

#### ■ Automatic return to “N” mode

In the following situations, the height of the vehicle will automatically increase. Be careful in any place where overhead space is limited.

- The vehicle begins to move while still in luggage mode.
- The hybrid system is restarted while the vehicle is in “LO” mode.

#### ■ Vehicle height while parked

If the temperature changes or the vehicle is parked for a long time, the vehicle height may decrease.

The rear view monitor system assists the driver by displaying an image of the area behind the vehicle. The image is displayed in reverse on the screen. This reversed image is a similar image to the one on the inside rear view mirror.



The rear view image is displayed when the shift lever is in the R position.

- If the shift lever is shifted out of R, the screen is turned off.
- The screen remains on for approximately 5 minutes.

2

When driving

\*: If equipped

## 2-4. Using other driving systems

- The rear view monitor system can be operated when  
The “POWER” switch is in ON mode and the back door is fully closed.
- Switching the screen on/off



When the screen is displayed, press the “AUTO” button on the inside rear view mirror to switch the screen on/off.

Screen on: Green indicator comes on.

Screen off: Orange indicator comes on.


The auto anti-glare inside rear view mirror will revert to the screen on each time the “POWER” switch is turned to ON mode.

- Displayed area



The area covered by the camera is limited. Objects that are close to either corner of the bumper or under the bumper cannot be seen on the screen.

The area displayed on the screen may vary according to vehicle orientation or road conditions.

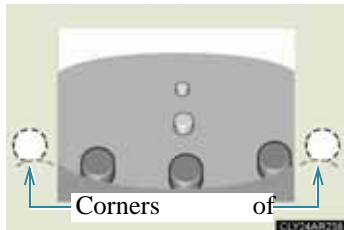


■ Rear view monitor system camera



In the following cases, it may become difficult to see the images on the screen, even when the system is functioning correctly:

- The vehicle is in a dark area, such as at night.
- The temperature near the lens is extremely high or low.
- Water droplets are on the camera lens or humidity is high, such as when it rains.
- The camera has scratches or dirt on it
- Foreign matter, such as snow or mud, adheres to the camera lens.
- The sun or headlights are shining

■ Smear effect

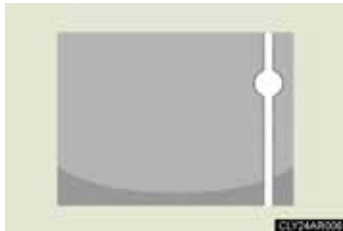

If a bright light, such as sunlight reflected off the vehicle body, is picked up by the camera, a smear effect\* characteristic to the camera may occur.

\*:Smear effect — A phenomenon that occurs when a bright light is picked up by the camera; when transmitted by the camera, the light source appears to have a vertical streak above and below it.

## 2-4. Using other driving systems

### CAUTION

- When using the rear view monitor system, observe the following precautions to avoid an accident that could result in death or serious injuries:
  - Never depend solely on the monitor system when reversing.
  - Always check visually and with the mirrors to confirm your intended path is clear.
  - Depicted distances between objects and flat surfaces differ from actual distances.
- Conditions which may affect the rear view monitor system
  - If the back of the vehicle has been hit, the camera's position and mounting angle may have changed. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, and have your Lexus inspected.
  - Rapid temperature changes, such as when hot water is poured on the vehicle in cold weather, may cause the system to function abnormally.
  - If the camera lens is dirty, it cannot transmit a clear image. Rinse with water and wipe with a soft cloth. If extremely dirty, wash with a mild cleanser and rinse.
  - The displayed image may be darker and moving images may be slightly distorted when the system is cold.
  - As the camera is of water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
  - Do not allow organic solvent, car wax, window cleaner or glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
  - Use your own eyes to confirm the vehicle's surroundings, as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle with your own eyes and the vehicle's mirrors.

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

- **ABS (Anti-lock Brake System)**  
Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface
- **Brake assist**  
Generates an increased level of braking force after the brake pedal is depressed, when the system detects a panic stop situation
- **VSC (Vehicle Stability Control)**  
Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces
- **TRC (Traction Control)**  
Helps to maintain drive power and prevent any of the drive wheels from spinning when starting the vehicle or accelerating on slippery roads
- **Hill-start assist control**  
→P. 288
- **EPS (Electric Power Steering)**  
Employs an electric motor to reduce the amount of effort needed to turn the steering wheel
- **Active stabilizer suspension system (if equipped)**  
Reduces sway when cornering according to vehicle conditions such as steering wheel movement and vehicle speed in order to maintain a stable vehicle posture
- **VDIM (Vehicle Dynamics Integrated Management)**  
Provides integrated control of the ABS, brake assist, TRC, VSC, hill-start assist control and EPS systems  
Helps to maintain vehicle stability when swerving on slippery road

## 2-4. Using other driving systems

- PCS (Pre-Crash Safety system) (if equipped)

→P. 290

- Emergency brake signal (if equipped)

In order to reduce the risk of a rear-end collision, when the brakes are applied suddenly the stop lights will automatically flash to alert the vehicle behind.

### When the VSC/TRC systems are operating



If the vehicle is in danger of slipping or if any of the drive wheels spins, the slip indicator flashes to indicate that the VSC/TRC systems are operating.

Disabling the TRC/VSC systems

If the vehicle gets stuck in fresh snow or mud, the TRC/VSC systems may reduce power from the hybrid system to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.

■ Turning off the TRC system only



To turn the TRC system off, quickly press and release the switch.

A message will be shown on the multi-information display.

Press the switch again to turn the system back on.

■ Turning off both TRC and VSC systems



To turn the TRC and VSC systems off, press and hold the switch for 3 seconds or more while the vehicle is stopped.

A message will be shown on the multi-information display and VSC off indicator light will come on.

Press the switch again to turn the systems back on.

2

When driving

- 
- When the message is displayed on the multi-information display showing that TRC has been disabled even if the VSC off switch has not been pressed TRC and hill-start assist control cannot be operated. Contact your any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - Sounds and vibrations caused by the ABS, VSC, TRC and brake assist
    - A sound may be heard from the engine compartment when the hybrid system is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
    - Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
      - Vibrations may be felt through the vehicle body and steering.
      - A motor sound may be heard after the vehicle comes to a stop.
      - The brake pedal may pulsate slightly after the ABS is activated.
      - The brake pedal may move down slightly after the ABS is activated.
  - EPS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.
  - Reactivation of the TRC/VSC systems

Turning off the hybrid system after turning off the TRC/VSC systems will automatically reactivate them.
  - Reactivation of the TRC system linked to vehicle speed

When only the TRC system is turned off, the TRC system will turn on when vehicle speed increases. However, when both TRC and VSC systems are turned off, the systems will not turn on even when vehicle speed increases.
  - Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The EPS system should return to normal within 10 minutes.

■ Operating conditions of emergency brake signal

When the following two conditions are met, the emergency brake signal will operate:

- Actual vehicle speed is over 55 km/h (34 mph).
- The brake pedal is depressed in a manner that cause the system to judge from the vehicle deceleration that this is a sudden braking operation.

■ Automatic system cancellation of emergency brake signal

The emergency brake signal will turn off in any of the following situations:

- The emergency flashers are turned on.
- The brake pedal is released.
- The system judges from the vehicle deceleration that this is not a sudden braking operation.

## 2-4. Using other driving systems

### CAUTION

- The ABS does not operate effectively when
  - Tires with inadequate gripping ability are used (such as excessively worn tires on a snow covered road).
  - The vehicle hydroplanes while driving at high speed on a wet or slick road.
- Stopping distance when the ABS is operating may exceed that of normal conditions  
The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you in the following situations:
  - When driving on dirt, gravel or snow-covered roads
  - When driving with tire chains
  - When driving over bumps in the road
  - When driving over roads with potholes or roads with uneven surfaces
- TRC may not operate effectively when  
Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC system is operating.  
Do not drive the vehicle in conditions where stability and power may be lost.

 CAUTION

■ When the VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident, resulting in death or serious injury. Exercise particular care when the indicator light flashes.

■ When the TRC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help enhance vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

■ Replacing tires

Make sure that all tires are of the same size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, for further information when replacing tires or wheels.

■ Handling of tires and suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system malfunction.

## 2-4. Using other driving systems

### Hill-start assist control

Hill-start assist control helps to prevent the vehicle from rolling backwards when starting on an incline or slippery slope.



To engage hill-start assist control, further depress the brake pedal when the vehicle is stopped completely.

A buzzer will sound once to indicate the system is activated. The slip indicator will also start flashing.

- Hill-start assist control can be operated when
  - The shift lever is in a position other than P.
  - The parking brake is not applied.
  - The accelerator pedal is not depressed.
- Hill-start assist control
  - While hill-start assist control is operating, the brakes remain automatically applied after the driver releases the brake pedal. The stop lights and the high mounted stoplight turn on.
  - Hill-start assist control operates for about 2 seconds after the brake pedal is released.
  - If the slip indicator does not flash and the buzzer does not sound when the brake pedal is further depressed, slightly reduce the pressure on the brake pedal (do not allow the vehicle to roll backward) and then firmly depress it again. If the system still does not operate, check if the operating conditions explained above have been met.

■ Hill-start assist control buzzer

- When hill-start assist control is activated, the buzzer will sound once.
- In the following situations, hill-start assist control will be canceled and the buzzer will sound twice.
  - No attempt is made to drive the vehicle within approximately 2 seconds of releasing the brake pedal.
  - The shift lever is moved to P.
  - The parking brake is applied.
  - The brake pedal is depressed again.
  - The brake pedal has been depressed for more than approximately 3 minutes.

■ If the slip indicator comes on

It may indicate a malfunction in the system. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.



**CAUTION**

■ Hill-start assist control

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on extremely steep inclines or roads covered in ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline for an extended period of time, as doing so may lead to an accident.

## 2-4. Using other driving systems

When the radar sensor detects the possibility of a frontal collision, pre-crash safety system such as the brake and seat belts are automatically engaged in an attempt to lessen impact and injuries to occupants as well as vehicle damage.

### ■ Pre-crash seat belts (front seat belts only)

If the pre-crash sensor detects that a collision is unavoidable, the pre-crash safety system will retract the seat belt before the collision occurs.

The same will happen if the driver makes an emergency braking or loses control of the vehicle. (→P. 109)

However, the system will not operate in the event of skidding when the VSC system is disabled.

### ■ Pre-crash brake assist

When there is a high possibility of a frontal collision, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

### ■ Pre-crash braking

When there is a possibility of a frontal collision, the system warns the driver using a warning light, warning display and buzzer. If the system determines that a collision is unavoidable, the brakes are automatically applied to reduce the collision speed. Pre-crash brak-

\*: If equipped

### Disabling pre-crash braking



- 1 Pre-crash braking disabled
- 2 Pre-crash braking enabled

The "PCS" warning light turn on when pre-crash braking is disabled.

2

When driving

### Radar sensor



The radar sensor detects vehicles or other obstacles on or near the road ahead and determines whether a collision is imminent based on the position, speed, and heading of the obstacles.

- 
- The pre-crash safety system is operational when
    - Pre-crash seat belts (type A)
      - Vehicle speed is greater than about 5 km/h (4 mph).
      - The speed at which your vehicle is approaching the obstacle or oncoming vehicle is greater than about 30 km/h (19 mph).
      - The front occupants are wearing a seat belt.
    - Pre-crash seat belts (type B)
      - Vehicle speed is greater than about 30 km/h (19 mph).
      - The system detects sudden braking or skidding.
      - The front occupants are wearing a seat belt.
    - Pre-crash brake assist:
      - Vehicle speed is greater than about 30 km/h (19 mph).
      - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
      - The brake pedal is depressed.
    - Pre-crash braking:
      - The pre-crash braking off switch is not pressed.
      - Vehicle speed is greater than about 15 km/h (10 mph).
      - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 15 km/h (10 mph).

- Conditions that may trigger the system even if there is no possibility of collision
  - When there is an object by the roadside at the entrance to a curve
  - When passing an oncoming vehicle on a curve
  - When driving over a narrow iron bridge
  - When there is a metal object on the road surface
  - When driving on an uneven road surface
  - When passing an oncoming vehicle on a right-turn (right-hand vehicles) or left-turn (left-hand drive vehicles)
  - When your vehicle rapidly closes on the vehicle in front
  - When a grade separation/interchange, sign, billboard, or other structure appears to be directly in the vehicle's line of travel
  - When climbing a steep hill causes an overhead billboard or other metallic structure to appear directly in the vehicle's line of travel
  - When an extreme change in vehicle height occurs
  - When the axis of the radar is out of adjustment
  - When passing through certain toll gates
  - When driving on a bridge

When the system is activated in the situations described above, there is also a possibility that the seat belts will retract quickly and the brakes will be applied with a force greater than normal. When the seat belt is locked in the retracted position, stop the vehicle in a safe place, release the seat belt and refasten it.

- Obstacles not detected

The sensor cannot detect plastic obstacles such as traffic cones. There may also be occasions when the sensor cannot detect pedestrians, animals, bicycles, motorcycles, trees, or snowdrifts.

- When there is a malfunction in the system

Warning lights and/or warning messages will turn on or flash. (→P. 540, 545)

## 2-4. Using other driving systems

### ■ Certification

Hereby, DENSO CORPORATION declares that this DNMWR005 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Hér með lýsir DENSO CORPORATION yfir því að DNMWR005 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Con la presente DENSO CORPORATION dichiara che questo DNMWR005 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Käesolevaga kinnitab DENSO CORPORATION seadme DNMWR005 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Hierbij verklaart DENSO CORPORATION dat het toestel DNMWR005 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ DNMWR005 ΣΥΜΜΟΡΦΩΝ ΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Härmed intygar DENSO CORPORATION att denna DNMWR005 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Por medio de la presente DENSO CORPORATION declara que el DNMWR005 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
DENSO CORPORATION týmto vyhlasuje, že DNMWR005 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
DENSO CORPORATION izjavlja, da je ta DNMWR005 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

DENSO CORPORATION tímto prohlašuje, že tento DNMWR005 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr DNMWR005 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt DENSO CORPORATION, dass sich das Gerät DNMWR005 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
DENSO CORPORATION erklærer herved at utstyret DNMWR005 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Alulírott, DENSO CORPORATION nyilatkozom, hogy a DNMWR005 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
DENSO CORPORATION vakuuttaa täten että DNMWR005 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Par la présente DENSO CORPORATION déclare que l'appareil DNMWR005 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Niniejszym DENSO CORPORATION oświadcza, że DNMWR005 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
DENSO CORPORATION declara que este DNMWR005 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Hawnekk, DENSO CORPORATION, jiddikjara li dan DNMWR005 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.
Ar šo, DENSO CORPORATION, deklarē, ka DNMWR005 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Šiuo DENSO CORPORATION deklaruoja, kad šis DNMWR005 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

 CAUTION

■ Limitations of the pre-crash safety system

Do not overly rely on the pre-crash safety system. Always drive safely, taking care to observe your surroundings and checking for any obstacles or other road hazards.

Failure to do so may cause an accident resulting in death or serious injury.

■ Cautions regarding the assist contents of the system

By means of alarms and brake control, the pre-crash safety system is intended to assist the driver in avoiding collisions through the process of LOOK-JUDGE-ACT. There are limits to the degree of assistance the system can provide, so please keep in mind the following important points.

● Assisting the driver in watching the road

The pre-crash safety system is only able to detect obstacles directly in front of the vehicle, and only within a limited range. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for the driver to pay close attention to the vehicle's surroundings.

● Assisting the driver in making correct judgment

When attempting to estimate the possibility of a collision, the only data available to the pre-crash safety system is that from obstacles it has detected directly in front of the vehicle. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of collision in any given situation.

● Assisting the driver in taking action

The pre-crash safety system's braking assist feature is designed to help reduce the severity of a collision, and so only acts when the system has judged that a collision is unavoidable. This system by itself is not capable of automatically avoiding a collision or bringing the vehicle to a stop safely. For this reason, when encountering a dangerous situation the driver must take direct and immediate action in order to ensure the safety of all involved.

 CAUTION

- When the sensor may not be correctly detecting the vehicle ahead  
Apply the brakes as necessary in any of the following situations:
  - When water or snow thrown up by the surrounding vehicles hinders the functioning of the sensor
  - When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment etc.)
  - Vehicles that cut in suddenly
  - Vehicles with small rear ends (trailers with no load on board etc.)
  - Motorcycles traveling in the same lane
- Handling the radar sensor  
Observe the following to ensure the pre-crash safety system can function effectively:
  - Keep the sensor and front grille clean at all times.  
Clean the sensor and front grille with a soft cloth so you do not mark or damage them.
  - Do not subject the sensor or surrounding area to a strong impact.  
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - Do not disassemble the sensor.
  - Do not attach accessories or stickers to the sensor, grille or surrounding area.
  - Do not modify or paint the sensor and grille cover.

## 2-5. Driving information

### Utility vehicle precautions

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity.

#### Utility vehicle feature

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars. This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehicles.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause rollover.

 CAUTION

## ■ Utility vehicle precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should fasten their seat belts whenever the vehicle is moving.
- Avoid sharp turns or abrupt maneuvers, if at all possible.  
Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

### Off-road driving

Your vehicle is not designed to be driven off-road. However, in the event that off-road driving cannot be avoided, please observe the following precautions to help avoid the areas prohibited to vehicles.

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.
- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.
- Avoid driving on very steep, slippery roads and other surfaces, such as sand, where the tires are liable to lose traction. Your vehicle may not perform as well as conventional AWD on-road vehicles on these surfaces.

 CAUTION

## ■ Off-road driving precautions

Always observe the following precautions to minimize the risk of death or serious injury or damage to your vehicle:

- Drive carefully when off the road. Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.
- After driving through tall grass, mud, rock, sand, water, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped to the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.

## 2-5. Driving information

### NOTICE

#### ■ To prevent the water damage

Take all necessary safety measures to ensure that water damage to the hybrid battery, hybrid system or other components does not occur.

- Water entering the engine compartment may cause severe damage to the hybrid system. Water entering the interior may cause the hybrid battery stowed under the rear seats to short circuit.
- Water entering the hybrid transmission will cause deterioration in transmission quality. The malfunction indicator may come on, and the vehicle may not be drivable.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the hybrid transmission case, reducing the gear oil's lubricating qualities.

### NOTICE

#### ■ When you drive through water

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the river bed for firmness. Drive slowly and avoid deep water.

#### ■ Inspection after off-road driving

- Sand and mud that has accumulated around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of off-road driving that has taken you through rough terrain, sand, mud, or water.

## 2-5. Driving information

### Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

- Stow cargo and luggage in the luggage compartment whenever possible.
- Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.

#### CAUTION

##### ■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

##### ■ Storage precautions

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack cargo and luggage in the luggage compartment higher than the seatbacks.  
Such items may be thrown about and possibly injure people in the vehicle in the event of sudden braking or in an accident.

**⚠ CAUTION**

● Do not place cargo or luggage in or on the following locations as the items may get under the brake or accelerator pedal and prevent the pedals from being depressed properly, block the driver's vision, or hit the driver or passengers, causing an accident:

- At the feet of the driver
- On the front passenger or rear seats (when stacking items)
- On the luggage cover
- On the instrument panel
- On the dashboard

● Secure all items in the occupant compartment, as they may shift and injure someone in the event of sudden braking, sudden swerving or an accident.

● Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

■ Load and distribution

● Do not overload your vehicle.


● Do not apply loads unevenly.

Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

■ Roof luggage carrier precautions

To use the roof rails as a roof luggage carrier, you must fit the roof rails with two or more genuine Lexus cross rails or their equivalent.

When you load cargo on the roof luggage carrier, observe the following:

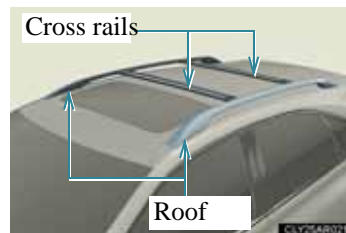

● Place the cargo so that its weight is distributed evenly between the front and rear axles.

● If loading long or wide cargo, never exceed the vehicle's overall length or width.

(→P. 600)

 CAUTION

- Before driving, make sure the cargo is securely fastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of gravity of the vehicle higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise the result may be a loss of control or vehicle rollover due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for long distances, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.
- Do not exceed 75 kg (165 lb.) cargo weight on the roof luggage carrier.

 NOTICE

- When loading cargo  
Be careful not to scratch the surface of the moon roof.

## 2-5. Driving information

### Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

#### ■ Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine/power control unit coolant
  - Washer fluid
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

#### ■ Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Remove any ice that has accumulated on the vehicle chassis.

- When driving the vehicle

Accelerate the vehicle slowly and drive at a reduced speed suitable to the road conditions.

- When parking the vehicle


Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If necessary, block the wheels to prevent inadvertent sliding or creeping.

2

When driving

### Selecting tire chains

Use the correct tire chain size when mounting the tire chains. Chain size is regulated for each tire size.

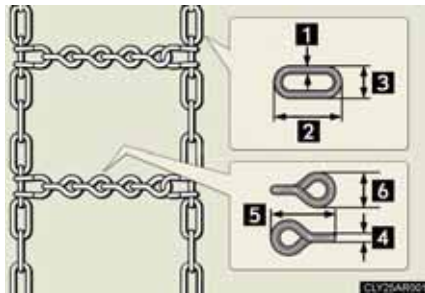

#### Side chain

- 1 3 mm (0.12 in.) in diameter
- 2 25 mm (0.98 in.) in length
- 3 11 mm (0.43 in.) in width

#### Cross chain

- 4 4 mm (0.16 in.) in diameter
- 5 25 mm (0.98 in.) in length
- 6 14 mm (0.55 in.) in width

### Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5 — 1.0 km (1/4 — 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.

 CAUTION

■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.

■ Driving with tire chains

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden turns and braking, as use of chains may adversely affect vehicle handling.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.

## 2-5. Driving information

### Trailer towing (AWD models)

The strain of towing a trailer will have a negative impact on the running performance, handling, fuel consumption and endurance of your vehicle. Use the vehicle features in the correct manner and operate the vehicle with care for safer driving and optimal comfort. Damage and/or malfunctions that occur as a result of towing performed for commercial purposes are not covered by the Lexus warranty.

Ask your local authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further details before towing, as there are additional legal requirements in some countries.

#### ■ Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P. 600)

#### ■ Towing hitch/bracket


Lexus recommends the use of the Lexus hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

#### ■ To prevent an accident

The handling of the vehicle will feel different when towing a trailer. Beware of the 3 most common causes of towing-related accidents: driver error, excessive speed, and overload-

### Important points regarding trailer loads

#### ■ Total trailer weight and permissible drawbar load

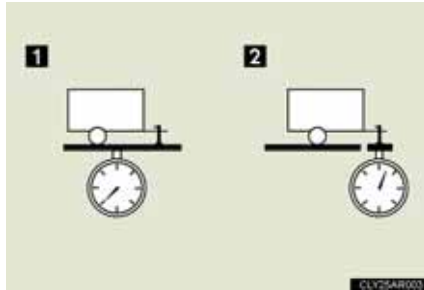

#### 1 Total trailer weight

Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P. 600)

When towing a trailer, use a friction coupler or friction stabilizer (sway control device).


When the total trailer weight is greater than the vehicle weight, we recommended the use of a friction stabilizer (sway control device).

#### 2 Permissible drawbar load

Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight. (→P. 600)


■ Information tag (manufacturer's label)

▶ Type A

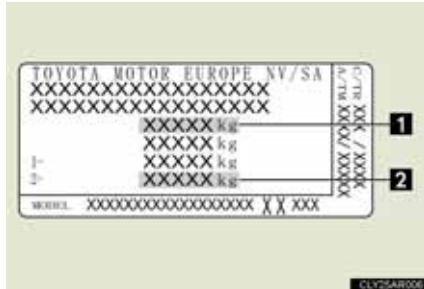

- 1 Gross vehicle mass
- 2 Maximum permissible rear axle capacity

▶ Type B

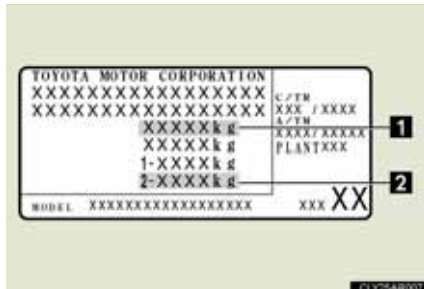

- 1 Gross vehicle mass
- 2 Maximum permissible rear axle capacity

■ Gross vehicle mass

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

■ Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible axle capacity by 15% or more. Exceeding this weight is dangerous.


The values for towing capacity were derived from testing conducted at sea level. Take note that engine output and towing capacity will be reduced at high altitudes.

2


When driving

Installation positions for the towing hitch/bracket and hitch ball


► Vehicles without electronically modulated air suspension

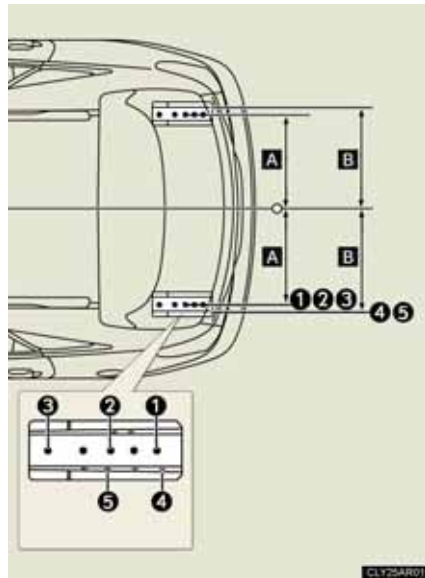


- A** 528 mm (20.8 in.)
- B** 563 mm (22.2 in.)
- C** 1107 mm (43.6 in.)
- D** 363 mm (14.3 in.)
- E** 352 mm (13.9 in.)
- F** 461 mm (18.1 in.)
- G** 467 mm (18.4 in.)
- H** 596 mm (23.5 in.)
- I** 54 mm (2.1 in.)
- J** 89 mm (3.5 in.)
- K** 111 mm (4.4 in.)
- L** 235/60R18 tires  
358 mm (14.1 in.)
- M** 235/55R19 tires  
360 mm (14.2 in.)

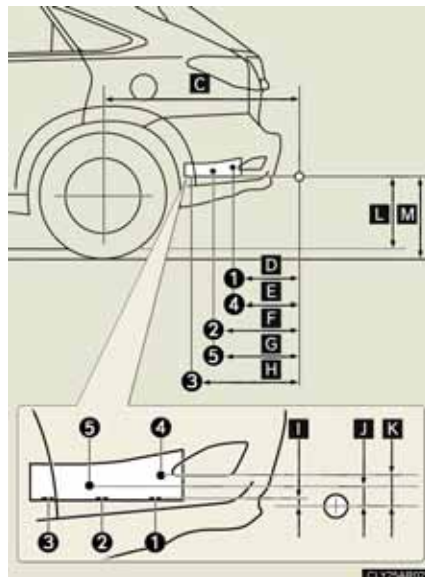

► Vehicles with electronically modulated air suspension

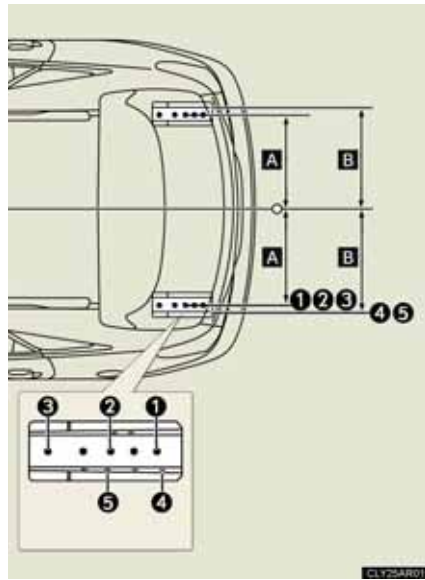

- A** 528 mm (20.8 in.)
  - B** 563 mm (22.2 in.)
  - C** 1107 mm (43.6 in.)
  - D** 363 mm (14.3 in.)
  - E** 352 mm (13.9 in.)
  - F** 461 mm (18.1 in.)
  - G** 467 mm (18.4 in.)
  - H** 596 mm (23.5 in.)
  - I** 54 mm (2.1 in.)
  - J** 89 mm (3.5 in.)
  - K** 111 mm (4.4 in.)
  - L** 235/60R18 tires  
414 mm (16.3 in.)\*
  - M** 235/55R19 tires  
416 mm (16.4 in.)\*
- \*: N mode

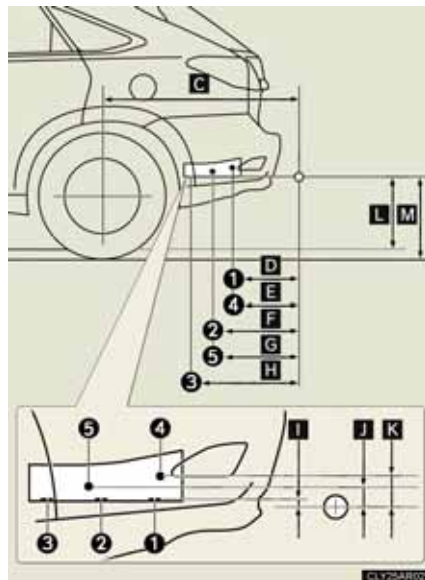

---

■ When connecting and disconnecting a trailer (vehicles with electronically modulated air suspension)

● Connecting

**STEP 1** Set the electronically modulated air suspension to LO mode.

**STEP 2** Press the height control off switch to turn off the electronically modulated air suspension.

**STEP 3** Turn off the “POWER” switch.

**STEP 4** Connect the trailer.

**STEP 5** Turn on the “POWER” switch.

**STEP 6** Press the height control off switch again to turn on the electronically modulated air suspension.

**STEP 7** Set the electronically modulated air suspension to N mode.

● Disconnecting

**STEP 1** Set the electronically modulated air suspension to LO mode.

**STEP 2** Press the height control off switch to turn off the electronically modulated air suspension.

**STEP 3** Turn off the “POWER” switch.

**STEP 4** Set the supporting leg of the trailer on the ground and raise the hitch by 100 mm (4 in.)

**STEP 5** Turn on the “POWER” switch.

**STEP 6** Press the height control off switch again to turn on the electronically modulated air suspension.

**STEP 7** Wait until vehicle height is stabilized.

Make sure the hitch is disconnected. If the hitch does not disconnect, raise the hitch higher and repeat steps 2 through 7.

#### ■ Tire information

- Ensure that your vehicle's tires are properly inflated. Adjust the tire pressure to the recommended pressure. (→P. 610)
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

#### ■ Trailer lights

Check that the turn signal lights and stoplights are operating correctly every time you hitch up the trailer. Directly wiring up to your vehicle may damage the electrical system and stop the lights from functioning correctly.

#### ■ Break-in schedule

Lexus recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

#### ■ Safety checks before towing

- Check that the maximum load limit for the towing hitch/bracket hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that you will not be towing a load that exceeds the maximum permissible axle capacity.
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.

#### ■ Maintenance

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

### Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

■ **Checking connections between trailer and lights**

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

■ **Practicing driving with a coupled trailer**

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

■ **Increasing vehicle-to-vehicle distance**

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

■ **Sudden acceleration/steering input/cornering**

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

**■ Important points regarding turning**

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

**■ Important points regarding stability**

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

**■ Passing other vehicles**

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

**■ Hybrid transmission information**

Refrain from driving in 4 range in S mode to maintain engine braking efficiency and the charge performance of electrical components when using engine braking.

**■ If the engine overheats**

Towing a loaded trailer up a long, steep incline in temperatures exceeding 30°C (85°F) may result in the engine overheating. If the engine coolant temperature gauge indicates that the engine is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. (→P. 591)

**■ When parking the vehicle**

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P.

 CAUTION

- When the gross vehicle mass limit or maximum permissible axle capacity is exceeded  
Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is the lower.
- Vehicle speed while towing  
Observe the legal maximum speeds for trailer towing.
- Before descending hills or long declines  
Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.
- Operation of the brake pedal  
Do not hold the brake pedal depressed often or for long periods of time. Doing so may result in the brake overheating or reduce braking effects.
- To avoid accident or injury
  - For vehicles with electronically modulated air suspension, set the vehicle height to LO mode and turn off the electronically modulated air suspension to prevent the vehicle height from automatically changing.
  - Do not use cruise control when you are towing.
  - Do not tow the vehicle with the compact spare tire installed.

 NOTICE

■ When the rear bumper strengthening material is aluminum

Ensure the steel bracket part does not come directly in contact with that area.

When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

2

When driving

## 2-5. Driving information

### Trailer towing (2WD models)

Lexus does not recommend towing a trailer with your vehicle. Lexus also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.





---

3-1. Using the air conditioning system and defogger	
Automatic air conditioning system.....	322
Rear window defogger switch.....	330
Windshield wiper de-icer.	331
3-2. Using the audio system	
Audio system .....	332
Using the radio.....	335
Using the CD player .....	339
Playing MP3 and WMA discs .....	346
Operating an iPod .....	353
Operating a USB memory	361
Optimal use of the audio system .....	369
Using the AUX port.....	371
Using the steering wheel audio switches .....	373

- 3-3. Using the Bluetooth®
  - audio system
  - Bluetooth® audio system . 376
  - Using the Bluetooth®
    - audio system ..... 380
  - Operating a Bluetooth®
    - enabled portable player.. 383
  - Setting up a Bluetooth®
    - enabled portable player.. 386
  - Bluetooth® audio system
    - setup ..... 390
  
- 3-4. Using the hands-free
  - phone system
    - (for mobile phones)
  - Hands-free system for
    - mobile phones ..... 391
  - Using the hands-free
    - system
      - (for mobile phones)..... 397
    - Making a phone call..... 403
    - Setting a mobile phone .... 407
    - Security and system setup 411
    - Using the phone book ..... 417
  
- 3-5. Using the interior lights
  - Interior lights list ..... 423
    - Interior lights ..... 424
    - Personal lights ..... 425
  
- 3-6. Using the storage features
  - List of storage features .... 426
    - Glove box ..... 427
    - Bottle holders/door
      - pockets ..... 428
    - Cup holders..... 430
    - Console box ..... 432
    - Auxiliary box..... 434
    - Under tray ..... 435
  
- 3-7. Other interior features
  - Sun visors ..... 436
  - Vanity mirror..... 437
  - Clock..... 438
  - Outside temperature
    - display..... 439
  - Multi-display light
    - control..... 440
  - Power outlets ..... 441
  - Seat heaters and
    - ventilators ..... 443
  - Armrest ..... 445
  - Coat hooks ..... 446
  - Floor mat..... 447
  - Luggage compartment
    - features ..... 448

### 3-1. Using the air conditioning system and defogger

## Automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.


► Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

► Vehicles without a navigation system

The illustration below is for left-hand drive vehicles.


The button positions and shapes may differ slightly for right-hand drive vehicles.

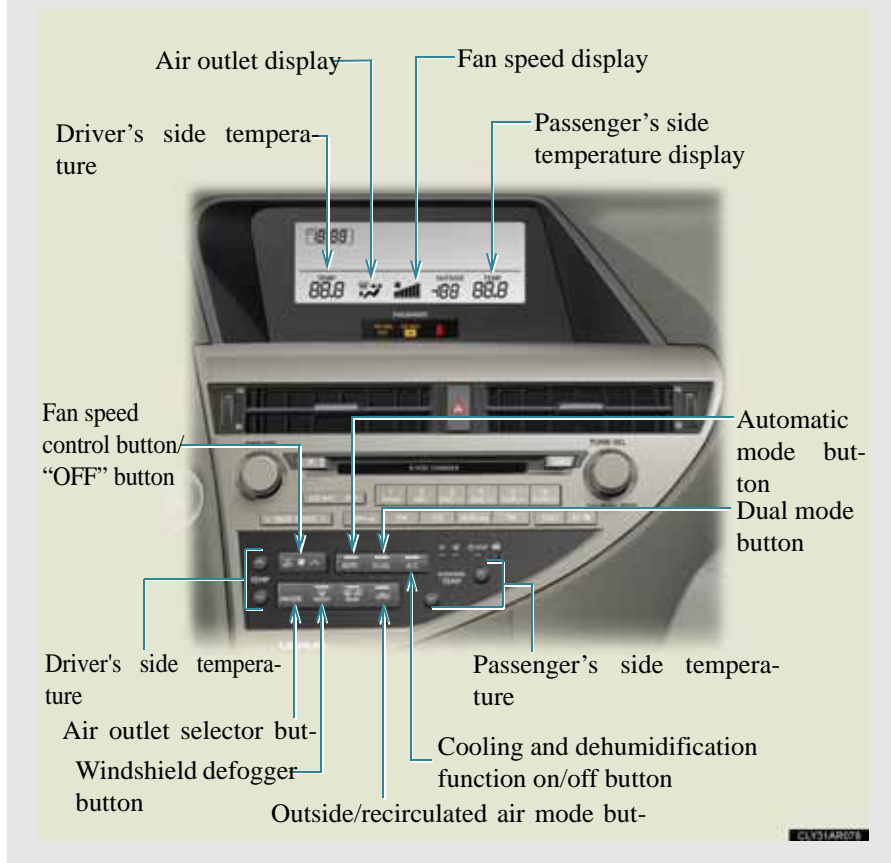



### Using the automatic air conditioning system

**STEP 1** Press  .


The air conditioning system begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.


**STEP 2** Press “^” on  to increase the temperature and “v” to decrease the temperature.


When  is pressed (the indicator on  is on) or the passenger’s side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.



### Adjusting the settings manually


#### ■ Basic setting

**STEP 1** To turn on the air conditioning system and adjust the fan speed, press “^” on  to increase the fan speed and “OFF v” to decrease the fan speed.

To turn the fan off, press and hold “OFF v” on  .


**STEP 2** To adjust the temperature setting, press “^” on  to increase the temperature and “v” to decrease the temperature.

When  is pressed (the indicator on  is on) or the passenger’s side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.

**STEP 3** To change the air outlets, press  .

The air outlets used are switched each time the button is pressed. The air flow shown on the display indicates the following:


3-1. Using the air conditioning system and defogger

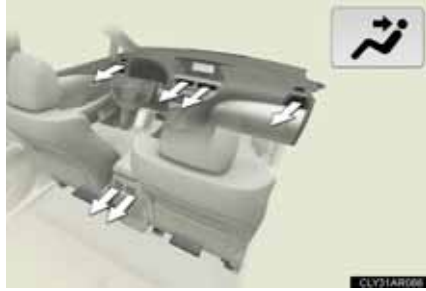


Air flows to the upper body.



Air flows to the upper body and feet.

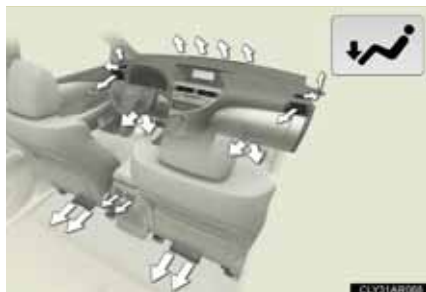

Air flows to the feet.

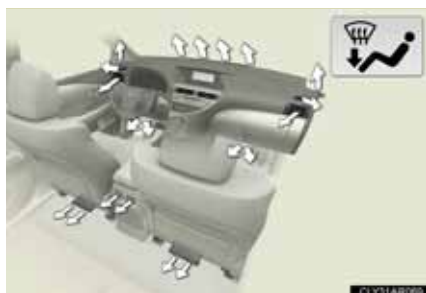

Air flows to the feet and the windshield defogger operates.

■ Switching between outside air and recirculated air modes

Press  .

The mode switches between outside air mode (the indicator is off) and recirculated air mode (the indicator is on) each time the button is pressed.

Defogging the windshield



Defogging


The air conditioning system operates automatically.

Recirculated air mode will automatically switch to outside air mode.

### 3-1. Using the air conditioning system and defogger

#### Adjusting the position of and opening and closing the air outlets

##### ► Front center outlets

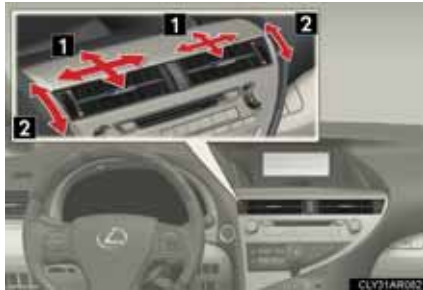

- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

##### ► Front side outlets



- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

##### ► Rear outlets



- 1 Direct air flow to the left or right, up or down.
- 2 Turn the knob to open or close the vent.

■ Operation of the air conditioning system in Eco drive mode

In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

■ Customization

The air conditioning control of Eco drive mode can be changed to the same setting as that used in normal drive mode.  
(Customizable features →P. 617)

■ Air conditioning system settings

When the “POWER” switch is turned on, the air conditioning system settings will be set to those that were in use the last time the “POWER” switch was turned off.

- Air conditioning system settings are memorized individually on each electronic key, so the settings reproduced will be specific to the key that is used.
- This feature is customizable at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and ambient conditions. As a result, the following may occur:

Immediately after the button is pressed, the fan may stop for a while until warm or cool air is ready to flow.

■ Using the system in recirculated air mode

The windows will fog up more easily if recirculated air mode is used for an extended period.

■ Switching between outside air and recirculated air modes


Recirculated air mode or outside air mode may be automatically switched to in accordance with the temperature setting and the inside temperature.

### 3-1. Using the air conditioning system and defogger


#### ■ Window defogger feature

Recirculated air mode may automatically switch to outside air mode in situations where the windows need to be defogged.

#### ■ When outside air temperature is below 0°C (32°F)

The cooling and dehumidification function may not operate even when  is pressed.

#### ■ When the indicator light on flashes


Press  to turn off the cooling and dehumidification function and turn it on again. There may be a problem in the air conditioning control system if the indicator light continues to flash. Turn the air conditioning system off and have it inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ■ Air conditioning odors

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
  - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

#### CAUTION

#### ■ To prevent the windshield from fogging up

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

### 3-1. Using the air conditioning system and defogger

 NOTICE

- To prevent 12-volt battery discharge  
Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

### 3-1. Using the air conditioning system and defogger

## Rear window defogger switch

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

▶ Vehicles without a navigation system



Turns the rear window and outside rear view mirror defoggers on/off

The defoggers will automatically turn off after 15 to 60 minutes. The operation time changes according to the ambient temperature and

■ Operating conditions

The “POWER” switch must be in ON mode.

■ The outside rear view mirror defoggers

Turning the rear window defogger on will turn the outside rear view mirror defoggers on.

**⚠ CAUTION**

■ When the outside rear view mirror defoggers are on

Do not touch the outside surface of the rear view mirrors, as they can become very hot and burn you.

### 3-1. Using the air conditioning system and defogger Windshield wiper de-icer\*

This feature is used to prevent ice from building up on the windshield and wiper blades.

▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

▶ Vehicles without a navigation system



Turns the windshield wiper de-icer on/off

The windshield wiper de-icer will automatically turn off after approximately 15 minutes.

■ Operating conditions

The “POWER” switch must be in ON mode.

**⚠ CAUTION**

■ When the windshield wiper de-icer is on

Do not touch the lower part of the windshield or the side of the front pillars, as the surfaces can become very hot and burn you.

\*: If equipped

### 3-2. Using the audio system

## Audio system

#### ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

#### ▶ Vehicles without a navigation system

CD player with a changer and AM/FM radio

The illustrations below are for left-hand drive vehicles.

The button positions and shapes may differ slightly for right-hand drive vehicles.



Title	Page
Using the radio	P. 335
Using the CD player	P. 339
Playing MP3 and WMA discs	P. 346
Operating an iPod	P. 354
Operating a USB memory	P. 362
Optimal use of the audio system	P. 370
Using the AUX port	P. 372
Using the steering wheel audio switches	P. 374

---

■ Using mobile phones

Interference may be heard through the audio system's speakers if a mobile phone is being used inside or close to the vehicle while the audio system is operating.

## 3-2. Using the audio system

### CAUTION

#### ■ Certification for the radio (for Italy)

IL PRODUTTORE PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-Ku, Tokyo, Japan DI QUESTO APPARECCHIO MODELLO 86120-48L00 (radio-CD player) DICHIARA CHE ESSO E' CONFORME AL D.M.28.08.1995 No.548, OTTEMPERANDO ALLE PRESCRIZIONI DI CUI AL D.M.25.6.1985 (PARAGRAFO 3,ALL.A) ED AL D.M.27.8.1987 (PARAGRAFO 3,ALL.I).

#### ■ Certification for the disc player with a changer

This product is a class 1 laser product.

- A laser beam leak may result in hazardous radiation exposure.
- Do not open the cover of the player or attempt to repair the unit yourself. Refer servicing to qualified personnel.
- Laser power: No hazardous

### NOTICE

#### ■ To prevent 12-volt battery discharge


Do not leave the audio system on longer than necessary when the hybrid system is off.

#### ■ To avoid damaging the audio system

Take care not to spill drinks or other fluids over the audio system.


### 3-2. Using the audio system Using the radio


The illustrations below are for left-hand drive vehicles.  
The button positions and shapes may differ slightly for right-hand drive vehicles.

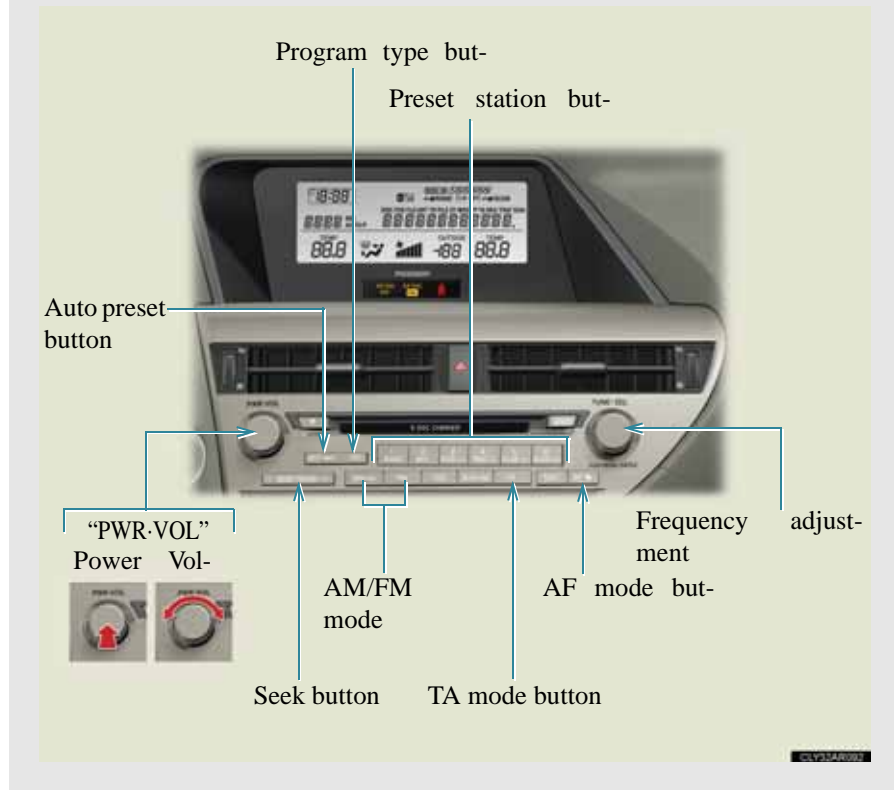



### Setting station presets

#### ■ Manual operation

**STEP 1** Search for the desired stations by turning  or pressing

“^” or “v” on .

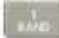**STEP 2** Press and hold the button (from  to ) the station is to be set to until you hear a beep.

#### ■ Automatic operation

Press and hold  until you hear a beep.

Up to 6 stations are set in order of reception quality. When the setting is complete, 2 beeps will be heard.

In FM1 or FM2 mode, the stations automatically set by the audio system will be set in the FM3 presets.

### RDS (Radio Data System)


This feature allows your radio to receive station and program information (classical, news, etc.) from radio stations which broadcast this information.

#### ■ Listening to stations of the same network

Press .


“AF-ON”, “REG-OFF” modes: A station among those of the same network with strong reception is selected.

“AF-ON”, “REG-ON” modes: A station among those of the same network with strong reception and broadcasting the same program is selected.

Each time  is pressed, the mode changes in the following order: “AF-ON”, “REG-OFF”→“AF-ON”, “REG-ON”→“AF-OFF”, “REG-OFF”

### ■ Selecting a program type

Press .

Each time  is pressed, the program type changes in the following order: “NEWS”→“SPORTS”→“TALK”→“POP”→“CLASSICS”

### ■ Traffic information


Press .

**TP mode:** The system automatically switches to traffic information when a broadcast with a traffic information signal is received.

The station returns to the previous one when the traffic information ends.

**TA mode:** Traffic information can be heard only when a signal is received. The system switches to mute mode when a signal is not received. In CD or MP3/WMA mode, the system automatically switches to traffic information when a signal is received.

The audio system returns to mute, CD or MP3/WMA mode when the traffic information ends.

Audio system mode changes as follows each time  is pressed:

FM modes: “TP”→“TA”→off

Modes other than radio modes: “TA”→off

### ■ Emergency broadcast reception mode

“ALARM” appears in the display in the event that an emergency broadcast is received, and the emergency broadcast is aired.

---

■ EON (Enhanced Other Network) system (for traffic announcement function)

If the RDS station (with EON data) you are listening to is not broadcasting a traffic information program and the audio system is in TA (Traffic announcement) mode, the radio will be switched automatically to a station broadcasting a traffic information program in the EON AF list when traffic information begins.

■ When the 12-volt battery is disconnected

All preset stations are erased.

■ Reception sensitivity


- It is difficult to maintain perfect radio reception at all times due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains and transmitters.
- When **AST** is used, automatic station selection and automatic registering of the stations may not be possible.
- The radio antenna is mounted inside the rear spoiler and the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

■ Digital Audio Broadcast (DAB) radio

The optional radio antenna and tuner are necessary for the use of Digital Audio Broadcast (DAB) radio.

### 3-2. Using the audio system Using the CD player

The illustrations below are for left-hand drive vehicles.  
The button positions and shapes may differ slightly for right-hand drive vehicles.

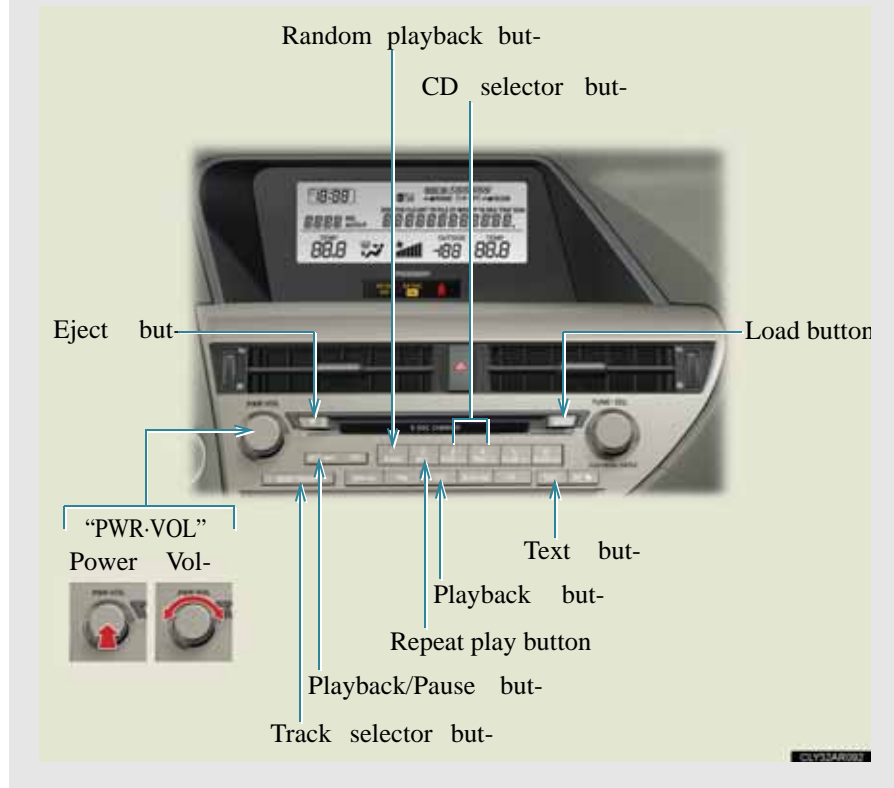

### Loading a CD

#### ■ Loading a CD

**STEP 1** Press .

“WAIT” is shown on the display.

**STEP 2** When the indicator on the slot turns from amber to green, insert a CD.

The display changes from “WAIT” to “LOAD”.

#### ■ Loading multiple CDs

**STEP 1** Press and hold  until you hear a beep.

“WAIT” is shown on the display.


**STEP 2** When the indicator on the slot turns from amber to green, insert a CD.

The display changes from “WAIT” to “LOAD”.

The indicator on the slot turns to amber when the CD is being inserted.

**STEP 3** When the indicator on the slot turns from amber to green, insert the next CD.

Repeat the procedure for the remaining CDs.

To cancel the operation, press . If you do not insert a disc within 15 seconds, loading will be canceled automatically.

### Ejecting CDs

#### ■ Ejecting a CD



To select the CD to be ejected, press or .

The selected disc number is shown on the display.

**STEP 2** Press and remove the CD.

#### ■ Ejecting all the CDs

Press and hold until you hear a beep, and then remove the CDs.

### Selecting, fast-forwarding and reversing tracks

#### ■ Selecting a track

Press “^” to move up or “v” to move down using until the desired track number is displayed.

#### ■ Fast-forwarding and reversing tracks

To fast-forward or reverse, press and hold “^” or “v” on until you hear a beep.

### Selecting a CD

To select the desired CD, press or .

### Playing and pausing tracks


To play or pause a track, press .

### Random playback

#### ■ Current CD

Press .


Songs are played in random order.

To cancel, press  again.

#### ■ All CDs

Press and hold  until you hear a beep.


Tracks on all loaded CDs are played in random order.

To cancel, press  again.

### Repeat play


#### ■ Repeating a track

Press .

To cancel, press  again.

#### ■ Repeating all of the tracks on a CD

Press and hold  until you hear a beep.

To cancel, press  again.

### Switching the display

Press .

Each time the button is pressed, the display changes in the following order:

Elapsed time → CD title → Track title

### ■ CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected.

### ■ Display

Up to 12 characters can be displayed at a time.

If there are 13 or more characters, pressing and holding **TEXT** until you hear a beep enables to display the remaining characters.

A maximum of 24 characters can be displayed.

If **TEXT** is pressed until you hear a beep again or has not been operated for more than 6 seconds, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

### ■ When “ERROR” or “WAIT” is shown on the display

“ERROR”: This indicates a trouble either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

“WAIT”: This indicates that operation is stopped due to a high temperature inside the player. Wait for a while and then press **CD**. If the CD still cannot be played back, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### ■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



CDs with copy-protection features may not be used.

### ■ Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

### ■ If discs are left inside the CD player or in the ejected position for extended periods of time

The discs may be damaged and may not play properly.

## 3-2. Using the audio system

### NOTICE

#### ■ CDs and adapters that cannot be used

Do not use the following types of CDs, 8 cm (3 in.) CD adapters or Dual Discs.

Doing so may damage the CD player and/or the CD load/eject function.



- CDs that have a diameter that is not 12 cm (4.7 in.)



- Low-quality and deformed CDs



- CDs with a transparent or translucent recording area



- CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off

 NOTICE

■ CD player precautions


Failure to follow the precautions below may result in serious damage to the CDs or the player itself.

- Do not insert anything other than CDs into the CD slot.
- Do not apply oil to the CD player.
- Store CDs away from direct sunlight.
- Never try to disassemble any part of the CD player.
- Do not insert more than one CD at a time.



### 3-2. Using the audio system Playing MP3 and WMA discs

The illustrations below are for left-hand drive vehicles.  
The button positions and shapes may differ slightly for right-hand drive vehicles.

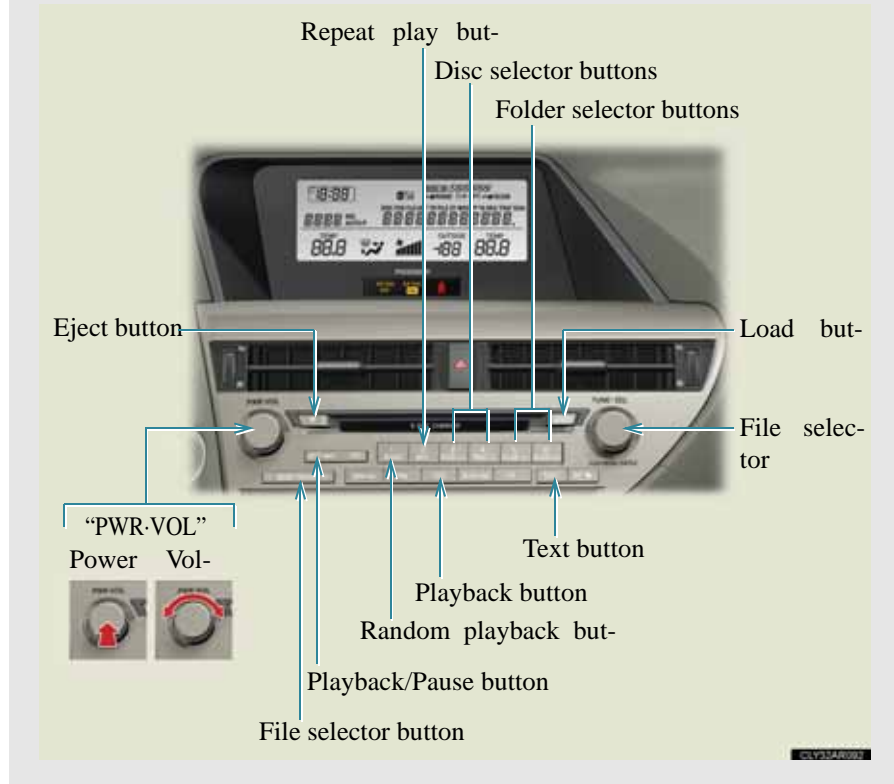




**Loading and ejecting MP3 and WMA discs**

→P. 340, 341


**Selecting MP3 and WMA discs**

→P. 341



**Selecting a folder**

- Selecting a folder one at a time  
Press  or  to select the desired folder.
- Returning to the first folder  
Press and hold  until you hear a beep.


**Fast-forwarding and reversing files**

To fast-forward or reverse, press and hold “^” or “v” on  until you hear a beep.

**Selecting files**

Turn  or press “^” or “v” on  to select the desired file.


**Playing and pausing files**

To play or pause a file, press .

### Random playback


- Playing files from a folder in random order

Press .

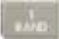To cancel, press  again.

- Playing all the files from a disc in random order


Press and hold  until you hear a beep.

To cancel, press  again.

### Repeat play


- Repeating a file

Press .

To cancel, press  again.

- Repeating all the files in a folder

Press and hold  until you hear a beep.

To cancel, press  again.

### Switching the display

Press .

Each time the button is pressed, the display changes in the following order: Folder no./File no./Elapsed time → Folder name → File name → Album title (MP3 only) → Track title → Artist name

---

■ CD player protection feature


→P. 343

■ Display

→P. 343

■ When “ERROR”, “WAIT” or “NO MUSIC” is shown on the display

“ERROR”: This indicates a problem either in the CD or inside the player. The CD may be dirty, damaged, or inserted up-side down.

“WAIT”: This indicates that operation is stopped due to a high temperature inside the player. Wait for a while and then press . If the CD still cannot be played back, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

“NO MUSIC”: This indicates that an MP3/WMA file is not included in the CD.

■ Discs that can be used

→P. 343

■ Lens cleaners

→P. 343

■ If discs are left inside the CD player or in the ejected position for extended periods of time

→P. 343

■ MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

● MP3 file compatibility

- Compatible standards  
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies  
MPEG1 LAYER3: 32, 44.1, 48 (kHz)  
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)  
MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)  
MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

● WMA file compatibility

- Compatible standards  
WMA Ver. 7, 8, 9
- Compatible sampling frequencies  
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)  
Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)  
Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

● Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible if the CD-R or CD-RW is not finalized. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used:

- Disc formats: CD-ROM Mode 1 and Mode 2  
CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)  
MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- Discs containing multi-session recordings

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

### 3-2. Using the audio system




#### NOTICE

- CDs and adapters that cannot be used  
→P. 344
- CD player precautions  
→P. 345


## 3-2. Using the audio system

Connecting an iPod enables you to enjoy music from the vehicle speakers.

### ■ Connecting an iPod

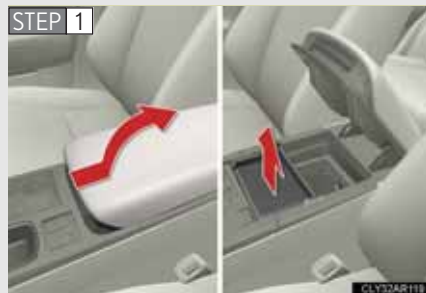

Slide the armrest while pulling up the lever, and lift the armrest. Remove the upper tray.

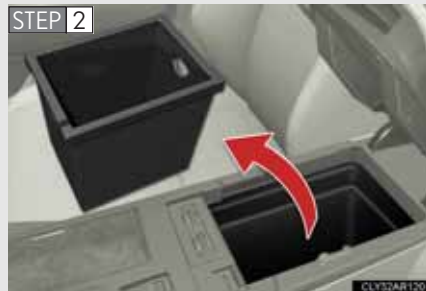

Remove the lower tray.




Open the cover and connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.


■ Control panel


The illustration below is for left-hand drive vehicles. The button positions and shapes may differ slightly for right-hand drive vehicles.

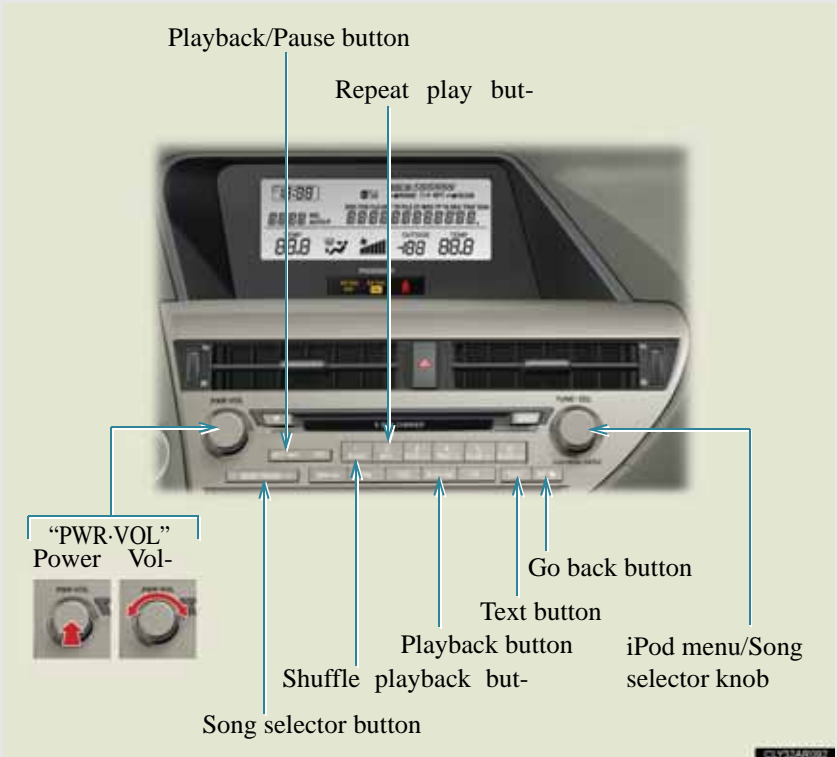

## 3-2. Using the audio system

### Selecting a play mode

**STEP 1** Press  to select iPod menu mode.

**STEP 2** Turning  changes the play mode in the following

order:

“PLAYLISTS”→“ART-  
ISTS”→“ALBUMS”→“SONGS”→  
“PODCASTS”→“GENRES”→“COMPOSERS”→  
“AUDIOBOOKS”

**STEP 3** Press  to select the desired play mode.

### ■ Play mode list


Play mode	First selection	Second selection	Third selection	Fourth selection
“PLAY-LISTS”	Playlists select	Songs select	-	-
“ARTISTS”	Artists select	Albums select	Songs select	-
“ALBUMS”	Albums select	Songs select	-	-
“SONGS”	Songs select	-	-	-
“POD-CASTS”	Albums select	Songs select	-	-
“GENRES”	Genre select	Artists select	Albums select	Songs select
“COMPOSERS”	Composers select	Albums select	Songs select	-
“AUDIO-BOOKS”	Songs select	-	-	-

3

Interior features


### ■ Selecting a list

**STEP 1** Turn  to display the first selection list.

**STEP 2** Press  to select the desired item.



Pressing the knob changes to the second selection list.

**STEP 3** Repeat the same procedure to select the desired item.


To return to the previous selection list, select “GO BACK” or press .

## 3-2. Using the audio system


### Selecting songs

Turn  or press “^” or “v” on  to select the desired song.

### Playing and pausing songs

To play or pause a song, press .


### Fast-forwarding and rewinding songs

To fast-forward or rewind, press and hold “^” or “v” on  until you hear a beep.

### Shuffle playback


- Playing songs from one playlist or album in random order

Press .

To cancel, press  again.


- Playing songs from all the playlists or albums in random order

Press and hold  until you hear a beep.

To cancel, press  again.

### Repeat play

Press .


To cancel, press  again.


### Switching the display

Press .

Each time the button is pressed, the display changes in the following order: Elapsed time → Album title → Track title → Artist name

### Adjusting sound quality and volume balance

**STEP 1** Press  to enter iPod menu mode.

**STEP 2** Pressing  changes sound modes. (→P. 370)

#### ■ About iPod

- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

#### ■ iPod functions

- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- While connected to the system, the iPod cannot be operated with its own controls. It is necessary to use the controls of the vehicle's audio system instead.

#### ■ iPod problems

To resolve most problems encountered when using your iPod, disconnect your iPod from the vehicle iPod connection and reset it. For instructions on how to reset your iPod, refer to your iPod Owner's Manual.

#### ■ Display

→P. 343

## 3-2. Using the audio system

### ■ Routing portable audio device cables



When the cover is slid open, portable audio device cables can be pulled through the opening.

### ■ Error messages

“ERROR”: This indicates a problem in the iPod or its connection.

“NO MUSIC”: This indicates that there is no music data in the iPod.

“EMPTY”: This indicates that some available songs are not found in a selected playlist.

“UPDATE”: This indicates that the version of the iPod is not compatible. Upgrade your iPod software to the latest version.

### 3-2. Using the audio system

#### ■ Compatible models

Model	Generation	Software version
iPod	5th generation	Ver. 1.2.0 or higher
iPod nano	1st generation	Ver. 1.3.0 or higher
	2nd generation	Ver. 1.1.2 or higher
	3rd generation	Ver. 1.0.0 or higher
iPod touch	1st generation	Ver. 1.1.0 or higher
iPod classic	1st generation	Ver. 1.0.0 or higher

Depending on differences between models or software version etc., some models listed above might be incompatible with this system.

iPod 4th generation and earlier models are not compatible with this system.  
iPhone, iPod mini, iPod shuffle and iPod photo are not compatible with this system.

Items related to standards and limitations are as follows:

- Maximum number of lists in device: 9999
- Maximum number of songs in device: 65535
- Maximum number of songs per list: 65535

#### CAUTION

- Caution while driving  
Do not connect iPod or operate the controls.


#### NOTICE

- To prevent damage to iPod
  - Do not leave iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
  - Do not push down on or apply unnecessary pressure to the iPod while it is connected as this may damage the iPod or its terminal.
  - Do not insert foreign objects into the port as this may damage the iPod or its terminal.


## 3-2. Using the audio system

Connecting a USB memory enables you to enjoy music from the vehicle speakers.

### ■ Connecting a USB memory

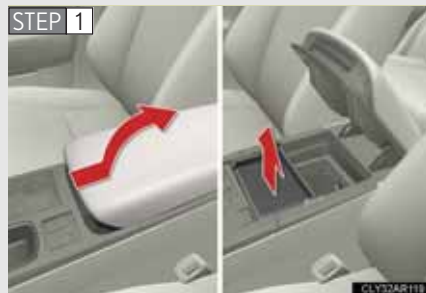

Slide the armrest while pulling up the lever, and lift the armrest. Remove the upper tray.

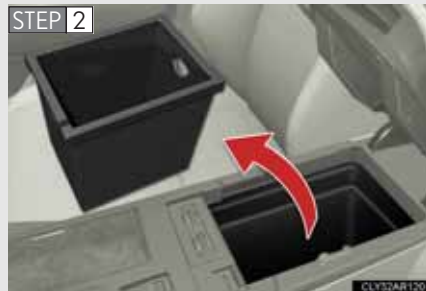

Remove the lower tray.




Open the cover and connect a USB memory.

Turn on the power of the USB memory if it is not turned on.




**STEP 4** Press .

■ Control panel

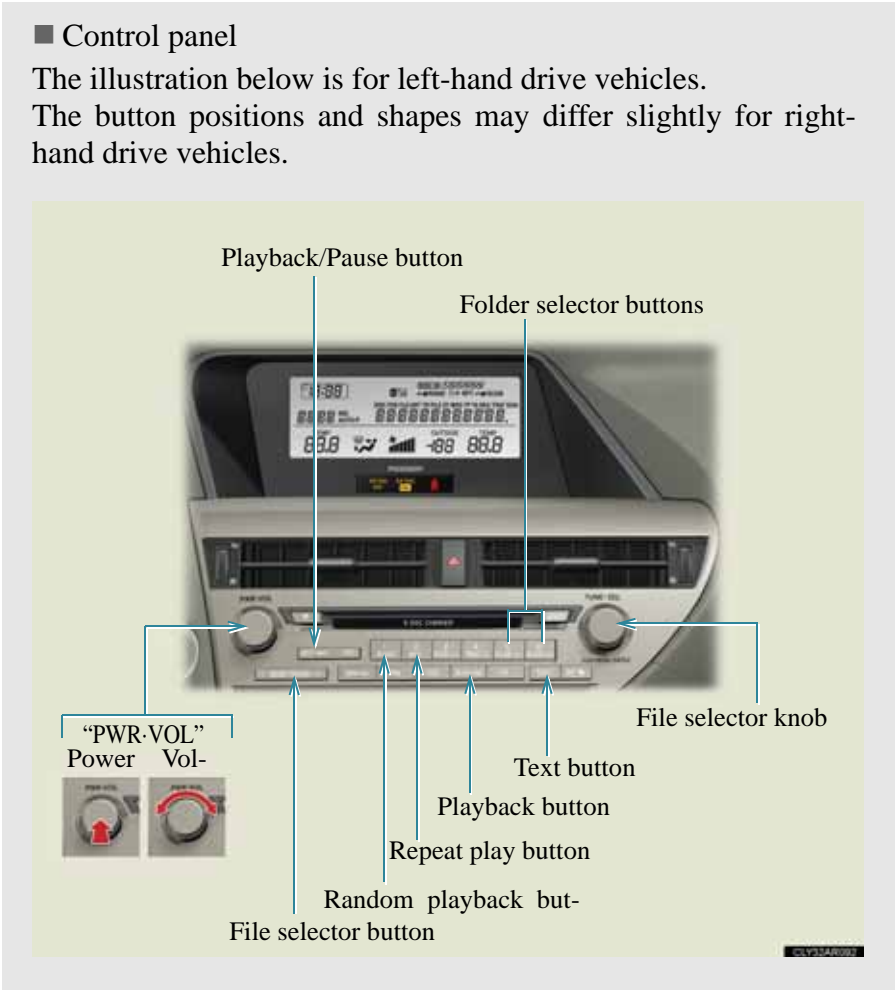

The illustration below is for left-hand drive vehicles.  
The button positions and shapes may differ slightly for right-hand drive vehicles.




### Selecting a folder

- Selecting folders one at a time  
Press  or  to select the desired folder.
- Returning to the first folder  
Press and hold  until you hear a beep.


### Selecting files

Turn  or press “^” or “v” on  to select the desired file.





### Playing and pausing files

To play or pause a file, press .

### Fast-forwarding and rewinding files

To fast-forward or rewind, press and hold “^” or “v” on  until you hear a beep.


### Random playback

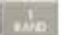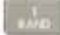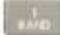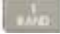- Playing files from a folder in random order  
Press .  
To cancel, press  again.
- Playing all the files from a USB memory in random order  
Press and hold  until you hear a beep.  
To cancel, press  again.

### Repeat play


#### ■ Repeating a file

Press .

To cancel, press  again.

#### ■ Repeating all the files in a folder

Press and hold  until you hear a beep.

To cancel, press  again.

### Switching the display

Press .

Each time the button is pressed, the display changes in the following order: Elapsed time → Folder name → File name → Album title (MP3 only) → Track title → Artist name

#### ■ USB memory functions

- Depending on the USB memory that is connected to the system, the device itself may not be operable and certain functions may not be available. If the device is inoperable or a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- If the USB memory still does not begin operation after being disconnected and reconnected, format the memory.

#### ■ Display

→P. 343

#### ■ Routing portable audio device cables

→P. 360

#### ■ Error messages

“ERROR”: This indicates a problem in the USB memory or its connection.

“NO MUSIC”: This indicates that no MP3/WMA files are included in the USB memory.

■ USB memory

● Compatible devices

USB memories that can be used for MP3 and WMA playback

● Compatible device formats

The following device formats can be used:

- USB communication formats: USB2.0 FS (12 mbps)
- File formats: FAT16/32 (Windows)
- Correspondence class: Mass storage class

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 999 (including the root)
- Maximum number of files in a device: 65025
- Maximum number of files per folder: 255

● MP3 and WMA files

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

- MP3 file compatibility
  - Compatible standards  
MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
  - Compatible sampling frequencies  
MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz)  
MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz)  
MPEG2.5: 8, 11.025, 12 (kHz)
  - Compatible bit rates (compatible with VBR)  
MPEG1 AUDIO LAYERII, III: 32-320 (kbps)  
MPEG2 AUDIO LAYERII, III: 32-160 (kbps)  
MPEG2.5: 32-160 (kbps)
  - Compatible channel modes: stereo, joint stereo, dual channel and monaural
- WMA file compatibility
  - Compatible standards  
WMA Ver. 9
  - Compatible sampling frequencies  
HIGH PROFILE 32, 44.1, 48 (kHz)
  - Compatible bit rates  
HIGH PROFILE 32-320 (kbps, VBR)
- File names  
The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.
- ID3 and WMA tags  
ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.  
The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)  
WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

## 3-2. Using the audio system

- MP3 and WMA playback

- When a device containing MP3 or WMA files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
- When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file in the first folder. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point in which it was last used.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

 CAUTION

■ Caution while driving

Do not connect USB memories or operate the controls.


### 3-2. Using the audio system



#### NOTICE

- To prevent damage to USB memories
  - Do not leave USB memories in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
  - Do not push down on or apply unnecessary pressure to the USB memory while it is connected as this may damage the USB memory or its terminal.
  - Do not insert foreign objects into the port as this may damage the USB memory or its terminal.

## 3-2. Using the audio system



**1** Displays the current mode

**2** Changes the following settings:

- Sound quality and volume balance  
→P. 370
- Automatic Sound Levelizer on/off  
→P. 371

The sound quality and balance setting can be changed to produce the best sound.

### Adjusting sound quality and volume balance

#### ■ Changing sound quality modes



Pressing the button changes sound modes in the following order:

“BAS”→“MID”→“TRE”→“FAD”→“BAL”→“ASL”



3-2. Using the audio system  
Adjusting sound quality

Turning  adjusts the level.

Mode displayed	Sound quality mode	Level	Turn counterclockwise	Turn clockwise
“BAS”	Bass*	-5 to 5	Low	High
“MID”	Mid-range*	-5 to 5		
“TRE”	Treble*	-5 to 5		
“FAD”	Front/rear volume balance	F7 to R7	Shifts to rear	Shifts to front
“BAL”	Left/right volume balance	L7 to R7	Shifts to left	Shifts to right

\*: The sound quality level is adjusted individually in each audio mode.


Turning the Automatic Sound Levelizer (ASL) on/off

Turning  clockwise turns on the ASL, and turning  counterclockwise turns off the ASL.


ASL automatically adjusts the volume and tone quality according to the noise level as you drive your vehicle.

## 3-2. Using the audio system

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

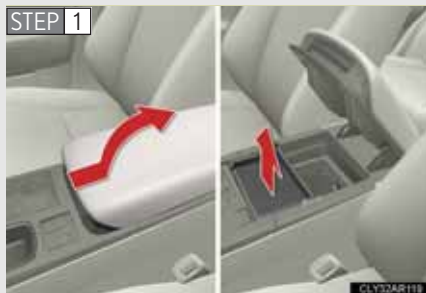

Slide the armrest while pulling up the lever, and lift the armrest. Remove the upper tray.

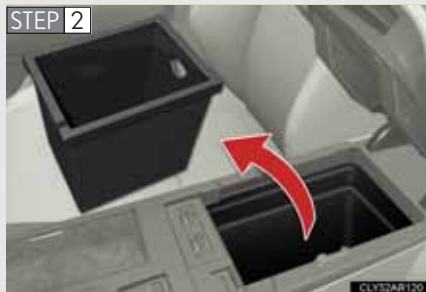

Remove the lower tray.



Open the cover and connect the portable audio device.

**STEP 4** Press  .

## 3-2. Using the audio system

---

---

- Operating portable audio devices connected to the audio system

The volume can be adjusted using the vehicle's audio controls. All other adjustments must be made on the portable audio device itself.

- When using a portable audio device connected to the power outlet

Noise may occur during playback. Use the power source of the portable audio device.

- Routing portable audio device cables

→P. 360

## 3-2. Using the audio system

Some audio features can be controlled using the switches on the steering wheel.



**1** Turns the power on, selects an audio source

**2** Increases/decreases volume

**3** Radio mode: Selects a radio station

CD mode: Selects a track, file (MP3 and WMA) and disc

Bluetooth<sup>®</sup> audio mode: Selects a track and album

iPod mode: Selects a song


USB memory mode: Selects a file and

### Turning the power on

Press  when the audio system is turned off.


The audio system can be turned off by holding the switch down until you hear a beep.

### Changing the audio source

Press  when the audio system is turned on. The audio source changes as follows each time the button is pressed. If no discs are inserted in the player, that mode will be skipped.

FM1→FM2→FM3→CD player→Bluetooth® audio→AUX→iPod or USB memory→MW→FM1

### Adjusting the volume

Press “+” on  to increase the volume and “-” to decrease the volume.

Hold down the button to continue increasing or decreasing the volume.


### Selecting a radio station


**STEP 1** Press  to select radio mode.

**STEP 2** Press “^” or “v” on  to select a radio station.

To scan for receivable stations, press and hold “^” or “v” the button until you hear a beep.


### Selecting a track/file or song


**STEP 1** Press  to select CD, Bluetooth® audio, iPod or USB memory mode.

**STEP 2** Press “^” or “v” on  to select the desired track/file or song.

## 3-2. Using the audio system


### Selecting an album

**STEP 1** Press  to select Bluetooth® audio mode.

**STEP 2** Press and hold “^” or “v” on  until you hear a beep.


### Selecting a folder

**STEP 1** Press  to select USB memory mode.

**STEP 2** Press and hold “^” or “v” on  until you hear a beep.

### Selecting a disc in the CD player

**STEP 1** Press  to select CD mode.

**STEP 2** Press and hold “^” or “v” on  until you hear a beep.

#### ■ Canceling automatic selection of a radio station

Press  again.

#### CAUTION

##### ■ To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.

### 3-3. Using the Bluetooth® audio system

## Bluetooth® audio system

The Bluetooth® audio system enables you to enjoy music played on a portable digital audio player (portable player) from the vehicle speakers via wireless communication.

This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

#### ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner's Manual”.

#### ▶ Vehicles without a navigation system

Title	Page
Using the Bluetooth® audio system	P. 380
Operating a Bluetooth® enabled portable player	P. 383
Setting up a Bluetooth® enabled portable player	P. 386
Bluetooth® audio system setup	P. 390

#### ■ Conditions under which the system will not operate

- If using a portable player that does not support Bluetooth®
- If the portable player is switched off
- If the portable player is not connected
- If the portable player's battery is low
- If the portable player is behind the seat or in the glove box or console box
- If metal is covering or touching the portable player

■ When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→ P. 415)

■ About Bluetooth®



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ Compatible models

- Bluetooth® specifications:  
Ver. 1.1, or higher (Recommended: Ver. 1.2)
- Following profiles:
  - A2DP (Advanced Audio Distribution Profile) Ver. 1.0, or higher (Conformed: Ver. 1.2)
  - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher (Conformed: Ver. 1.3)

Portable players must correspond to the above specifications in order to be connected to the Bluetooth® audio system. However, please note that some functions may be limited depending on the type of portable player.

### 3-3. Using the Bluetooth<sup>®</sup> audio system

#### ■ Certification for the Bluetooth<sup>®</sup> audio system

**Pioneer** *sound.vision.soul*



#### Manufacturer's Declaration of Conformity

**Manufacturer** Pioneer Corporation  
4-1, 1-Chome, Meguro, Meguro-Ku  
TOKYO, 153 - 8654, JAPAN

**EU Representative:** Pioneer Europe NV  
Haven 1087, Keetberglaan 1  
9120 MELSELE, BELGIUM

#### The EU Directives covered by this Declaration

1999/5/EC R&TTE Directive of the European Parliament and of the Council  
2006/95/EC Low Voltage Directive

#### The product covered by this declaration

CD RDS receiver head unit

model **86120-48G80, 86120-48J20, 86120-48L00, 86120-48L40,**

#### The basis on which conformity is being declared

The product identified above complies with the requirements of the Low Voltage Directive and the R&TTE Directive above by meeting following standards:  
EN300328 V1.7.1 : 2006, EN301489-1 V1.6.1 : 2005, EN301489-17 V1.2.1 : 2002, ISO7637-2:2004 and EN 60065:2002

The technical documentation required to demonstrate that the product meets the requirements of the LVD and R&TTE has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer.

Technical File No: KCE08-003

The CE mark was first applied in: 2008

Done at Melsele

14/07/2008

Grousse Walter  
Manager Public Affairs

PIONEER EUROPE NV  
Haven 1087 - Keetberglaan 1 - 9120 Melsele - Belgium  
Telefoon +32 (0)3 570 05 11 - Fax +32 (0)3 570 08 86 - URL <http://www.pioneer-eu.com> - BTW BE 406 999 132 - RPR Dendermonde

 CAUTION

- Caution while driving  
Do not connect portable players or operate the controls.

 NOTICE

- To prevent damage to portable players  
Do not leave portable players in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.

### 3-3. Using the Bluetooth<sup>®</sup> audio system

## Using the Bluetooth<sup>®</sup> audio system

#### ■ Audio unit

The illustration below is for left-hand drive vehicles.



The button positions and shapes may differ slightly for right-hand drive vehicles.




- 1** Display  
A message, name, number, etc. is displayed.  
Lower-case characters and special characters cannot be displayed.
- 2** Displays information that is too long to be displayed at one time on the display (press and hold)
- 3** Selects items such as menu and number  
Turn: Selects an item  
Press: Inputs the selected item
- 4** Bluetooth<sup>®</sup> connection condition  
If “BT” is not displayed, the Bluetooth<sup>®</sup> audio system cannot be used.


### Using the Bluetooth® audio system for the first time

Before using the Bluetooth® audio system, it is necessary to register a Bluetooth® enabled portable player in the system. Follow the procedure below to register (pair) a portable player:


**STEP 1** Press  and select “BT•A MENU” using .

**STEP 2** Select “BT•A Setup” using .

**STEP 3** Select “Pair Audio” using .

**STEP 4** Select “Record Name” using , and say the name to be registered after the beep.

The name to be registered will be repeated aloud.

**STEP 5** Select “Confirm” using .

A passkey will be displayed.

**STEP 6** Input the passkey into the audio player.

Refer to the manual that comes with the portable player for the operation of the portable player.

If the portable player has a Bluetooth® phone, the phone can be registered at the same time.

**STEP 7** When “Pair Phone?” is displayed, select “Yes” or “No”


using . (Bluetooth® phone → P. 394)

### 3-3. Using the Bluetooth® audio system

#### Menu list of the Bluetooth® audio system

First menu	Second menu	Third menu	Operation detail
“Setup”	“BT•A Setup”	“Pair Audio”	Registering a portable player
		“Select Audio”	Selecting a portable player to be used
		“Change Name”	Changing the registered name of a portable player
		“List Audios”	Listing the registered portable players
		“Set Passkey”	Changing the passkey
		“Delete Audio”	Deleting a registered portable player
	“System Setup”	“Guidance Vol”	Setting voice guidance volume
		“Device Name”	Displaying the Bluetooth® device address and name
		“Initialize”	Initializing the system

#### ■ Operations that cannot be performed while driving

- Operating the system with 
- Registering a portable player to the system


#### ■ Changing the passkey

→P. 389

### 3-3. Using the Bluetooth® audio system

## Operating a Bluetooth® enabled portable player

The illustrations below are for left-hand drive vehicles.  
The button positions and shapes may differ slightly for right-hand drive vehicles.

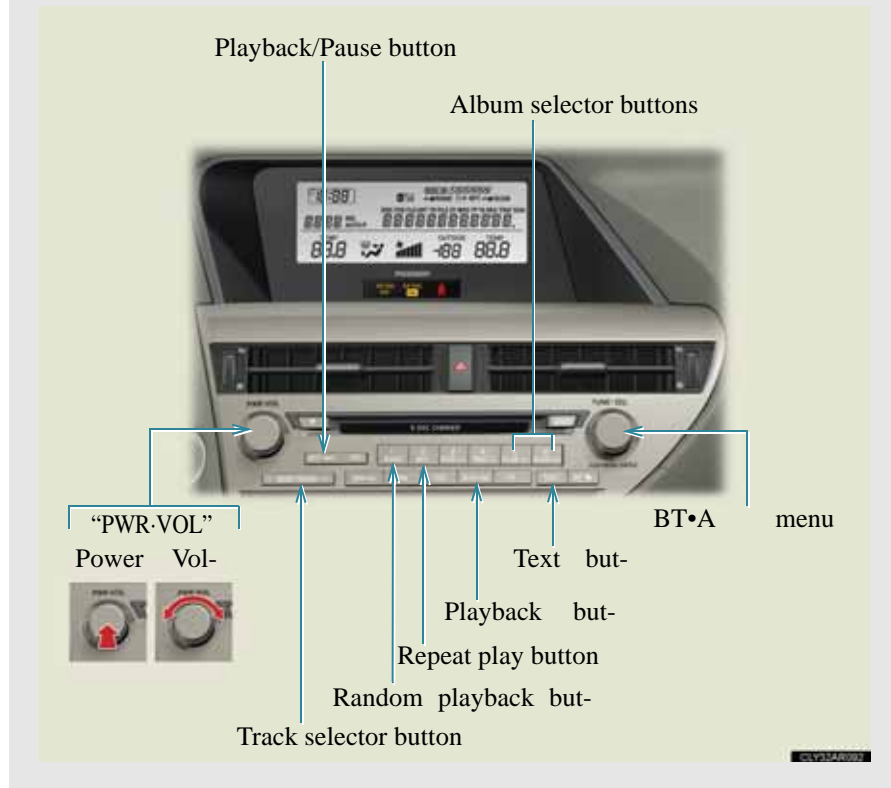

### 3-3. Using the Bluetooth® audio system


#### Selecting an album

To select the desired album, press  or .


#### Selecting tracks

Press “^” or “v” on  to select the desired track.

#### Playing and pausing tracks


To play or pause a track, press .

#### Fast-forwarding and rewinding tracks

To fast-forward or rewind, press and hold “^” or “v” on  until you hear a beep.


#### Random playback

Press .

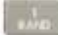To cancel, press  again.

#### Repeat play

Press .

To cancel, press  again.

#### Switching the display

Press .

Each time the button is pressed, the display changes in the following order: Elapsed time → Album title → Track title → Artist name

Using the steering wheel audio switches

→P. 374

---

■ Bluetooth® audio system functions

Depending on the portable player that is connected to the system, certain functions may not be available.

■ Display

→P. 343

■ Error messages

“Memory Error”: This indicates a problem in the system.



### 3-3. Using the Bluetooth® audio system

## Setting up a Bluetooth® enabled portable player

Registering a portable player in the Bluetooth® audio system allows the system to function. The following functions can be used for registered portable players:

#### ■ Functions and operation procedures

To enter the menu for each function, follow the steps below.


**STEP 1** Press  to select “BT•A MENU” or press the off-hook switch and select “Setup” using .

**STEP 2** Select “BT•A Setup” using .


**STEP 3** Select one of the following items using  :


- Registering a portable player  
“Pair Audio”
- Selecting a portable player to be used  
“Select Audio”
- Changing the registered name of a portable player  
“Change Name”
- Listing the registered portable players  
“List Audios”
- Changing the passkey  
“Set Passkey”
- Deleting a registered portable player  
“Delete Audio”


Registering a portable player

Select “Pair Audio” using , and perform the procedure for registering a portable player. (→P. 381)

Selecting a portable player to be used

**STEP 1** Select “Select Audio” using .


**STEP 2** Select the portable player to be used using .

**STEP 3** Select “From Car” or “From Audio” using .

If “From Car” is selected, the portable player will be automatically connected whenever the “POWER” switch is in either ACCESSORY or ON mode.


### 3-3. Using the Bluetooth® audio system

#### Changing the registered name of a portable player


**STEP 1** Select “Change Name” using .

**STEP 2** Select the desired portable player name to be changed using



**STEP 3** Select “Record Name” using , and say the new name after the beep.

The name to be registered will be repeated aloud.


**STEP 4** Select “Confirm” using .


#### Listing the registered portable players

Select “List Audios” using . The list of registered portable players will be read aloud.


When listing is complete, the system returns to “BT•A Setup”.

### Changing the passkey

**STEP 1** Select “Set Passkey” using .


**STEP 2** Select a 4 to 8-digit number using .


The number should be input 1 digit at a time.

**STEP 3** When the entire number to be registered as a passkey has been input, press  again.


If the number to be registered has 8 digits, pressing of the knob is not necessary.

### Deleting a registered portable player

**STEP 1** Select “Delete Audio” using .

**STEP 2** Select the desired portable player to be deleted using .

If the portable player to be deleted is paired as a Bluetooth® phone, the registration of the mobile phone can be deleted at the same time.

**STEP 3** When “Del Phone?” is displayed, select “Yes” or “No” using . (Bluetooth® phone → P. 394)

- The number of portable players that can be registered  
Up to 2 portable players can be registered in the system.

### 3-3. Using the Bluetooth<sup>®</sup> audio system

## Bluetooth<sup>®</sup> audio system setup

#### ■ System setup items and operation procedures

To enter the menu of each setting, follow the steps below.

**STEP 1** Press  to select “BT•A MENU” or press the off-

hook switch and select “Setup” using .

**STEP 2** Select “System Setup” using .

**STEP 3** Select one of the following items using  :

- Setting voice guidance volume  
“Guidance Vol” (→P. 414)
- Displaying the Bluetooth<sup>®</sup> device address and name  
“Device Name” (→P. 415)
- Initializing the system  
“Initialize” (→P. 415)

### 3-4. Using the hands-free phone system (for mobile phones)

## Hands-free system for mobile phones

The hands-free system is a function that allows you to use your mobile phone without touching it.

This system supports Bluetooth® mobile phones. Bluetooth® is a wireless data system that allows the mobile phone to wirelessly connect to the hands-free system and make/receive calls.

#### ▶ Vehicles with a navigation system

Owners of models equipped with a navigation system should refer to the “Navigation System Owner's Manual”.

#### ▶ Vehicles without a navigation system

##### ■ Hands-free system quick guide

**STEP 1** Setting a mobile phone. (→P. 399)

**STEP 2** Adding an entry to the phone book. (Up to 20 names can be stored) (→P. 417)

**STEP 3** Dialing by inputting a name. (→P. 404)

### 3-4. Using the hands-free phone system (for mobile phones)

Title	Page
Using the hands-free system ■ Using the hands-free phone system for the first time	P. 399
Making a phone call ■ Making a phone call <ul style="list-style-type: none"><li>• Dialing by inputting a name</li><li>• Speed dialing</li><li>• Redial</li><li>• Call back</li></ul> ■ Receiving a phone call <ul style="list-style-type: none"><li>• Answering a phone call</li><li>• Refusing a phone call</li></ul> ■ Transferring a phone call ■ Using the call history memory <ul style="list-style-type: none"><li>• Dialing</li><li>• Storing data in the phone book</li><li>• Deleting</li></ul>	P. 403
Setting a mobile phone ■ Functions and operation procedures	P. 407
Security and system setup ■ Security setting items and operation procedures ■ System setup items and operation procedures	P. 411

### 3-4. Using the hands-free phone system (for mobile phones)

Title	Page
Using the phone book <ul style="list-style-type: none"><li>■ Adding a new phone number</li><li>■ Changing the registered name in the phone book</li><li>■ Listing the registered data</li><li>■ Setting speed dials</li><li>■ Deleting the registered data</li><li>■ Deleting speed dials</li></ul>	P. 417

- Conditions under which the system will not operate
  - If using a mobile phone that does not support Bluetooth®
  - If the mobile phone is switched off
  - If you are outside service range
  - If the mobile phone is not connected
  - If the mobile phone's battery is low
  - If the mobile phone is behind the seat or in the glove box or console box
  - If metal is covering or touching the phone
- When using the hands-free system
  - The audio system and voice guidance are muted when making a call.
  - If both parties speak at the same time, it may be difficult to hear.
  - If the incoming call volume is overly loud, an echo may be heard.
  - Try to face toward the microphone as much as possible when speaking.
  - In the following circumstances, it may be difficult to hear the other party:
    - When driving on unpaved roads
    - When driving at high speeds
    - When a window is open
    - When the air conditioning is blowing directly on the microphone
    - When the air conditioning is set to high

### 3-4. Using the hands-free phone system (for mobile phones)

- When transferring ownership of the vehicle

Be sure to initialize the system to prevent personal data from being improperly accessed. (→P. 415)

- About Bluetooth®



Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- Compatible models

Compatible with HFP (Hands Free Profile) Ver. 1.0 or higher (Conformed: Ver. 1.5) and OPP (Object Push Profile) Ver. 1.1.

If your mobile phone does not support HFP, you cannot enter the Bluetooth® phone. If your mobile phone supports OPP alone, you cannot use the Bluetooth® phone.

### 3-4. Using the hands-free phone system (for mobile phones)

#### ■ Certification for the hands-free system

**Pioneer** *sound.vision.soul*



#### Manufacturer's Declaration of Conformity

**Manufacturer** Pioneer Corporation  
4-1, 1-Chome, Meguro, Meguro-Ku  
TOKYO, 153 - 8654, JAPAN

**EU Representative:** Pioneer Europe NV  
Haven 1087, Keetberglaan 1  
9120 MELSELE, BELGIUM

#### The EU Directives covered by this Declaration

1999/5/EC R&TTE Directive of the European Parliament and of the Council  
2006/95/EC Low Voltage Directive

#### The product covered by this declaration

CD RDS receiver head unit

model **86120-48G80, 86120-48J20, 86120-48L00, 86120-48L40,**

#### The basis on which conformity is being declared

The product identified above complies with the requirements of the Low Voltage Directive and the R&TTE Directive above by meeting following standards:  
EN300328 V1.7.1 : 2006, EN301489-1 V1.6.1 : 2005, EN301489-17 V1.2.1 : 2002, ISO7637-2:2004 and EN 60065:2002

The technical documentation required to demonstrate that the product meets the requirements of the LVD and R&TTE has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer.

Technical File No: KCE08-003

The CE mark was first applied in: 2008

Done at Melsele

14/07/2008

Gerousse Walter  
Manager Public Affairs

PIONEER EUROPE NV  
Haven 1087 - Keetberglaan 1 - 9120 Melsele - Belgium  
Telefoon +32 (0)3 570 05 11 - Fax +32 (0)3 570 08 86 - URL <http://www.pioneer-eu.com> - BTW BE 406 999 132 - RPR Dendermonde

3

Interior features

### 3-4. Using the hands-free phone system (for mobile phones)

#### CAUTION

■ Caution while driving

Do not use a mobile phone or connect the Bluetooth<sup>®</sup> phone.

#### NOTICE

■ To prevent damage to mobile phones

Do not leave mobile phones in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the phone.


### 3-4. Using the hands-free phone system (for mobile phones)

## Using the hands-free system (for mobile phones)

#### ■ Audio unit

The illustration below is for left-hand drive vehicles.

The button positions and shapes may differ slightly for right-hand drive vehicles.

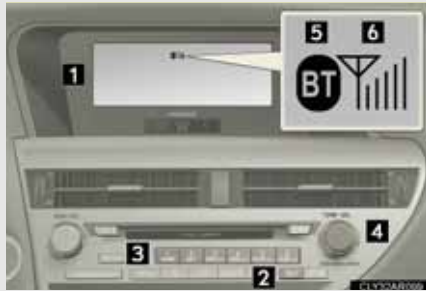

#### 1 Display

A message, name, phone number, etc. is displayed.

Lower-case characters and special characters cannot be displayed.

#### 2 Displays information that is too long to be displayed at one time on the display (press and hold)

#### 3 Selects speed dials

#### 4 Selects items such as menu and number

Turn: Selects an item

Press: Inputs the selected item


#### 5 Bluetooth® connection condition

If “BT” is not displayed, the hands-free phone system cannot be used.

#### 6 Reception level

### 3-4. Using the hands-free phone system (for mobile phones)

#### ■ Steering wheel switches

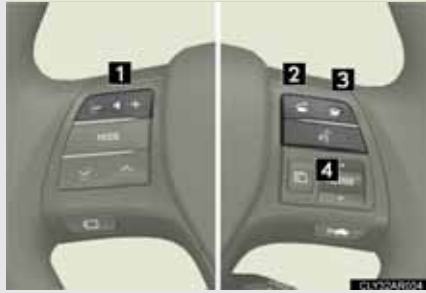

##### 1 Volume

During an incoming call:  
Adjusts the ring tone volume

During an ongoing call:  
Adjusts the receiver volume

The voice guidance volume cannot be adjusted using this button.

##### 2 Off-hook switch

Turns the hands-free system on/starts a call

##### 3 On-hook switch

Turns the hands-free system off/ends a call/refuses a call

##### 4 Talk switch

Turns the voice command system on (press)/turns the voice command system off (press and hold)

#### ■ Microphone



Using the hands-free phone system for the first time

Before using the hands-free phone system, it is necessary to register a mobile phone in the system. The system will enter phone registration mode automatically when starting the system with no mobile phone registered. Follow the procedure below to register (pair) a mobile phone:

**STEP 1** Press the off-hook switch or the talk switch, and select “Pair

Phone” using



**STEP 2** Select “Record Name” using



, and say the name to be registered after the beep.

The name to be registered will be repeated aloud.

**STEP 3** Select “Confirm” using



A passkey will be displayed.

**STEP 4** Input the passkey into the mobile phone.

Refer to the manual that comes with the mobile phone for the operation of the phone.

If the mobile phone has a Bluetooth<sup>®</sup> audio player, the audio player can be registered at the same time.

**STEP 5** When “Pair Audio?” is displayed, select “Yes” or “No”

using



. (Bluetooth<sup>®</sup> audio player →P. 377)

### 3-4. Using the hands-free phone system (for mobile phones)

#### Menu list of the hands-free phone system

First menu	Second menu	Third menu	Operation detail
“Callback”	-	-	Dialing a number stored in the incoming call history memory
“Redial”	-	-	Dialing a number stored in the outgoing call history memory
“Phone-book”	“Add Entry”	-	Adding a new phone number
	“Change Name”	-	Changing the registered name in the phone book
	“Delete Entry”	-	Deleting the registered data
	“Del Spd Dial”	-	Deleting speed dials
	“List Names”	-	Listing the registered data
	“Speed Dial”	-	Setting speed dials

3-4. Using the hands-free phone system (for mobile phones)

First menu	Second menu	Third menu	Operation detail
"Setup"	"Security"	"Set PIN"	Setting a PIN code
		"Phbk Lock"	Locking the phone book
		"Phbk Unlock"	Unlocking the phone book
	"Phone Setup"	"Pair Phone"	Registering a mobile phone
		"Select Phone"	Selecting a mobile phone to be used
		"Change Name"	Changing the registered name of a mobile phone
		"List Phones"	Listing the registered mobile phones
		"Set Passkey"	Changing the passkey
		"Delete Phone"	Deleting a registered mobile phone
	"System Setup"	"Guidance Vol"	Setting voice guidance volume
		"Device Name"	Displaying the Bluetooth® device address and name
		"Initialize"	Initializing the system

3

Interior features

### 3-4. Using the hands-free phone system (for mobile phones)

---

#### ■ Automatic volume adjustment

When vehicle speed reaches 80 km/h (50 mph) or more, the volume automatically increases. The volume returns to the previous volume setting when vehicle speed drops to 70 km/h (43 mph) or less.

#### ■ Operations that cannot be performed while driving

- Operating the system with



- Registering a mobile phone to the system

#### ■ Changing the passkey

→P. 409

### 3-4. Using the hands-free phone system (for mobile phones)

## Making a phone call

- Making a phone call
  - Dialing by inputting a name  
“Dial by name”
  - Speed dialing
  - Dialing a number stored in the outgoing history memory  
“Redial”
  - Dialing a number stored in the incoming history memory  
“Call back”
- Receiving a phone call
  - Answering a phone call
  - Refusing a phone call
- Transferring a phone call
- Using the call history memory
  - Dialing
  - Storing data in the phone book
  - Deleting

### 3-4. Using the hands-free phone system (for mobile phones)


#### Dialing by inputting a name

**STEP 1** Press the talk switch and say a registered name.

The desired name or number is displayed.

**STEP 2** Dial by one of the following methods:

a. Press the off-hook switch.

b. Select “Dial” using .

In **STEP 1**, if the pronounced name cannot be recognized, select

the desired name using .

#### Speed dialing

**STEP 1** Press the off-hook switch.

**STEP 2** Press the preset button in which the desired number is registered.

**STEP 3** Press the off-hook switch.

#### When receiving a phone call

- Answering a phone call  
Press the off-hook switch.
- Refusing a phone call  
Press the on-hook switch.

### Transferring a phone call

A call can be transferred between the mobile phone and system while dialing, receiving a call, or during a call. Use one of the following methods:

- a. Operate the mobile phone.

Refer to the manual that comes with the mobile phone for the operation of the phone.


- b. Press the off-hook switch \*.

\*:This operation can be performed only when transferring a call from the mobile phone to the system during a call.

### 3-4. Using the hands-free phone system (for mobile phones)

#### Using the call history memory


Follow the procedure below to use a number stored in the call history memory:


**STEP 1** Press the off-hook switch and select “Redial” (when using a number stored in the outgoing call history memory) or “Call back” (when using a number stored in the incoming call history memory) using .

**STEP 2** Select the desired number using .

**STEP 3** The following operations can be performed:

Dialing: Press the off-hook switch or select “Dial” using .

Storing the number in the phone book: Select “Store” and then “Confirm” using .

Deleting: Select “Delete” and then “Confirm” using .

#### ■ Call history

Up to 5 numbers can be stored in each of the outgoing and incoming call history memories.

#### ■ When talking on the phone


- Do not talk at the same time as with the other party.
- Keep the volume of the incoming voice down. Otherwise, voice echo will increase.


## 3-4. Using the hands-free phone system (for mobile phones) Setting a mobile phone

Registering a mobile phone in the hands-free phone system allows the system to function. The following functions can be used for registered mobile phones:

### ■ Functions and operation procedures

To enter the menu for each function, follow the steps below.

**STEP 1** Press the off-hook switch and select “Setup” using .


**STEP 2** Select “Phone Setup” using .

**STEP 3** Select one of the following items using  :

- Registering a mobile phone  
“Pair Phone”
- Selecting a mobile phone to be used  
“Select Phone”
- Changing the registered name of a mobile phone  
“Change Name”
- Listing the registered mobile phones  
“List Phones”
- Changing the passkey  
“Set Passkey”
- Deleting a registered mobile phone  
“Delete Phone”

### 3-4. Using the hands-free phone system (for mobile phones)

#### Registering a mobile phone


Select “Pair Phone” using , and perform the procedure for registering a mobile phone. (→P. 399)

#### Selecting a mobile phone to be used

**STEP 1** Select “Select Phone” using .


**STEP 2** Select the mobile phone to be used using .

#### Changing the registered name of a mobile phone

**STEP 1** Select “Change Name” using .


**STEP 2** Select the desired mobile phone name to be changed using



**STEP 3** Select “Record Name” using , and say the new name


after the beep.

The name to be registered will be repeated aloud.


**STEP 4** Select “Confirm” using .


### 3-4. Using the hands-free phone system (for mobile phones)

#### Listing the registered mobile phones


Select “List Phones” using . The list of registered mobile phones will be read aloud.  
When listing is complete, the system returns to “Phone Setup”.

#### Changing the passkey

**STEP 1** Select “Set Passkey” using .

**STEP 2** Select a 4 to 8-digit number using .

The number should be input 1 digit at a time.

**STEP 3** When the entire number to be registered as a passkey has been input, press  again.

If the number to be registered has 8 digits, pressing of the knob is not necessary.

### 3-4. Using the hands-free phone system (for mobile phones)

#### Deleting a registered mobile phone

**STEP 1** Select “Delete Phone” using



**STEP 2** Select the desired mobile phone to be deleted using



If the mobile phone to be deleted is paired as a Bluetooth<sup>®</sup> audio player, the registration of the audio player can be deleted at the same time.

**STEP 3** When “Del Audio?” is displayed, select “Yes” or “No”

using




. (Bluetooth<sup>®</sup> audio player →P. 377)


- 
- The number of mobile phones that can be registered  
Up to 6 mobile phones can be registered in the system.

### 3-4. Using the hands-free phone system (for mobile phones) Security and system setup

To enter the menu of each setting, follow the steps below.

#### ■ Security setting items and operation procedures

**STEP 1** Press the off-hook switch and select “Setup” using .


**STEP 2** Select “Security” using .

**STEP 3** Select one of the following items using  :

- Setting or changing the PIN (Personal Identification Number)  
“Set PIN”
- Locking the phone book  
“Phbk Lock”
- Unlocking the phone book

### 3-4. Using the hands-free phone system (for mobile phones)

#### ■ System setup items and operation procedures

**STEP 1** Press the off-hook switch and select “Setup” using .

**STEP 2** Select “System Setup” using .

**STEP 3** Select one of the following items using  :

- Setting voice guidance volume  
“Guidance Vol”
- Displaying the Bluetooth<sup>®</sup> device address and name  
“Device Name”
- Initializing the system  
“Initialize”

### 3-4. Using the hands-free phone system (for mobile phones)

#### Setting or changing the PIN

##### ■ Setting a PIN

**STEP 1** Select “Set PIN” using



**STEP 2** Enter a PIN using



Input the code 1 digit at a time.

##### ■ Changing the PIN

**STEP 1** Select “Set PIN” using



**STEP 2** Enter the registered PIN using




**STEP 3** Enter a new PIN using



Input the code 1 digit at a time.

### 3-4. Using the hands-free phone system (for mobile phones)

#### Locking or unlocking the phone book


**STEP 1** Select “Phbk Lock” or “Phbk Unlock” using .

**STEP 2** Input a new PIN using  and select “Confirm” using





Input the code 1 digit at a time.

#### Setting voice guidance volume

**STEP 1** Select “Guidance Vol” using .


**STEP 2** Change the voice guidance volume.


To decrease the volume: Turn  counterclockwise.

To increase the volume: Turn  clockwise.

### 3-4. Using the hands-free phone system (for mobile phones)


#### Displaying the Bluetooth® device address and name


**STEP 1** Select “Device Name” using .

**STEP 2** Turn  to display the Bluetooth® device address and name.

**STEP 3** Select “Go Back” using  to return to “System Setup”.

#### Initializing the system

**STEP 1** Select “Initialize” and then “Confirm” using .

**STEP 2** Select “Confirm” again using .

3

Interior features

### 3-4. Using the hands-free phone system (for mobile phones)

---

#### ■ Initialization

- The following data in the system can be initialized:
  - Phone book
  - Outgoing and incoming call history
  - Speed dials
  - Registered mobile phone data
  - Security code
  - Registered Bluetooth<sup>®</sup> enabled portable player data
  - Passkeys for the mobile phones
  - Passkey for the Bluetooth<sup>®</sup> audio players
  - Guidance volume
  - Receiver volume
  - Ring tone volume
- Once the initialization has been completed, the data cannot be restored to its original state.

#### ■ When the phone book is locked

The following functions cannot be used:

- Dialing by inputting a name
- Speed dialing
- Dialing a number stored in the call history memory
- Using the phone book

### 3-4. Using the hands-free phone system (for mobile phones)

## Using the phone book

To enter the menu of each setting, follow the steps below.

**STEP 1** Press the off-hook switch and select “Phonebook” using




**STEP 2** Select one of the following items using :

- Adding a new phone number  
“Add Entry”
- Changing the registered name in the phone book  
“Change Name”
- Listing the registered data  
“List Names”
- Setting speed dials  
“Speed Dial”
- Deleting the registered data  
“Delete Entry”
- Deleting speed dials  
“Del Spd Dial”

#### Adding a new phone number

The following methods can be used to add a new phone number:

- Transferring data from the mobile phone
- Inputting a phone number using 
- Selecting a phone number from outgoing or incoming call history

### 3-4. Using the hands-free phone system (for mobile phones)

#### ■ Adding procedure

**STEP 1** Select “Add Entry” using .

**STEP 2** Use one of the following methods to input a telephone number:

Transferring data from the mobile phone:


**STEP2-1** Select “By Phone” and then “Confirm” using




**STEP2-2** When “Transfer” appears in the display, transfer the data from the mobile phone.

Refer to the manual that comes with the mobile phone for details on transferring data.

**STEP2-3** Select the desired data using .

Inputting a phone number using :

**STEP2-1** Select “Manual Input” using .

**STEP2-2** Input a phone number using , and press




again.

Input the phone number 1 digit at a time.


### 3-4. Using the hands-free phone system (for mobile phones)

Selecting a phone number from the outgoing or incoming call history:


STEP2-1 Select “Call History” using .


STEP2-2 Select “Outgoing” or “Incoming” using .

STEP2-3 Select the desired data using .

STEP 3 Select “Record Name” using , and say the desired name after the beep.

The name to be registered will be repeated aloud.

STEP 4 Select “Confirm” using .

STEP 5 Select “Confirm” again using .


In STEP 5, selecting “Speed Dial” instead of “Confirm” registers the newly added phone number as a speed dial.

### 3-4. Using the hands-free phone system (for mobile phones)


#### Changing the registered name in the phone book

**STEP 1** Select “Change Name” using .

**STEP 2** Select the desired name to be changed using .

**STEP 3** Select “Record Name” using  and say the new name after the beep.

The name to be registered will be repeated aloud.

**STEP 4** Select “Confirm” using .

#### Listing the registered data

Select “List Names” using . The list of the registered data will be read aloud.

When listing is complete, the system returns to “Phonebook”.

Pressing the off-hook switch while an entry is being read aloud selects the entry and calls the registered phone number.

### 3-4. Using the hands-free phone system (for mobile phones)

#### Setting speed dials

**STEP 1** Select “Speed Dial” using



**STEP 2** Select the desired data using



**STEP 3** Select the desired preset button and register the data into speed dial by either of the following methods:

a. Press the desired preset button and select “Confirm”

using



b. Press and hold the desired preset button.

#### Deleting the registered data

**STEP 1** Select “Delete Entry” using



**STEP 2** Select the desired data to be deleted using




### 3-4. Using the hands-free phone system (for mobile phones)

#### Deleting speed dials

**STEP 1** Select “Del Spd Dial” using .

**STEP 2** Press the preset button to which the desired speed dial is registered after the beep.

The name to be deleted will be heard.

**STEP 3** Select “Confirm” using .

---

#### ■ Limitation of number of digits


A phone number that exceeds 24 digits cannot be registered.

3-5. Using the interior lights  
Interior lights list



- 1 Front personal lights (→P. 425)
- 2 Front interior light (→P. 424)
- 3 Shift lever light (when the “POWER” switch is in ACCESSORY or ON mode)
- 4 Rear personal lights (→ P. 425)
- 5 Rear interior light
- 6 Door courtesy lights
- 7 Scuff lights (if equipped)
- 8 Footwell lights
- 9 Outer foot lights

Interior lights

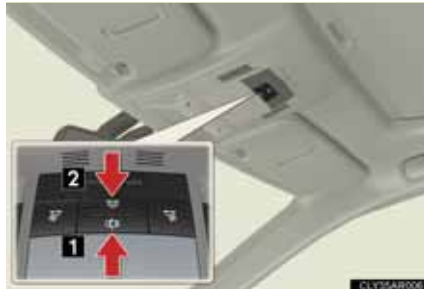

- 1** Turns the lights on/off linked to door positions.
- 2** Turns the lights on/off

### Personal lights

#### ► Front



Turns the light on/off

#### ► Rear



Turns the light on/off

#### ■ Illuminated entry system

The lights automatically turn on/off according to “POWER” switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.


#### ■ To prevent 12-volt battery discharge

If the interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

#### ■ Customization

Settings (e.g. the time elapsed before the lights turn off) can be changed. (Customizable features →P. 617)

3-6. Using the storage features  
List of storage features

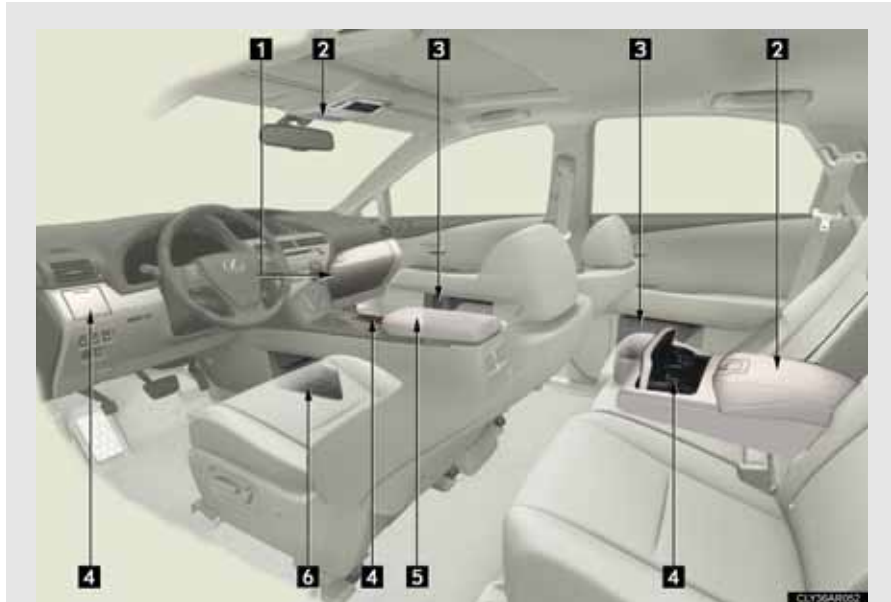

- 1 Glove box
- 2 Auxiliary boxes (if equipped)
- 3 Bottle holders/door pockets
- 4 Cup holders
- 5 Console box
- 6 Under tray

**⚠ CAUTION**

■ Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

**Glove box**


The glove box can be opened by pressing the lock release button and locked and unlocked using the mechanical key.

▶ Left-hand drive vehicles



- 1 Opens
- 2 Locks
- 3 Unlocks

▶ Right-hand drive vehicles

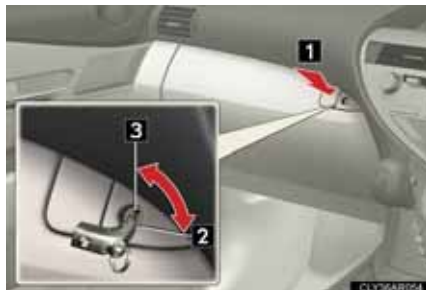

- 1 Opens
- 2 Locks
- 3 Unlocks

■ Power back door main switch (if equipped)

The power back door main switch is located in the glove box. (→P. 83)

**⚠ CAUTION**

■ Caution while driving

Keep the glove box closed.

Injuries may result in the event of an accident or sudden braking.

**Bottle holders/door pockets**

▶ Front



The front door pockets can be opened and closed.

▶ Rear



 CAUTION

■ Caution while driving (front door pockets)

Keep the door pockets closed.  
Injuries may result in the event of an accident or sudden braking.

■ Items unsuitable for the bottle holders

Do not place anything other than bottles in the bottle holders.  
Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.

 NOTICE

■ When stowing a bottle

Put the cap on before stowing the bottle. Do not place open bottles in the bottle holders. The contents may spill.

Cup holders

► Front (type A)



Press down the lid on the farthest side from the driver.

► Front (type B)



Press in and release the cup holder.

► Rear



Press down the button on the armrest.

■ Cup holder insert



The cup holder insert may be removed for cleaning.

**⚠ CAUTION**

■ Items unsuitable for the cup holder

Do not place anything other than cups or beverage cans in the cup holders. Even when the lid is closed, items must not be stored in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.

■ To prevent burns

Put a lid on containers with hot liquids inside.

■ When not in use

Keep the cup holders closed.  
Injuries may result in the event of an accident or sudden braking.


Console box



Slide the armrest while pulling up the lever, and lift the armrest.

■ Trays in the console box

▶ Upper tray

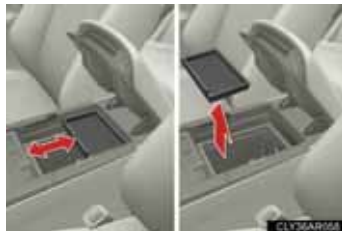

The tray slides forward/backward and can be removed.

▶ Lower tray



The tray can be removed.

 CAUTION

■ Caution while driving

Keep the console box closed.  
Injuries may result in the event of an accident or sudden braking.

 NOTICE

■ Trays

Do not insert items exceeding the height of the tray. Doing so may prevent opening and closing of the lid.

**Auxiliary box (if equipped)**


► Overhead



Press in the lid.

This box is useful for temporarily storing sunglasses and similar small items.

► Rear seat

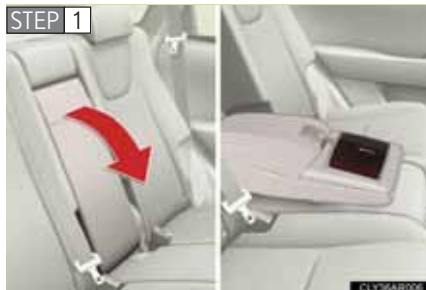

STEP 1

Pull down the armrest.



STEP 2

Pull up the lever to release the lock and lift the armrest.

**⚠ CAUTION**

■ **Caution while driving**

Do not leave the auxiliary box open while driving.  
Items stored in the auxiliary box may fall out and cause death or serious injury in case of an accident or sudden stop.

**Under tray**



**⚠ CAUTION**


■ **Items unsuitable for the under tray**

Observe the following precautions when putting items in the under tray. Failure to do so may cause items to be thrown out of the tray in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.

- Do not store items in the tray that can easily shift or roll out.
- Do not stack items in the tray higher than the tray's edge.
- Do not put items in the tray that may protrude over the tray's edge.

### 3-7. Other interior features

## Sun visors

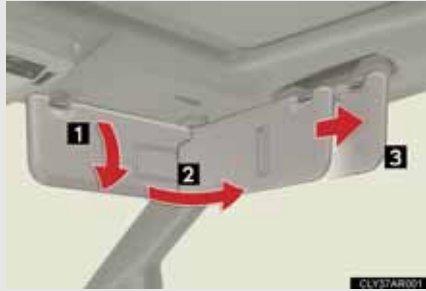

- 1** To set the visor in the forward position, flip it down.
- 2** To set the visor in the side position, flip down, unhook, and swing it to the side.
- 3** To use the side extender, place the visor in the side position, then slide it back-

### 3-7. Other interior features

## Vanity mirror



Slide the cover to open.

The light turns on when the cover is opened.

#### NOTICE

- When not in use  
Keep the vanity mirror closed.
- To prevent 12-volt battery discharge  
Do not leave the vanity lights on for extended periods while the hybrid system is off.

3

Interior features

### 3-7. Other interior features

## Clock

The clock is displayed when the “POWER” switch is in ACCESSORY or ON mode. Perform the following steps to adjust the clock.

▶ Without a navigation system



1 Adjusts the hours

2 Adjusts the minutes

▶ With a navigation system

Refer to “Navigation System Owner’s Manual”.

---

■ When the 12-volt battery is disconnected

The time display will automatically be set to 1:00.

### 3-7. Other interior features

## Outside temperature display

The temperature display shows temperatures within the range of -40°C (-40°F) and 50°C (122°F).

▶ Without a navigation system



▶ With a navigation system

Refer to “Navigation System Owner’s Manual”.

■ If the temperature does not appear

The system may be malfunctioning. Take your vehicle to your Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:

- When the vehicle is stopped, or moving at low speeds (less than 25 km/h [16 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

### 3-7. Other interior features

#### Multi-display light control (vehicles without a navigation system)

The brightness of the multi-display can be adjusted to four levels.



Press and release the “DISP” switch until the brightness of the display is adjusted to the desired level.

---


#### ■ Instrument panel linked brightness control

When the headlight switch is turned on, the brightness of the multi-display will be reduced in accordance with the brightness of the instrument panel. (→P. 212)


3-7. Other interior features  
Power outlets

The power outlets can be used for 12 V accessories that run on less than 10 A.

► Inside the console

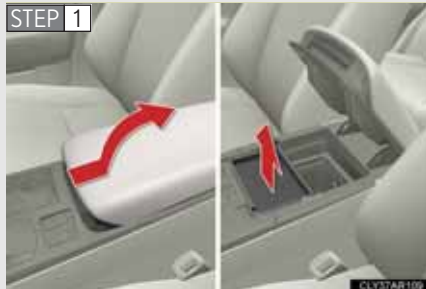

Slide the armrest while pulling up the lever, and lift the armrest. Remove the upper tray.

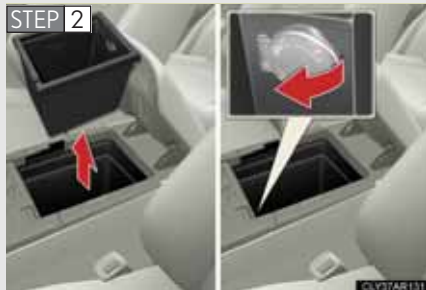

Remove the lower tray.

► Under tray



### 3-7. Other interior features

#### ▶ Luggage compartment



#### ■ Routing accessory device cables



When the cover is slid open, accessory device cables can be pulled through the opening.

- The power outlet can be used when  
The “POWER” switch is in ACCESSORY or ON mode.

### 3-7. Other interior features



#### NOTICE

■ To avoid damaging the power outlets

Close the power outlet lid when the power outlet is not in use.  
Foreign objects or liquids that enter the power outlet may cause a short circuit.

■ To prevent the fuse from being blown

Do not use an accessory that uses more than 12 V 10 A.

■ To prevent 12-volt battery discharge

Do not use the power outlets longer than necessary when the hybrid system is off.

The seat heaters and ventilators heat the seats and maintain good air-flow by blowing air from the seats.

■ Seat heaters



**1** Turns the seat heater on

The indicator light comes on. The higher the number is, the warmer the seat becomes.

■ Seat heaters/ventilators



**1** Turns the seat heater on

The indicator light comes on. The higher the number is, the warmer the seat becomes.

**2** Blows air from the seat

The indicator light comes on. The higher the number is, the stronger the airflow becomes.

■ Operating condition

The “POWER” switch is in ON mode.

■ When not in use

Set the knob at “0”. The indicator light turns off.

\*: If equipped

### 3-7. Other interior features

#### CAUTION

##### ■ Burns

- Use caution when seating the following persons in a seat with the seat heater on to avoid the possibility of burns:
  - Babies, small children, the elderly, the sick and the physically challenged
  - Persons with sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Do not cover the seat with anything when using the seat heater. Using the seat heater with a blanket or cushion increases the temperature of the seat and may lead to overheating.

#### NOTICE

- To prevent damage to the seat heaters/ventilators  
Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.
- To prevent the 12-volt battery from being discharged  
Do not leave the system on longer than necessary when the hybrid system is off.

### 3-7. Other interior features

## Armrest




 NOTICE

- To prevent damage to the armrest  
Do not place too much strain on the armrest.

### 3-7. Other interior features

## Coat hooks

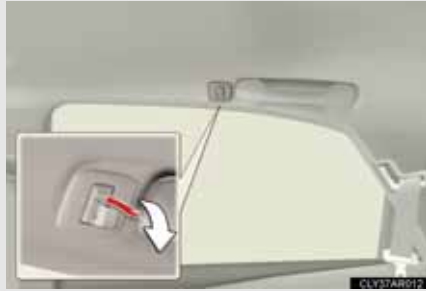

To use the coat hook, push it in.

#### CAUTION

##### ■ Items that must not be hung on the hook

Do not hang a coat hanger or other hard or sharp object on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles that cause death or serious injury.


3

Interior features

### 3-7. Other interior features

## Floor mat

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

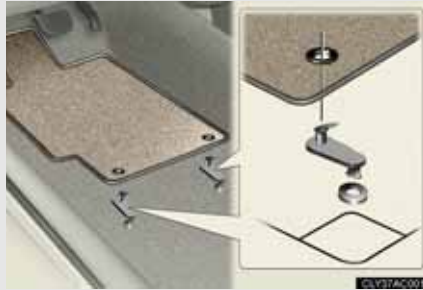

Fix the floor mat in place using the retaining hooks (clips) provided.

The shape of the retaining hooks (clips) and the fixing procedure of the floor mat for your vehicle may differ from those shown in the illustration. For details, refer to the floor mat retention clip

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to a serious accident.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.


■ Before driving



- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the hybrid system stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

3-7. Other interior features

■ Cargo hooks

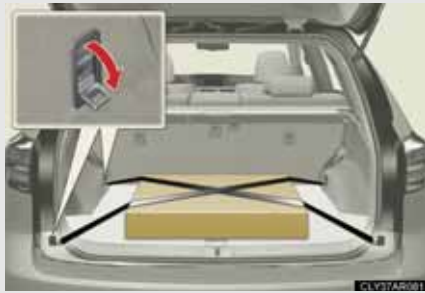

Pull the hook to use.


The cargo hooks are provided for securing loose items.

■ Auxiliary boxes




Pull the strap upwards when lifting the cover up.

■ Luggage cover

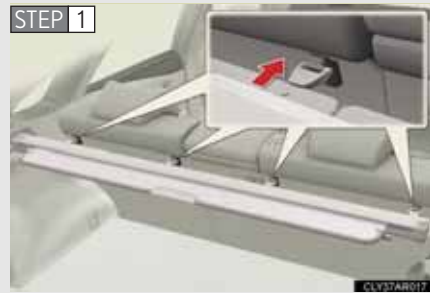


Attach the hooks to the hook brackets on the rear seat seat-back.

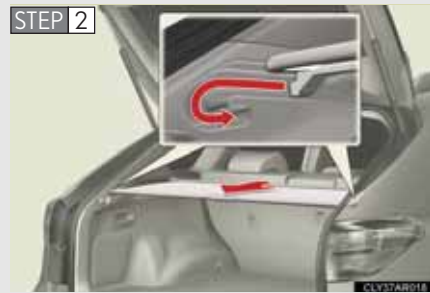

Pull out the luggage cover and hook it onto the anchors.

### Removing the luggage covers

#### ► Front luggage cover

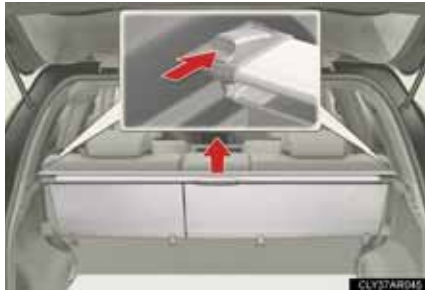


Press the buttons to remove the luggage cover.

#### ► Rear luggage cover



Detach the outer clips of the rear luggage cover from the back door.

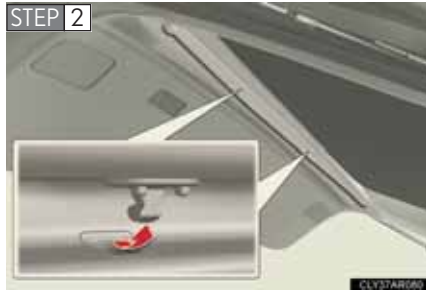

Detach the inner clips of the rear luggage cover from the back door.

■ Installing the rear luggage cover

- Ensure that the luggage cover is in the proper installation position.  
Push the clips of the rear luggage cover into the indentions on the back door until they are locked into place.
- Check that the rear luggage cover is securely attached.

**⚠ CAUTION**

- When the cargo hooks are not in use  
To avoid injury, always return the cargo hooks to their stowed positions.

3-7. Other interior features

- 4-1. Maintenance and care
  - Cleaning and protecting the vehicle exterior ..... 454
  - Cleaning and protecting the vehicle interior ..... 458
  
- 4-2. Maintenance
  - Maintenance requirements ..... 461
  
- 4-3. Do-it-yourself maintenance
  - Do-it-yourself service precautions ..... 464
  - Hood ..... 468
  - Positioning a floor jack .... 469
  - Engine compartment ..... 471
  - 12-volt battery ..... 481
  - Tires ..... 488
  - Tire inflation pressure ..... 491
  - Wheels ..... 493
  - Air conditioning filter ..... 495
  - Electronic key battery ..... 498
  - Checking and replacing fuses ..... 501
  - Light bulbs ..... 517

#### 4-1. Maintenance and care

### Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

---

#### ■ Automatic car washes

- Before washing the vehicle:
  - Fold the mirrors.
  - Turn off the power back door system (if equipped).
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

#### ■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows and the air suspension unit (if equipped).
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

■ Touch-up paint (if equipped)

Touch-up paint may be used to cover small chips or scratches.

Apply the paint soon after the damage occurs or corrosion may set in. To apply the touch-up paint so it is hardly noticeable the trick is to apply it only to the bare spots. Apply only the smallest amount possible and do not paint the surface around the scratch or chip.

■ Aluminum wheels

- Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the paint.
- Do not use detergent on the wheels when they are hot, for example after driving for long distance in the hot weather.
- Wash detergent from the wheels immediately after use.

■ Bumpers

Do not scrub with abrasive cleaners.

**⚠ CAUTION**

■ When cleaning the windshield



Set the wiper switch to off.

If the wiper switch is in **AUTO**, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

 CAUTION

■ Precautions regarding the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.

When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

 NOTICE

■ To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)

● Wash the vehicle immediately in the following cases:

- After driving near the sea coast
- After driving on salted roads
- If you see coal tar or tree sap on the paint surface
- If dead insects, insect droppings or bird droppings are present on the paint surface
- After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
- If the vehicle becomes heavily soiled by dust or mud
- If liquids such as benzene and gasoline are spilled on the paint surface

● If the paint is chipped or scratched, have it repaired immediately.

● To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ Cleaning the exterior lights

● Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.

● Do not apply wax on the surfaces of the lights. Wax may cause damage to the lenses.

■ To prevent damage to the windshield wiper arms

When lifting the wiper arms away from the windshield, pull the driver side wiper arm upward first, and repeat for the passenger side. When returning the wipers to their original position, do so from the passenger side first.

 NOTICE

- When using an automatic car wash  
Set the wiper switch to the off position.  
If the wiper switch is in **AUTO** position, the wipers may operate and the wiper blades may be damaged.

## Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

### ■ Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

### ■ Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe any excess dirt and dust with a soft cloth dampened with diluted detergent.  
Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded ventilated area.

### ■ Cleaning the synthetic leather areas

- Remove loose dirt using a vacuum cleaner.
- Apply a mild soap solution to the synthetic leather using a sponge or soft cloth.
- Allow the solution to soak in for a few minutes. Remove

■ Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water. Excellent results are obtained by keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

 CAUTION

■ Water in the vehicle

● Do not splash or spill liquid in the vehicle, such as on the floor and in the hybrid battery (traction battery) air vents or in the luggage compartment. Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.

● Do not get any of the SRS components or wiring in the vehicle interior wet.  
(→P. 148)

An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or severe injury.

■ Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

 NOTICE

■ Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, or bleach
  - Seats: Acidic solutions, such as thinner, benzene, or alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt on leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or that contain wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

■ Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components under the floor of vehicle. Water may also cause the body to rust.

■ Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

## Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Lexus recommends performing the following maintenance:

### ■ Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, read the “Lexus Service Booklet” or “Lexus Warranty Booklet”.

### ■ Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you're an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. Any authorized Lexus dealer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Lexus repairer to service or maintain your vehicle, we recommend that you

---

### ■ Where to go for service?

In order to maintain your vehicle in the best possible condition, Lexus recommends that all repairs and service operations be carried out by authorized Lexus dealers or repairers or other duly qualified and equipped professionals. For repairs and services covered by your warranty, please visit an authorized Lexus dealer or repairer, who will use genuine Lexus parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Lexus dealers or repairers for non-warranty repairs and services, as members of the Lexus network will be able to expertly assist you with any difficulties you may encounter.

Your Lexus dealer or repairer, or another duly qualified and equipped professional will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Lexus vehicles.

### ■ Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driving straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floors, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, as soon as possible. Your vehicle may need adjustment or repair.

 CAUTION

- If your vehicle is not properly maintained  
Improper maintenance could result in serious damage to the vehicle and possible serious injury or death.
- Handling of the 12-volt battery  
12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling.  
(→P. 481)

### 4-3. Do-it-yourself maintenance

## Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedures as given in these sections.

Items	Parts and tools
12-volt battery condition (→P. 481)	<ul style="list-style-type: none"> <li>• Warm water</li> <li>• Baking soda</li> <li>• Grease</li> <li>• Conventional wrench (for terminal clamp bolts)</li> <li>• Distilled water</li> </ul>
Engine/power control unit coolant level (→P. 477)	<ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant” or similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology. “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water.</li> <li>• Funnel (used only for adding coolant)</li> </ul>
Engine oil level (→P. 473)	<ul style="list-style-type: none"> <li>• “Toyota Genuine Motor Oil” or equivalent</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding engine oil)</li> </ul>
Fuses (→P. 504)	<ul style="list-style-type: none"> <li>• Fuse with same amperage rating as original</li> </ul>

Items	Parts and tools
Light bulbs (→P. 521)	<ul style="list-style-type: none"> <li>• Bulb with same number and wattage rating as original</li> <li>• Phillips-head screwdriver</li> <li>• Flathead screwdriver</li> <li>• Wrench</li> </ul>
Radiator and condenser (→P. 479)	—
Tire inflation pressure (→P. 492)	<ul style="list-style-type: none"> <li>• Tire pressure gauge</li> <li>• Compressed air source</li> </ul>
Washer fluid (→P. 480)	<ul style="list-style-type: none"> <li>• Water or washer fluid containing antifreeze (for winter use)</li> <li>• Funnel (used only for adding water or washer fluid)</li> </ul>

 CAUTION

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precaution:

■ When working on the engine compartment

- Make sure that the indicator on the “POWER” switch and the “READY” indicator are both off.
- Keep hands, clothing and tools away from the moving fans and engine drive belt.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces.  
If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.  
If you still experience discomfort, consult a doctor.

■ When working near the electric cooling fans or radiator grille

Be sure the “POWER” switch is off.  
With the “POWER” switch in ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high.  
(→P. 479)

■ Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes

 NOTICE

■ If you remove the air cleaner filter

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air. Also, a backfire could cause a fire in the engine compartment.

■ If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious problem.

## 4-3. Do-it-yourself maintenance

### Hood

Release the lock from the inside of the vehicle to open the hood.

STEP 1



Pull the hood lock release lever.

The hood will pop up slightly.

STEP 2



Pull up the hood catch and lift the hood.

#### CAUTION

##### ■ Pre-driving check

Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

### 4-3. Do-it-yourself maintenance Positioning a floor jack

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

#### ■ Front



#### ■ Rear



**⚠ CAUTION**

■ When raising your vehicle


Make sure to observe the following precautions to reduce the possibility of death or serious injury:



- Lift up the vehicle using a floor jack such as the one shown in the illustration.

- When using a floor jack, follow the instructions of the manual provided with the jack.
- Do not use the jack that was supplied with your vehicle.
- Do not put any part of your body underneath the vehicle when it is supported only by the floor jack.
- Always use floor jack and/or automotive jack stands on a solid, flat, level surface.
- Do not start the hybrid system while the vehicle is supported by the floor jack.
- Stop the vehicle on level, firm ground, firmly set the parking brake and shift the shift lever to P.
- Make sure to set the floor jack properly at the jack point.  
Raising the vehicle with an improperly positioned floor jack will damage the vehicle and may cause the vehicle to fall off the floor jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the floor jack.
- Vehicles with electronically modulated air suspension (if equipped):  
Be sure to turn off the height control and stop the hybrid system. Otherwise, the vehicle height may change in the automatic leveling function. (→P. 271)

## 4-3. Do-it-yourself maintenance Engine compartment

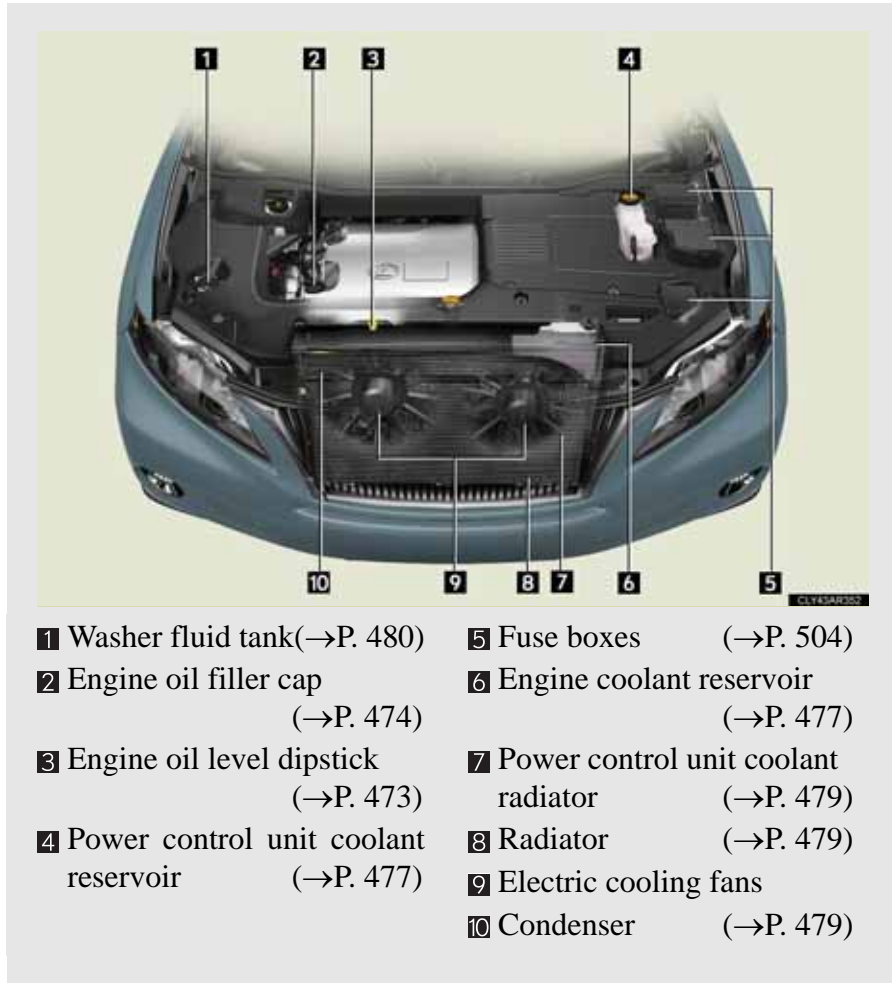

4

Maintenance and care

## 4-3. Do-it-yourself maintenance

### Engine compartment cover

#### ■ Removing the engine compartment covers


##### ▶ Outside



##### ▶ Front



#### ■ Installing the clips

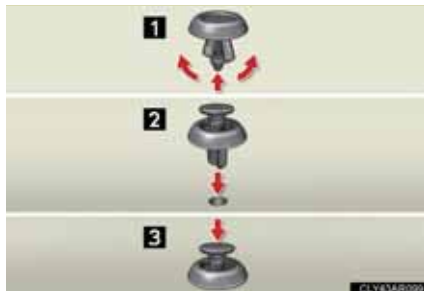

**⚠ NOTICE**


- After installing an engine compartment cover  
Make sure that the cover is securely installed in its original position.

**Engine oil**

With the engine at operating temperature and turned off, check the oil level on the dipstick.

## ■ Checking the engine oil

**STEP 1** Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

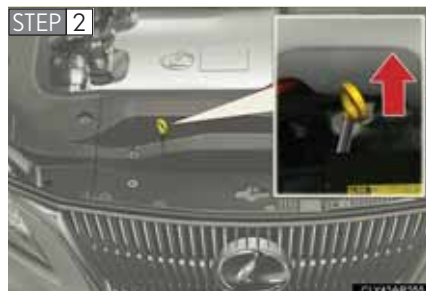

Hold a rag under the end and pull the dipstick out.


**STEP 3** Wipe the dipstick clean.

**STEP 4** Reinsert the dipstick fully.

**STEP 5** Holding a rag under the end, pull the dipstick out and check the oil level.

## 4-3. Do-it-yourself maintenance

**STEP 6** Wipe the dipstick and reinsert it fully.

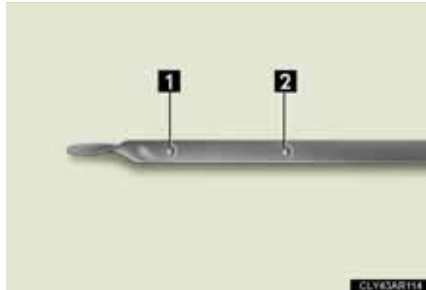

**1** Low

**2** Full

### ■ Adding engine oil



If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

Make sure to check the oil type and prepare the items needed before adding oil.

Oil grade	→P. 604
Oil quantity (Low→Full)	1.5 L (1.6 qt., 1.3 Imp. qt.)
Items	Clean funnel

**STEP 1** Remove the oil filler cap.

**STEP 2** Add engine oil slowly, checking the dipstick.

**STEP 3** Install the filler cap, turning it clockwise.

#### ■ Engine oil consumption

- The amount of engine oil consumed depends on the oil viscosity, the quality of the oil and the way the vehicle is driven.
- More oil is consumed under driving conditions such as high speeds and frequent acceleration and deceleration.
- A new engine consumes more oil.
- When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.
- Oil consumption: Max. 1.0 L per 1000 km (1.1 qt./600 miles, 0.9 Imp. qt./600 miles)
- If your vehicle consumes more than 1.0 L (1.1 qt., 0.9 Imp. qt.) every 1000 km (600 miles), contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### CAUTION

##### ■ Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground.  
Call any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

### 4-3. Do-it-yourself maintenance

 NOTICE

- To prevent serious engine damage
  - Check the oil level on a regular basis.
- When replacing the engine oil
  - Be careful not to spill engine oil on the vehicle components.
  - Avoid overfilling, or the engine could be damaged.
  - Check the oil level on the dipstick every time you refill the vehicle.
  - Be sure the engine oil filler cap is properly tightened.

## Coolant


The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the engine and hybrid system are cold.

### ► Engine coolant reservoir



- 1 Reservoir cap
- 2 “FULL” line
- 3 “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 591)

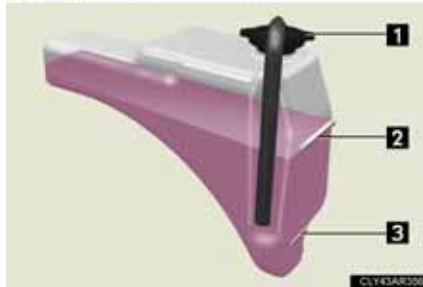

► Power control unit coolant reservoir



1 Reservoir cap

2 “FULL” line

3 “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 607)

■ Coolant selection

Only use “Toyota Super Long Life Coolant” or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

“Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ If the coolant level drops within a short time of replenishing

Visually check the radiators, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, test the cap and check for leaks in the cooling systems.

**⚠ CAUTION**

- When the engine and hybrid system are hot  
Do not remove the coolant reservoir cap.  
The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

**⚠ NOTICE**

- When adding coolant  
Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.
- If you spill coolant  
Be sure to wash it off with water to prevent damage to parts or paint.

**Radiator and condenser**

Check the radiator and condenser and clear away any foreign objects.

If any of the above parts are extremely dirty or you are not sure of their condition, have your vehicle checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**⚠ CAUTION**

- The radiators and condenser may be hot after driving  
Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

### Washer fluid



If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

#### CAUTION

■ When adding washer fluid

Do not add washer fluid when the hybrid system is hot or running as washer fluid contains alcohol and may catch fire if spilled on the hybrid system etc.

#### NOTICE

■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.

■ Diluting washer fluid

Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.

## 4-3. Do-it-yourself maintenance 12-volt battery

### ■ Location



The 12-volt battery is located on the left-hand side of the luggage compartment.

### ■ Removing the 12-volt battery cover

#### ► Vehicles with a compact spare tire



Pull the lever upward to fold back the front part of the deck board.



Pull the folded deck board upright.

### 4-3. Do-it-yourself maintenance




Pull on the attached hook to extend the string.



Use the hook to secure the deck board as shown in the illustration.



Remove the spare tire cover.

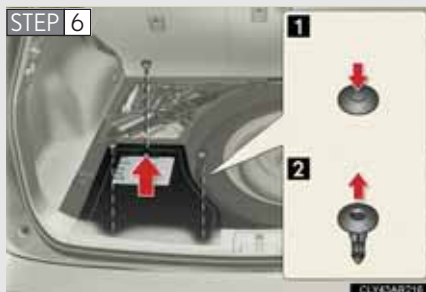

After removing the clips, remove the 12-volt battery cover.

► Vehicles with a full-size spare tire



Pull the lever upward to fold back the front part of the deck board.




Pull on the attached hook to extend the string.



Use the hook to secure the deck board as shown in the illustration.


## 4-3. Do-it-yourself maintenance

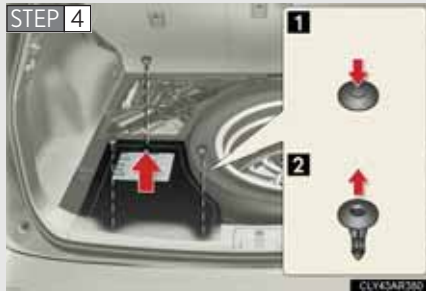

After removing the clips, remove the 12-volt battery cover.


### ■ Exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks or loose clamps.

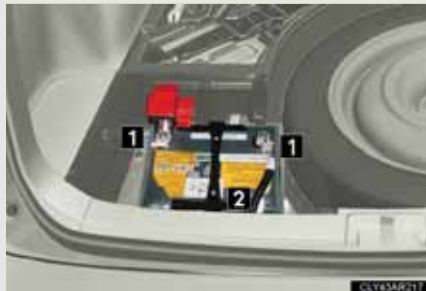

- 1 Terminals
- 2 Hold-down clamp

### ■ Installing the 12-volt battery cover

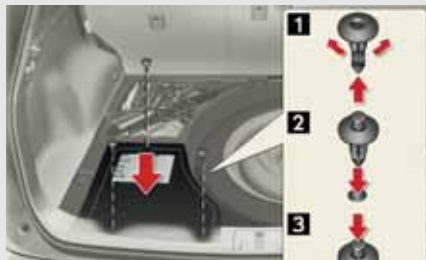

Install the 12-volt battery cover with the clips.

■ Caution symbols

The meanings of each caution symbol on the top of the 12-volt battery are as follows:

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

---

■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

■ After recharging/reconnecting the 12-volt battery

The hybrid system may not start. Follow one or both of the following procedures:

- After opening and closing the driver's door, wait 10 seconds and then attempt to start the hybrid system. (If the system does not start the first time, repeat the procedure.)
- With the shift lever in P and the "POWER" switch off, open and close any door and then attempt to start the hybrid system.

If the system will not start even after multiple attempts at both methods, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**⚠ CAUTION****■ Chemicals in the 12-volt battery**

The 12-volt battery contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

**■ Where to safely charge the 12-volt battery**

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation.

**■ How to recharge the 12-volt battery**

Only perform a slow charge (5 A or less). The 12-volt battery may explode if charged at a quicker rate.

**■ Emergency measures regarding electrolyte**

- If electrolyte gets in your eyes  
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin  
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes  
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte  
Drink a large quantity of water or milk. Get emergency medical attention immediately.

### 4-3. Do-it-yourself maintenance

#### CAUTION

■ When replacing the 12-volt battery

Use a 12-volt battery designed for the RX450h. Failure to do so may cause gas (hydrogen) to enter the passenger compartment, causing a fire or explosion.

For replacement of the 12-volt battery, contact any authorized Lexus dealer or repairer, or another duly qualified professional.

#### NOTICE

■ When recharging the 12-volt battery

Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

Replace or rotate tires in accordance with maintenance schedules and treadwear.

■ Checking tires




- 1 New tread
- 2 Treadwear indicator
- 3 Worn tread

The location of treadwear indicators is shown by the “TWI” or “△” marks, etc., molded on the sidewall of each tire.

Check spare tire condition and pressure if not rotated.

■ Tire rotation

► Vehicles with a compact spare tire

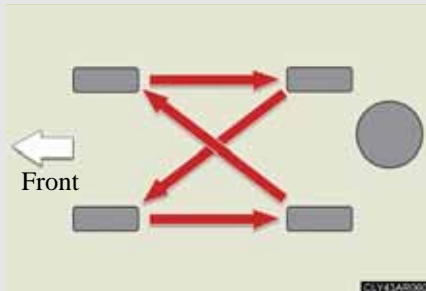

Rotate the tires in the order shown.

To equalize tire wear and help extend tire life, Lexus recommends that you rotate your tires approximately at the following intervals:


2WD models

Every 10000 km (6000 miles)

AWD models

Every 5000 km (3000 miles)

► Vehicles with a full-size spare tire

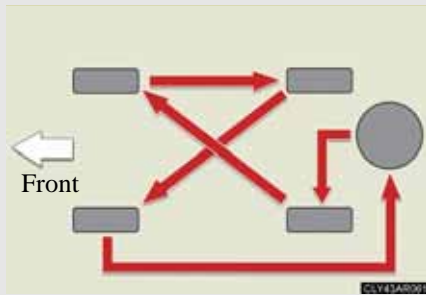

Rotate the tires in the order shown.

To equalize tire wear and help extend tire life, Lexus recommends that you rotate your tires approximately at the following intervals:

2WD models

Every 10000 km (6000 miles)

AWD models

Every 5000 km (3000 miles)

■ When to replace your vehicle's tires

Tires should be replaced if:

- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Tire life

- Standard tire over 6 years old must be checked by a qualified technician even if they have seldom or never been used or damage is not obvious.
- The compact spare tire could be deformed gradually in the long term even if you don't use it. Be sure to have the compact spare tire checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional if it is over 5 years.

■ If the tread on snow tires wears down 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost

### 4-3. Do-it-yourself maintenance

#### CAUTION

##### ■ When inspecting or replacing tires

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train, as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.  
Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.  
Do not use tires if you do not know how they were used previously.

#### NOTICE

##### ■ Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

##### ■ If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

### 4-3. Do-it-yourself maintenance

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Lexus recommends that tire inflation pressure be checked once every two

---

#### ■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency
- Reduced driving comfort and tire life
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.  
If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.  
The appearance of the tire can be misleading. In addition, tire inflation pressure that is even just a few pounds off can degrade ride and handling.
- Do not reduce tire inflation pressure after driving. It is normal for tire inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight.  
Passengers and luggage weight should be placed so that the vehicle is balanced.

### 4-3. Do-it-yourself maintenance

#### CAUTION

- Proper inflation is critical to save tire performance  
Keep your tires properly inflated. Otherwise, the following conditions may occur and result in an accident causing death or serious injury:
  - Excessive wear
  - Uneven wear
  - Poor handling
  - Possibility of blowouts resulting from overheated tires
  - Poor sealing of the tire bead
  - Wheel deformation and/or tire separation
  - A greater possibility of tire damage from road hazards

#### NOTICE

- When inspecting and adjusting tire inflation pressure  
Be sure to put the tire valve caps back on.  
Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps are lost, replace them as soon as possible.

### 4-3. Do-it-yourself maintenance

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

#### ■ Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and inset\*.

Replacement wheels are available at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

\*: Conventionally referred to as “offset”.

Lexus does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

#### ■ Aluminum wheel precautions

- Use only Lexus wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.

### 4-3. Do-it-yourself maintenance

#### CAUTION

- When replacing wheels
  - Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in loss of handling control.
  - Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

### 4-3. Do-it-yourself maintenance

The air conditioning filter must be cleaned or changed regularly to maintain air conditioning efficiency.


■ Removal method

**STEP 1** Set the air conditioning system to recirculated mode.  
(→P. 325)


The air conditioning filter case cannot be removed with the system in the outside air mode.

**STEP 2** Turn the “POWER” switch off.

**STEP 3** Open the glove box. Lift and remove the partition.

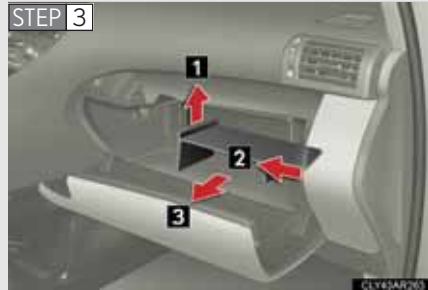


**STEP 4** Remove the glove box cover.

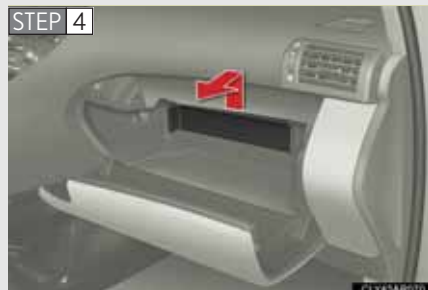

**STEP 5** Remove the filter cover.



### 4-3. Do-it-yourself maintenance

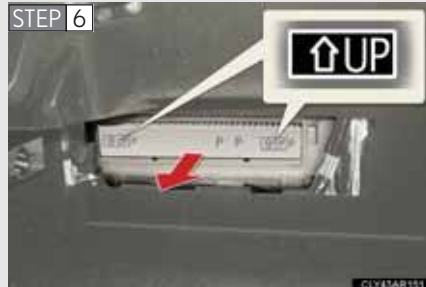

#### ■ Cleaning method



Remove the air conditioning filter and replace it with a new one.

The “↑UP” mark shown on the filter should be pointing up.

If the filter is dirty, clean by blowing compressed air through the filter from the underside.

Hold the air gun 5 cm (2 in.) from the filter and blow for approximately 2 minutes at 500 kPa (5.0 kgf/cm<sup>2</sup> or bar, 72 psi).

If an air gun is not available, have the filter cleaned by any authorized Lexus dealer or repairer, or another duly

#### ■ Checking interval

Inspect, clean and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the “Lexus Service Booklet” or “Lexus Warranty Booklet”.)

#### ■ If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.

 NOTICE

- To prevent damage to the system
  - When using the air conditioning system, make sure that a filter is always installed.
  - When cleaning the filter, do not clean with water.

### 4-3. Do-it-yourself maintenance

### 4-3. Do-it-yourself maintenance

Replace the battery with a new one if it is discharged.

■ You will need the following items:

- Flathead screwdriver
- Small Phillips-head screwdriver
- Lithium battery (CR1632)


■ Replacing the battery

STEP 1



Take out the mechanical key.

STEP 2

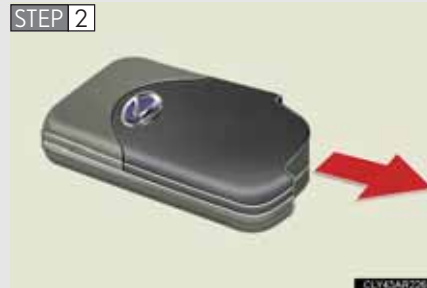


Remove the cover.

STEP 3



Remove the battery cover bolts and remove the battery cover.

### 4-3. Do-it-yourself maintenance

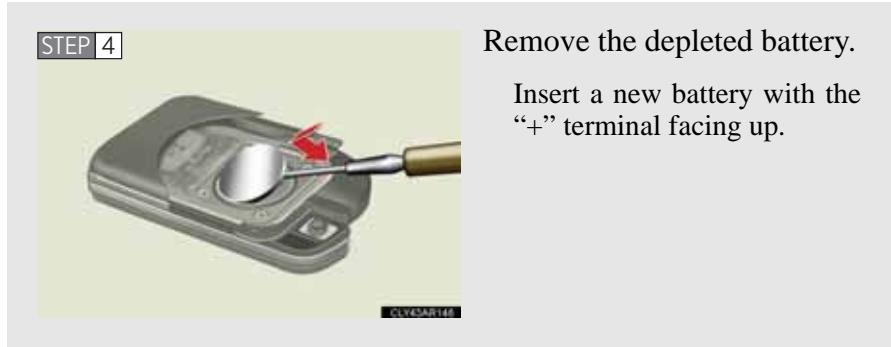

- Use a CR1632 lithium battery
  - Batteries can be purchased at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, local electrical appliance shops or camera stores.
  - Replace only with the same or equivalent type recommended by the manufacturer.
  - Dispose of used batteries according to the local laws.
- If the electronic key battery is discharged

The following symptoms may occur:

  - The smart entry & start system and wireless remote control will not function properly.
  - The operational range is reduced.
- When the card key battery needs to be replaced (if equipped)

The battery for the card key is available only at Lexus dealers. Your Lexus dealer can replace the battery for you.

 CAUTION

■ Removed battery and other parts

Keep away from children. These parts are small and if swallowed by a child, they can cause choking. Failure to do so could result in death or serious injury.

■ Certification for the smart entry & start system

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

 NOTICE

■ For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands.  
Moisture may cause the battery to rust.
- Do not touch or move any other components inside the remote control.
- Do not bend either of the battery terminals.

## 4-3. Do-it-yourself maintenance

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

**STEP 1** Turn the “POWER” switch off.

**STEP 2** Remove the engine compartment cover. (→P. 472)

**STEP 3** Open the fuse box cover.

► Engine compartment (type A fuse box)



Push the tab in and lift the lid off.

► Engine compartment (type B fuse box)



Push the tab in and lift the lid off.

▶ Engine compartment (type C fuse box)



Push the tab in and lift the lid off.

▶ Driver's side instrument panel



Remove the lid.

▶ Luggage compartment (type A fuse box)



## 4-3. Do-it-yourself maintenance

### ► Luggage compartment (type B fuse box)



Remove the terminal cover.

**STEP 4** After a system failure, see “Fuse layout and amperage ratings” (→P. 509) for details about which fuse to check.


**STEP 5** Remove the fuse.



Remove the fuse with the pullout tool.

**STEP 6** Check if the fuse has blown.

### ► Type A

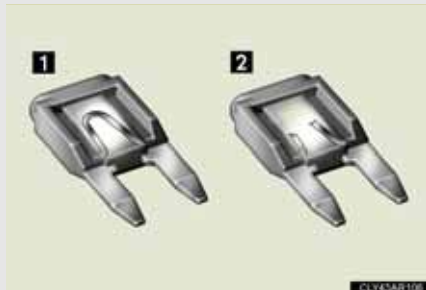


**1** Normal fuse

**2** Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


► Type B

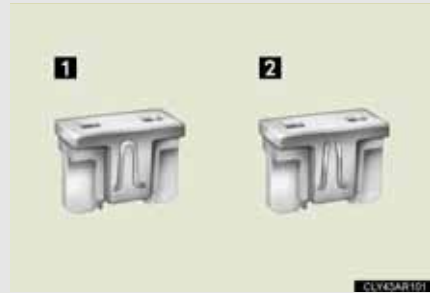

- 1 Normal fuse
- 2 Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


► Type C

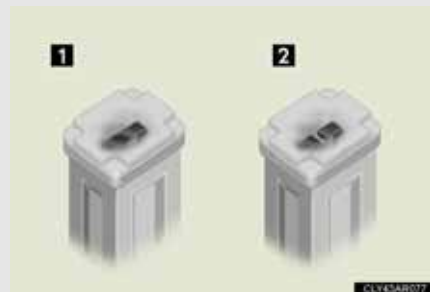

- 1 Normal fuse
- 2 Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

► Type D

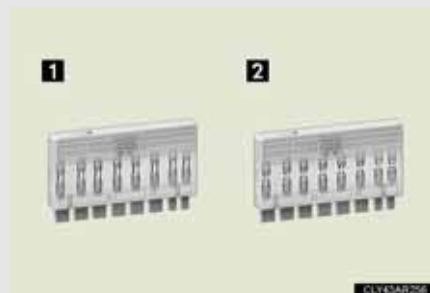


- 1 Normal fuse
- 2 Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

## 4-3. Do-it-yourself maintenance

### ▶ Type E

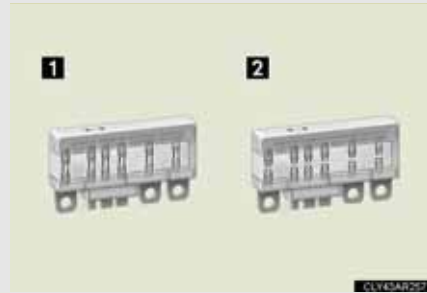


**1** Normal fuse

**2** Blown fuse

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

### ▶ Type F

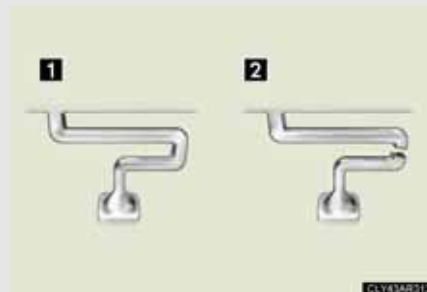


**1** Normal fuse

**2** Blown fuse

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Fuse layout and amperage ratings

■ Engine compartment (type A fuse box)

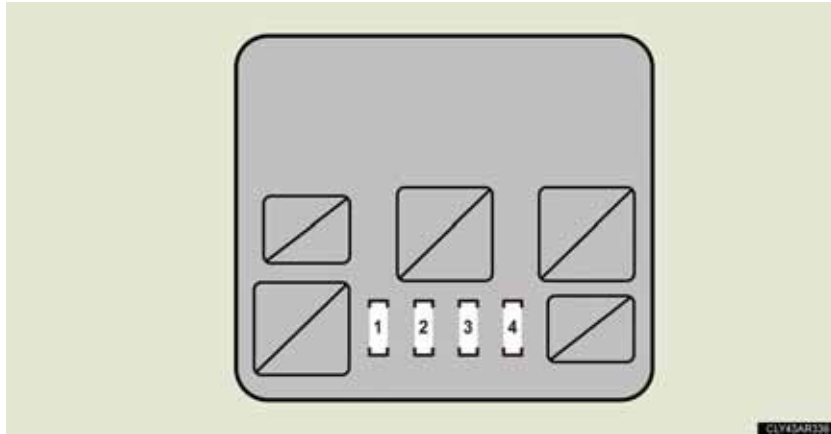


	Fuse	Ampere	Circuit
1	PCU	15 A	Hybrid system
2	IGCT NO. 2	10 A	Hybrid system
3	IGCT NO. 3	10 A	Hybrid system
4	INV W/P	10 A	Hybrid system

4

Maintenance and care

### 4-3. Do-it-yourself maintenance

#### ■ Engine compartment (type B fuse box)

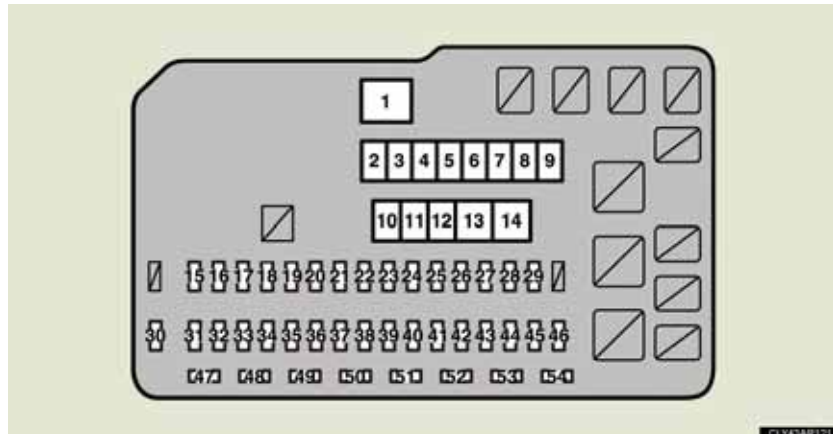

Fuse		Ampere	Circuit
1	SPARE	120 A	—
2	RR DEF	50 A	Rear window defogger
3	AIR SUS	50 A	Electronically modulated air suspension system
4	HTR	50 A	Air conditioning system
5	ECB NO. 1	50 A	Brake system, vehicle stability control, vehicle dynamics integrated management, meters and gauges
6	RDI FAN NO. 1	40 A	Electric cooling fans
7	RDI FAN NO. 2	40 A	Electric cooling fans
8	H-LP CLN	30 A	Headlight cleaner
9	PBD	30 A	Power back door system
10	HV R/B NO. 1	30 A	PCU, IGCT NO. 2, IGCT NO. 3, INV W/P

	Fuse	Ampere	Circuit
11	PD	50 A	Daytime running light system, A/F, H-LP RH HI, H-LP LH LO, H-LP RH LO, H-LP LH HI, HORN, S-HORN, multiplex communication system, multiport fuel injection system/sequential multiport fuel injection system
12	ECB NO. 2	50 A	Brake system
13	HV R/B NO. 2	80 A	ECB MAIN 1, ECB MAIN 2, A/C W/P, BATT FAN, OIL PMP
14	DCDC	150 A	FUEL OPN, DR LOCK, OBD, RR FOG, S/ROOF, INVERTER, ECU-IG1 NO. 1, ECU-IG1 NO. 2, PANEL, GAUGE NO. 1
15	AMP1	30 A	Audio system
16	EFI MAIN	30 A	Multiport fuel injection system/sequential multiport fuel injection system, EFI NO. 2
17	AMP2	30 A	Audio system
18	IG2 MAIN	30 A	Starter system, IGN, GAUGE NO. 2, ECU IG2
19	IP JB	25 A	Power door lock system
20	STR LOCK	20 A	Starter system
21	RAD NO. 3	15 A	Meters and gauges, instrument panel lights, navigation system, audio system
22	HAZ	15 A	Emergency flashers

### 4-3. Do-it-yourself maintenance

	Fuse	Ampere	Circuit
23	ETCS	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
24	RAD NO. 1	10 A	Audio system
25	AM2	7.5 A	Starter system
26	ECU-B NO. 2	7.5 A	Air conditioning system, starter system, electric power steering system
27	MAYDAY/TEL	7.5 A	————
28	IMMOBI	7.5 A	————
29	ECB MAIN NO. 3	15 A	Brake system
30	IGN	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, brake system, SRS airbag system
31	DOME	10 A	Vanity mirror lights, luggage com- partment lights, interior lights, per- sonal lights
32	ECU-B NO. 1	10 A	Interior lights, personal lights, tilt and telescopic steering, multiplex communication system, meters and gauges, power windows, driv- ing position memory system, power seats, power back door, head-up display, starter system, air conditioning system, power door lock system

### 4-3. Do-it-yourself maintenance


	Fuse	Ampere	Circuit
33	EFI NO. 1	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
34	WIP-S	7.5 A	Windshield wipers and washer
35	AFS	7.5 A	Adaptive front-lighting system

### 4-3. Do-it-yourself maintenance

	Fuse	Ampere	Circuit
36	BK/UP LP	7.5 A	Back-up lights
37	HEATER NO. 2	7.5 A	Air conditioning system, AWD system
38	ECU IG1	10 A	Adaptive front-lighting system, headlight cleaner, cooling fan, cruise control, electronically modulated air suspension system, vehicle stability control, vehicle dynamics integrated management, brake system
39	EFI NO. 2	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
40	F/PMP	15 A	Multiport fuel injection system/ sequential multiport fuel injection system
41	DEICER	25 A	Windshield wipers and washer
42	STOP	7.5 A	Vehicle stability control, vehicle dynamics integrated management, high mounted stoplight
43	TOWING BATT	20 A	Trailer battery
44	TOWING	30 A	Trailer lights
45	FILTER	10 A	Condenser
46	IG1 MAIN	30 A	ECU IG1, BK/UP LP, HEATER NO. 2, AFS
47	H-LP RH HI	15 A	Right-hand headlight (high beam)
48	H-LP LH HI	15 A	Left-hand headlight (high beam)
49	BIXENON	10 A	Discharge headlight

	Fuse	Ampere	Circuit
50	H-LP RH LO	15 A	Right-hand headlight (low beam)
51	H-LP LH LO	15 A	Left-hand headlight (low beam)
52	HORN	10 A	Horn
53	A/F	20 A	Multiport fuel injection system/ sequential multiport fuel injection system
54	S-HORN	7.5 A	S-HORN


■ Engine compartment (type C fuse box)

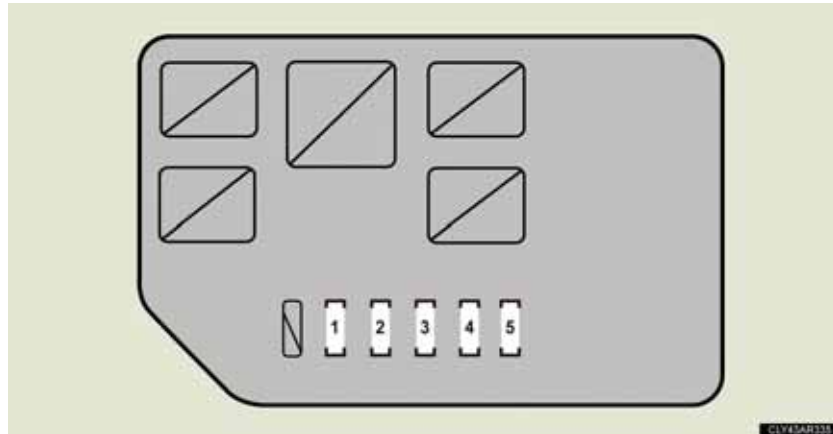

	Fuse	Ampere	Circuit
1	ECB MAIN NO. 1	10 A	Brake system
2	ECB MAIN NO. 2	10 A	Brake system
3	BATT FAN	15 A	Battery cooling fan
4	OIL PMP	10 A	Hybrid system
5	A/C W/P	10 A	Air conditioning system

## 4-3. Do-it-yourself maintenance

### ■ Driver's side instrument panel

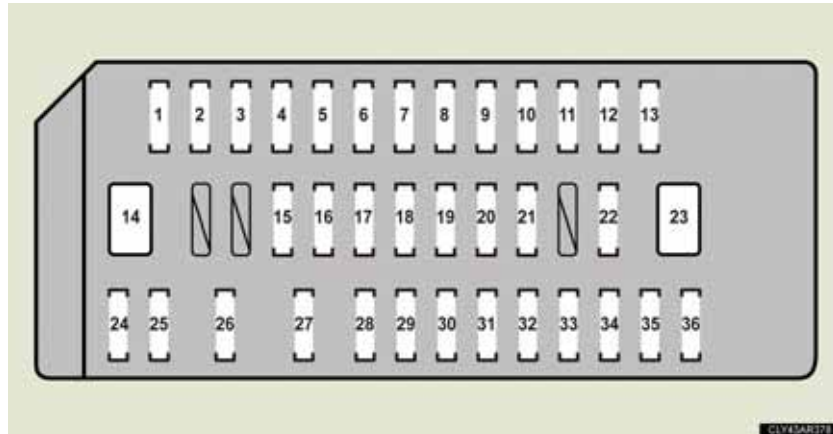

Fuse		Ampere	Circuit
1	P/POINT	15 A	Power outlet
2	ECU-ACC	10 A	Navigation system, outside rear view mirror, multiplex communication system, multi-information display, head-up display
3	CIG	15 A	Power outlet
4	RADIO NO. 2	7.5 A	Audio system, power outlet
5	GAUGE NO. 1	10 A	Emergency flashers, navigation system, head-up display
6	ECU-IG1 NO. 3	10 A	Outside rear view mirror, windshield wipers and washer, seat heaters, starter system, power outlet, moon roof


### 4-3. Do-it-yourself maintenance

	Fuse	Ampere	Circuit
7	ECU-IG1 NO. 1	10 A	Multiplex communication system, electric power steering system, shift lock control system, tilt and telescopic steering, starter system, hybrid transmission system, power back door, hybrid system
8	S/ROOF	30 A	Moon roof
9	FUEL OPN	7.5 A	Fuel filler door opener
10	PSB	30 A	Pre-crash seat belt
11	TI & TE	30 A	Tilt and telescopic steering system
12	DR LOCK	10 A	Power door lock system
13	FR FOG	15 A	Front fog lights
14	P-SEAT LH	30 A	Power seat (left-side)
15	INVERTER	20 A	————
16	RR FOG	7.5 A	Rear fog lights
17	D/L ALT B	25 A	Multiplex communication system
18	HEATER	10 A	Air conditioning system
19	ECU-IG1 NO. 2	10 A	Air conditioning system, multi-port fuel injection system/sequential multiport fuel injection system, SRS airbag system, multi-information display, capacitor
20	PANEL	10 A	Switch illumination, navigation system, height control system, headlight cleaner, windshield wiper de-icer, seat heater, power back door, audio system, multi-information display, air conditioning system

### 4-3. Do-it-yourself maintenance

	Fuse	Ampere	Circuit
21	TAIL	10 A	Position lights, tail lights, license plate lights, front fog lights, towing converter, rear fog lights
22	AIR SUS	20 A	Electronically modulated air suspension system
23	P-SEAT RH	30 A	Power seat (right-side)
24	OBD	7.5 A	On-board diagnosis
25	FR DOOR	25 A	Front power window (right-side)
26	RR DOOR	25 A	Rear power window (right-side)
27	FL DOOR	25 A	Front power window (left-side)
28	RL DOOR	25 A	Rear power window (left-side)
29	FR WASH	25 A	Windshield wipers and washer
30	RR WIP	15 A	Windshield wipers and washer
31	RR WASH	20 A	Windshield wipers and washer
32	FR WIP	30 A	Windshield wipers and washer
33	ECU IG2	10 A	Starter system, Lexus parking assist-sensor, AWD system
34	GAUGE NO. 2	7.5 A	Starter system
35	RH S-HTR	15 A	Seat heater (right-side)
36	LH S-HTR	15 A	Seat heater (left-side)

■ Luggage compartment (type A fuse box)

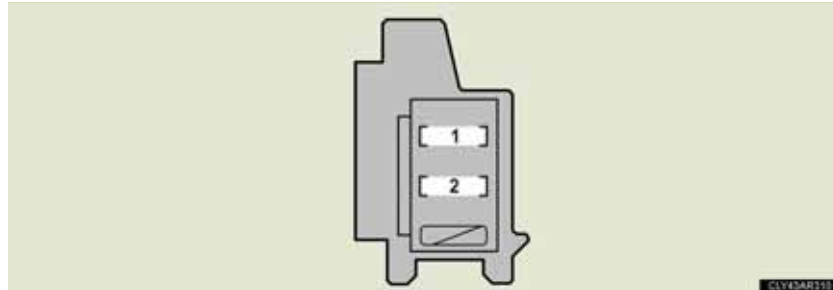

	Fuse	Ampere	Circuit
1	DCDC-S	7.5 A	Hybrid system
2	CAPACITOR	10 A	Hybrid system

■ Luggage compartment (type B fuse box)



	Fuse	Ampere	Circuit
1	MAIN	180 A	All electrical components
2	RR-B	50 A	CAPACITOR, DCDC-S
3	EPS	80 A	Electric power steering system

■ After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 521)
- If the replaced fuse blows again, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ If there is an overload in the circuit

The fuses are designed to blow, protecting the wiring harness from damage.

 CAUTION

■ To prevent system breakdowns and vehicle fire

Observe the following precautions.

Failure to do so may cause damage, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Lexus fuse or equivalent.  
Never replace a fuse with a wire, even as a temporary fix.  
This can cause extensive damage or even fire.
- Do not modify the fuses or the fuse boxes.

 NOTICE

■ Before replacing fuses

Have the cause of electrical overload determined and repaired by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, as soon as possible.

### 4-3. Do-it-yourself maintenance

4

Maintenance and care

## 4-3. Do-it-yourself maintenance

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

For more information about replacing other light bulbs, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### ■ Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 614)

### ■ Removing the engine compartment covers

→P. 472

### ■ Turning off the power back door main switch (if equipped).

→P. 83

### ■ Front bulb locations

#### ▶ Discharge headlights



► LED headlights



■ Rear bulb locations




### Replacing light bulbs

#### ■ Headlight high beams (vehicles with discharge headlights)




Turn the bulb base counter-clockwise.

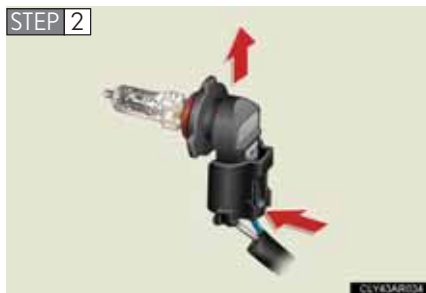

Unplug the connector while depressing the lock release.

#### ■ Headlight high beams (vehicles with LED headlights)

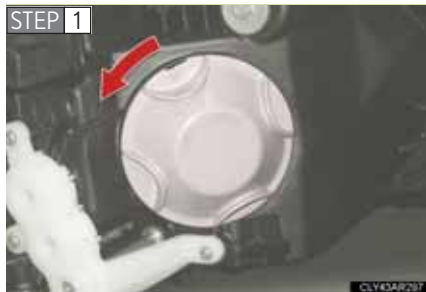

Turn the cover counterclockwise and remove it.



Turn the bulb base counter-clockwise.



Unplug the connector while depressing the lock release.

■ Front position lights (vehicles with discharge headlight)

STEP 1 Before replacing the bulbs:

► Left side



Move the fuse box.

## 4-3. Do-it-yourself maintenance


### ► Right side



Move the washer fluid filler opening.



Turn the bulb base counter-clockwise.

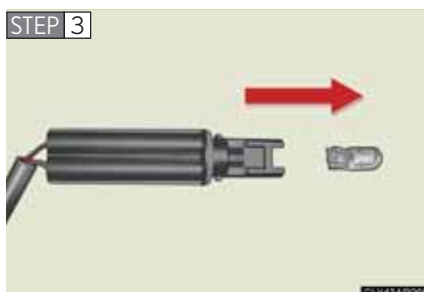

Remove the light bulb.

■ Front position lights (vehicles with LED headlights)

**STEP 1** Before replacing the bulbs:

▶ Left side



Move the fuse box.

▶ Right side




Move the washer fluid filler opening.

**STEP 2**



Turn the bulb base counter-clockwise.

## 4-3. Do-it-yourself maintenance

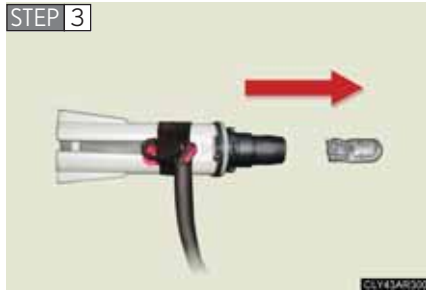

Remove the light bulb.

### ■ Front turn signal lights

**STEP 1** Before replacing the bulbs:

▶ Left side




Move the fuse box.

▶ Right side



Move the washer fluid filler opening.

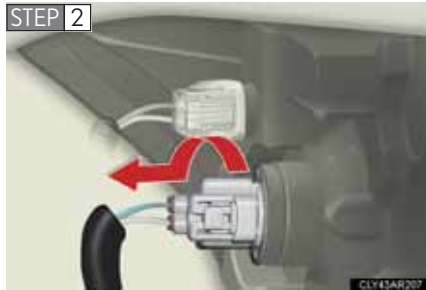

Turn the bulb base counter-clockwise.




Remove the light bulb.

■ Rear turn signal and tail lights




Remove the access hole cover.  
Use a flathead screwdriver wrapped in a cloth.

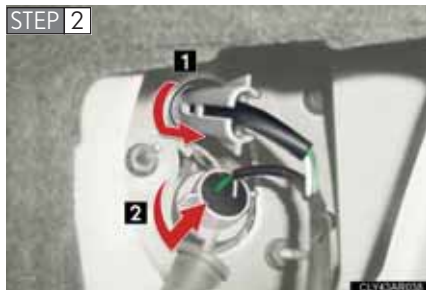

Turn the bulb base counter-clockwise.

- 1 Tail light
- 2 Rear turn signal light


## 4-3. Do-it-yourself maintenance

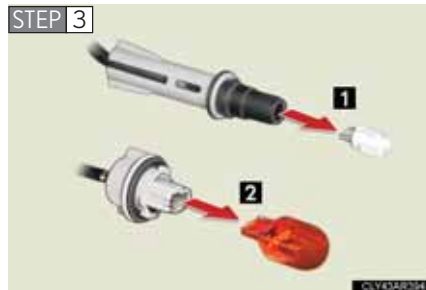

Remove the light bulb.


- 1 Tail light
- 2 Rear turn signal light

### ■ Tail and back-up lights

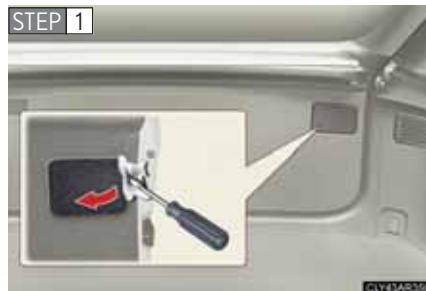

Remove the access hole cover.

Use a flathead screwdriver wrapped in a cloth.

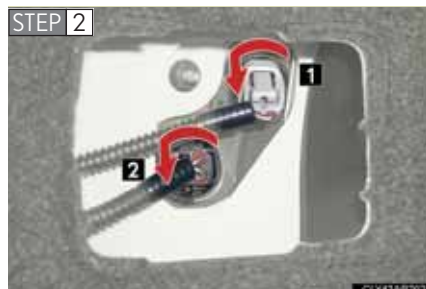

Turn the bulb base counter-clockwise.

- 1 Tail light
- 2 Back-up light




Remove the light bulb.

- 1 Tail light
- 2 Back-up light

■ Rear fog lights (right side)




Remove the bolts using a Phillips-head screwdriver and remove the clip.

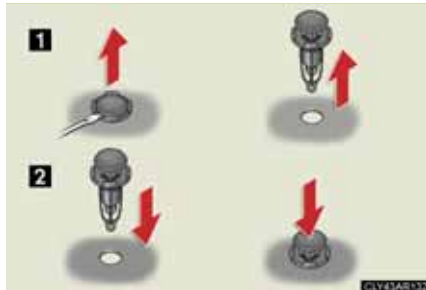

- 1 Removing the clip
- 2 Installing the clip



Turn the bulb base counter-clockwise.

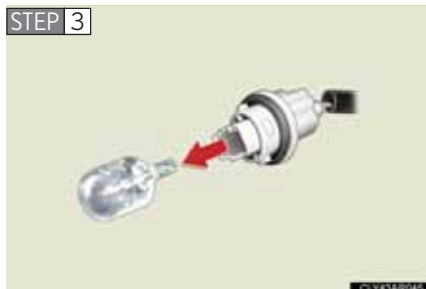


Remove the light bulb.

■ Rear fog lights (left side)



Turn the bulb base counter-clockwise.

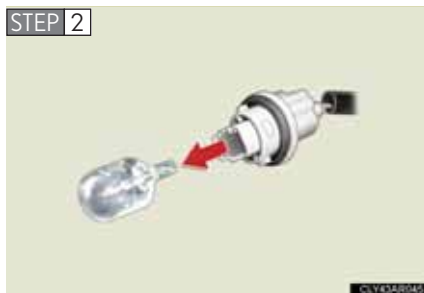

Remove the light bulb.

■ Lights other than the above

If any of the lights listed below has burnt out, have it replaced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Headlight low beams
- Front fog lights
- Side turn signal lights
- Stop lights
- High mounted stoplight
- License plate lights

---

■ Discharge headlights

If voltage to the discharge bulbs is insufficient, the bulbs may not come on, or may go out temporarily. The discharge bulbs will come on when normal power is restored.

■ LED bulbs

The headlight low beams (if equipped), stop lights, side turn signal lights, licence plate lights and high mounted stoplight consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional to have the light replaced.

■ Condensation build-up on the inside of the lens

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, for more information in the following situations. Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction.

- Large drops of water are built up on the inside of the lens.
- Water has built up inside the headlight

 CAUTION

■ Replacing light bulbs

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.  
The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. Hold the bulb by the plastic or metal portion.  
If the bulb is scratched or dropped it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.

■ Discharge headlights

- Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, before replacing discharge headlights (including light bulbs).
- Do not touch the discharge headlight's high voltage socket when the headlights are turned on.  
An extremely high voltage of 20000 V will be discharged and could result in serious injury or death by electric shock.
- Do not attempt to take apart or repair the low beam discharge headlight bulbs, connectors, power supply circuits, or related components.  
Doing so could result in electric shock and serious injury or death.

■ To prevent damage or fire

Make sure bulbs are fully seated and locked.

### 4-3. Do-it-yourself maintenance

4

Maintenance and care

## When trouble arises

# 5

### 5-1. Essential information

Emergency flashers ..... 532

If your vehicle needs to  
be towed..... 533

If you think something is  
wrong ..... 539

### 5-2. Steps to take in an emergency

If a warning light turns  
on or a warning buzzer  
sounds... ..... 540

If a warning message is  
displayed..... 545

If you have a flat tire..... 565

If the hybrid system will  
not start ..... 579

If the shift lever cannot  
be shifted from P ..... 581

If you lose your keys ..... 582

If the electronic key does  
not operate properly..... 583

If the vehicle 12-volt  
battery is discharged ..... 586

If your vehicle overheats . 591

If the vehicle becomes  
stuck..... 596

If your vehicle has to  
be stopped in an  
emergency..... 597

## 5-1. Essential information

### Emergency flashers

Use the emergency flashers if the vehicle malfunctions or is involved in an accident.



Press the switch to flash all the turn signal lights. To turn them off, press the switch once again.

#### NOTICE

- To prevent 12-volt battery discharge  
Do not leave the emergency flashers on longer than necessary when the hybrid system is not operating.

## 5-1. Essential information

### If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, such as a commercial towing service, using a lift-type truck or a flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

#### Before towing

The following may indicate a problem with your hybrid transmission. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional before towing.

- The hybrid system is operating but the vehicle will not move.
- The vehicle makes an abnormal sound.

#### Emergency towing



If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eye-let(s). This should only be attempted on hard surfaced roads for short distances at under 30 km/h (18 mph).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

### Installing towing eyelets


STEP 1



Remove the eyelet cover using a flathead screwdriver.

To protect the bodywork, place a rag between the screwdriver and the vehicle body, as shown in the illustration.

STEP 2

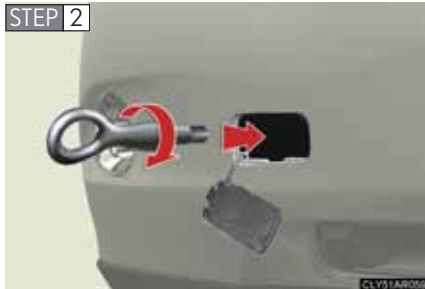

Insert the towing eyelet into the hole and tighten partially by hand.

STEP 3



Tighten down the towing eyelet securely using a wheel nut wrench.


Towing with a sling-type truck



Do not tow with a sling-type truck to prevent body damage.


Towing with a wheel-lift truck

- ▶ From the front (2WD models)

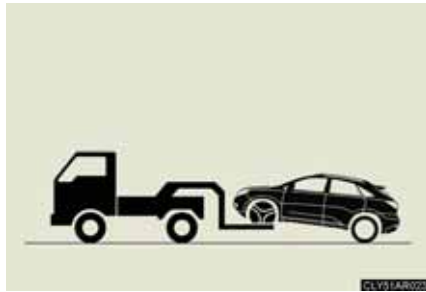


Release the parking brake.

- ▶ From the front (AWD models)

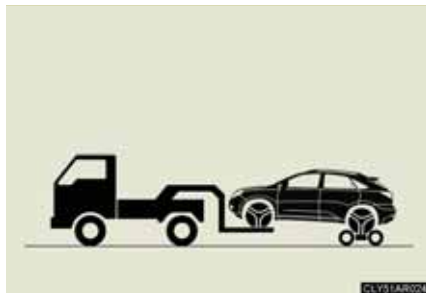


Use a towing dolly under the rear wheels.

► From the rear

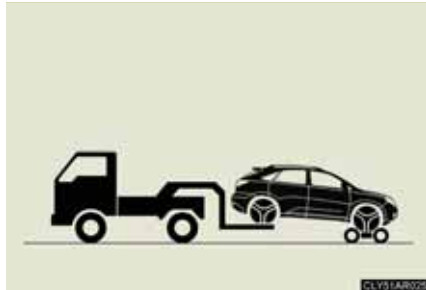

Use a towing dolly under the front wheels.

Using a flatbed truck

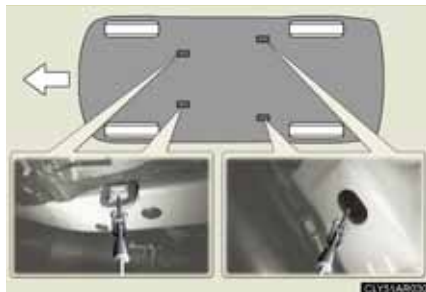

If your Lexus is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.



If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

---

■ Before emergency towing

**STEP 1** Release the parking brake.

**STEP 2** Shift the shift lever to N.

**STEP 3** Turn the “POWER” switch to ACCESSORY (hybrid system off) or ON (hybrid system operating) mode.

■ Emergency towing eyelet location

→P. 566

 CAUTION

■ Caution while towing

- Use extreme caution when towing the vehicle.  
Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelets and the cables or chains. Always be cautious of the surroundings and other vehicles while towing.
- If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.  
If not securely installed, towing eyelets may come loose during towing. This may lead to accidents that cause serious injury or even death.

 NOTICE

- To prevent causing serious damage to the hybrid transmission when towing using a wheel-lift type truck  
2WD models: Never tow this vehicle from the rear with the front wheels on the ground.  
AWD models: Never tow this vehicle with any of the wheels in contact with the ground.
- To prevent damaging the vehicle when towing using a wheel-lift type truck  
When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.
- To prevent body damage when towing using a sling-type truck  
Do not tow with a sling-type truck, either from the front or rear.

## 5-1. Essential information

### If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

#### ■ Visible symptoms

- Fluid leaks under the vehicle.  
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.

#### ■ Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system

#### ■ Operational symptoms

- Engine missing, stumbling or running rough
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road


## 5-2. Steps to take in an emergency

### If a warning light turns on or a warning buzzer sounds...

Calmly perform the following actions if any of the warning lights turns on or flashes. However, if any of the warning lights continue to turn on, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.


Warning light	Warning light/Details
	<p>Brake system warning light (warning buzzer)*</p> <ul style="list-style-type: none"><li>• Low brake fluid</li><li>• Malfunction in the brake system</li></ul> <p>This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released the system is operating normally.</p>

\*: Parking brake engaged warning buzzer

→P. 551






**Stop the vehicle immediately.**

The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.




Warning light	Warning light/Details
	<p>Charging system warning light</p> <p>Indicates a malfunction in the vehicle's charging system</p>

Have the vehicle inspected immediately.

Failing to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.






Warning light	Warning light/Details
	<p>Malfunction indicator lamp</p> <p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The hybrid system;</li> <li>• The electronic engine control system;</li> <li>• The electronic throttle control system; or</li> <li>• The emission control system</li> </ul>
	<p>SRS warning light</p> <p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The SRS airbag system; or</li> <li>• The seat belt pretensioner system</li> </ul>
	<p>ABS warning light</p> <p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The ABS; or</li> <li>• The brake assist system</li> </ul>
	<p>Brake system warning light</p> <p>Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The regenerative brake system; or</li> <li>• The electronically controlled brake system</li> </ul>
	<p>Electric power steering system warning light</p> <p>Indicates a malfunction in the EPS (Electric Power Steering) system</p>

## 5-2. Steps to take in an emergency

Warning light	Warning light/Details
 <p>PCS (Flashing)</p>	<p>Pre-crash safety system warning light (if equipped) Indicates a malfunction in the pre-crash safety system The warning light will operate as follows, even when the system is not malfunctioning:</p> <ul style="list-style-type: none"> <li>• The light will flash quickly when the system is operating. (→P. 290)</li> <li>• The light will turn on when the pre-crash braking is disabled. (→P. 291)</li> <li>• The light will turn on when the system cannot temporarily be used. (→P. 551)</li> </ul>
	<p>Slip indicator Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The VSC system;</li> <li>• The TRC system; or</li> <li>• The hill-start assist control system</li> </ul>
 <p>AFS OFF (Flashes)</p>	<p>“AFS OFF” indicator Indicates a malfunction in the adaptive front-lighting system</p>

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light goes off.

Warning light	Warning light/Details	Correction procedure
	Open door warning light (warning buzzer)* <sup>1</sup> Indicates that one or more of the doors is not fully closed.	Check that all the doors are closed.
	Low fuel level warning light Indicates remaining fuel is approximately 10.1 L (2.7 gal., 2.2 Imp. gal.) or less	Refuel the vehicle.
 (On the instrument panel)	Driver's seat belt reminder light (warning buzzer)* <sup>2</sup> Warns the driver to fasten his/her seat belt.	Fasten the seat belt.
 (On the center panel)	Front passenger's seat belt reminder light (warning buzzer)* <sup>2</sup> Warns the front passenger to fasten his/her seat belt.	Fasten the seat belt.
	Master warning light A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.	→P. 545

\*<sup>1</sup>: Open door warning buzzer:

The open door warning buzzer sounds to alert one or more of the doors is not fully closed (with the vehicle having reached a speed of 5 km/h [3 mph]).

(→P. 551)

\*<sup>2</sup>: Driver's and front passenger's seat belt buzzer:

The driver's and front passenger's seat belt buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. The buzzer sounds for 30 seconds after the vehicle reaches a speed of 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

---

■ Front passenger detection sensor, passenger seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ Electric power steering system warning light

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on.

 CAUTION

■ If the electric power steering system warning light comes on

The steering wheel may become extremely heavy.

If the steering wheel becomes heavier than usual when operating, hold it firmly and operate it using more force than usual. If the electric power steering system warning light comes on, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## 5-2. Steps to take in an emergency

### If a warning message is displayed

If a warning is shown on the multi-information display, stay calm and perform the following actions:



#### 1 Multi-information display

A warning message is displayed.



#### 2 Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.

If any of the warning lights comes on again after the following



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Warning message	Details
	Indicates the following: <ul style="list-style-type: none"><li>• The brake fluid level is low; or,</li><li>• The brake system is malfunctioning.</li></ul> A buzzer also sounds.
	Indicates a malfunction in: <ul style="list-style-type: none"><li>• The regenerative brake system; or,</li><li>• The electronically controlled brake system</li></ul>







**Stop the vehicle immediately.**

A buzzer sounds and a warning message is shown on the multi-information display. The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.





Warning message	Details
	<p>Indicates abnormal engine oil pressure</p>
	<p>Indicates a malfunction in the hybrid system</p>











Have the vehicle inspected immediately.

A buzzer sounds and a warning message is shown on the multi-information display. Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

Warning message	Details
  (AWD models)	Indicates a malfunction in the AWD system
 	Indicates a malfunction in the steering lock system
  (If equipped)	Indicates a malfunction in the electronically modulated air suspension system






5-2. Steps to take in an emergency

Warning message	Details
<p><b>CHECK AFS SYSTEM</b></p> <p><b>AFS OFF</b> (Flashes)</p> 	<p>Indicates a malfunction in the adaptive front lighting system</p>
<p><b>CHECK HEADLIGHT SYSTEM</b></p>  (Flashes) (If equipped)	<p>Indicates a malfunction in the LED headlight system</p>
<p><b>CHECK BRAKE LAMP SYSTEM</b></p> 	<p>Indicates a malfunction in the brake light system</p>
<p><b>CHECK PCS SYSTEM</b></p> <p><b>PCS</b> (Flashes)</p>  (If equipped)	<p>Indicates a malfunction in the pre-crash safety system</p>

Warning message	Details
  (If equipped)	Indicates a malfunction in the Lexus parking assist-sensor The malfunctioning assist-sensor is flashing.
  (If equipped)	Indicates a malfunction in the active stabilizer suspension system
  (Flashes) or  (Flashes)  (If equipped)	Indicates a malfunction in the radar cruise control system Press the “ON-OFF” button once to deactivate the system, and then press the button again to reactivate the system.
 	Indicates a malfunction in the automatic headlight leveling system



5  
When trouble arises

## 5-2. Steps to take in an emergency

Warning message	Details
 	Indicates a malfunction in: <ul style="list-style-type: none"><li>• The SRS airbag system; or,</li><li>• The seat belt pretensioner system</li></ul>
	Indicates a malfunction in: <ul style="list-style-type: none"><li>• The ABS; or,</li><li>• The brake assist system</li></ul>
 	Indicates a malfunction in the EPS (Electric Power Steering) system





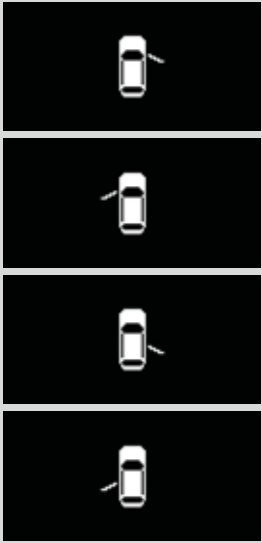


Follow the correction procedures.

A buzzer sounds and a warning message is shown on the multi-information display. After taking the specified steps to correct the suspected problem, check that the warning message goes off.

Warning message	Details	Correction procedure
	<p>Indicates that one or more of the doors is not fully closed</p> <p>The system also indicates which doors are not fully closed.</p> <p>If the vehicle reaches a speed of 5 km/h (3 mph), a buzzer sounds to indicate that the door(s) are not yet fully closed.</p>	<p>Make sure that all the doors are closed.</p>
	<p>Indicates that the hood is not fully closed</p> <p>If the vehicle reaches a speed of 5 km/h (3 mph), a buzzer sounds to indicate that the hood is not yet fully closed.</p>	<p>Close the hood.</p>




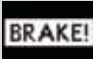


5-2. Steps to take in an emergency

Warning message	Details	Correction procedure
	<p>Indicates that the back door is not fully closed</p> <p>If the vehicle reaches a speed of 5 km/h (3 mph), a buzzer sounds to indicate that the back door is not yet fully closed.</p>	<p>Close the back door.</p>
 <p>(Flashes) (If equipped)</p>	<p>Indicates that the moon roof is not fully closed (with the “POWER” switch off, and the driver's door open)</p>	<p>Close the moon roof.</p>
 <p>(If equipped)</p>	<p>Warns the rear passenger to fasten his/her seat belt</p> <p>If a rear passenger once fastens their seat belt and then unfastens it, the warning message will appear on the display and a buzzer* will sound.</p>	<p>Fasten the seat belt.</p>




Warning message	Details	Correction procedure
	<p>Indicates that the parking brake is still engaged</p> <p>If the vehicle reaches a speed of 5 km/h (3 mph),  flashes and a buzzer sounds to indicate that the parking brake is still engaged.</p>	<p>Release the parking brake.</p>
	<p>Indicates that the washer fluid level is low</p>	<p>Add washer fluid.</p>
 	<p>Indicates that engine oil level is low</p> <p>A buzzer also sounds.</p>	<p>Check the level of engine oil, and add if necessary.</p>
  (If equipped)	<p>Indicates that the pre-crash safety system is not currently functional because the grille or the sensor is dirty.</p> <p>This message also appears when the pre-crash safety system is not functional due to overheating.</p>	<ul style="list-style-type: none"> <li>• Check the grille and the sensor (→P. 291) and clean them if they are dirty.</li> <li>• In case of overheating, the system will become functional once the system cools down.</li> </ul>






5-2. Steps to take in an emergency

Warning message	Details	Correction procedure
  (If equipped)	Indicates that Lexus parking assist-sensor is dirty or covered with ice A buzzer also sounds. The site of the malfunction and the vehicle image are flashing.	Clean the sensor.
  (Flashes)  (If equipped)	Indicates that the radar cruise control sensor is dirty or covered with ice A buzzer also sounds.	Clean the sensor.
  (Flashes)  (If equipped)	Indicates that the radar cruise control system is unable to judge vehicle-to-vehicle distance A buzzer also sounds.	<ul style="list-style-type: none"> <li>• Switch driving mode to normal.</li> <li>• If the windshield wipers are on, turn them off or set them to a mode other than AUTO or high speed wiper operation.</li> </ul>

Warning message	Details	Correction procedure
 (If equipped)	Indicates that there is a possibility of a frontal collision At the same time,  will appear on the head-up display (part of the image flashes).	Slow the vehicle by applying the brakes.
 <b>PCS</b> (Flashes) (If equipped)	Indicates that there is a high possibility of a frontal collision, or that the pre-crash braking function is operating At the same time,  will appear on the head-up display (the image flashes).	Slow the vehicle by applying the brakes.
 (Flashes) (If equipped)	Indicates that your vehicle is nearing the vehicle ahead (in radar cruise mode) At the same time,  will appear on the head-up display (the image flashes).	Slow the vehicle by applying the brakes.

5-2. Steps to take in an emergency

Warning message	Details	Correction procedure
<p><b>ENGINE OVERHEAT</b></p> 	<p>Indicates that the engine has overheated A buzzer also sounds.</p>	<p>Stop and check. (→P. 594)</p>
<p><b>HYBRID SYSTEM OVERHEAT</b></p> 	<p>Indicates that the hybrid system has overheated. A buzzer also sounds.</p>	<p>Stop and check. (→P. 594)</p>
<p><b>LOW TRACTION BATTERY SHIFT TO P RANGE</b></p>  (Flashes)	<p>Indicates that the hybrid battery (traction battery) is low.</p>	<ul style="list-style-type: none"> <li>• If a buzzer sounds intermittently, stop the vehicle in a safe place and shift the shift lever to P to charge the hybrid battery (traction battery).</li> <li>• If a buzzer sounds continuously, immediately stop the vehicle in a safe place. Turn the “POWER” switch off and then to ON mode to restart the hybrid system. Ensuring the shift lever is in P, charge the hybrid battery (traction battery).</li> </ul>

Warning message	Details	Correction procedure
	Indicates that remaining fuel is approximately 10.1 L (2.7 gal., 2.2 Imp. gal.) or less	Refuel the vehicle.
  (Flashes)	Indicates that the “POWER” switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on.	Turn the lights off.
  (Flashes)	Indicates that the driver's door is opened when the hybrid transmission is out of P with the hybrid system on.	Shift the shift lever to P.



\*: Rear passengers' seat belt buzzer:



The rear passengers' seat belt buzzer sounds to alert the driver that the rear seat belt is not fastened. The buzzer sounds for 30 seconds after the vehicle reaches a speed of 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

**Have the malfunction repaired immediately**






After taking the specified steps to correct the suspected problem, check that the warning message and light go off.


5-2. Steps to take in an emergency

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once	—	 <p>(Flashes)</p>	The electronic key is not detected when an attempt is made to start the hybrid system.	Confirm the location of the electronic key.
SOUNDS ONCE	SOUNDS 3 TIMES	 <p>(Flashes)</p>	The electronic key was carried outside the vehicle and a door other than the driver's door was opened and closed while the "POWER" switch was in a mode other than off.	Bring the electronic key back into the vehicle.
			The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was in P and the "POWER" switch was not turned off.	Turn the "POWER" switch off or bring the electronic key back into the vehicle.





Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once	Sounds once	<p><b>KEY NOT DETECTED</b></p> <p><b>TURN POWER OFF</b></p> <p>(Displayed alternately)</p> <p> (Flashes)</p>	An attempt was made to exit the vehicle with the electronic key and lock the doors without first turning the “POWER” switch off.	Turn the “POWER” switch off and lock the doors again.
Sounds once	—	<p><b>KEY NOT DETECTED</b></p> <p> (Flashes)</p>	<p>An attempt was made to start the hybrid system without the electronic key being present, or the electronic key was not functioning normally.</p> <p>An attempt was made to drive when the regular key was not inside the vehicle.</p>	Confirm that the electronic key is inside the vehicle.






5-2. Steps to take in an emergency

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Continuous	—	  (Flashes)	The driver's door was opened when the shift lever was not in P and the "POWER" switch was not turned off.	Shift the shift lever to P.
Continuous	Continuous	  (Displayed alternately)  (Flashes)	The driver's door was opened and closed while the electronic key was not in the vehicle, the shift lever was not in P and the "POWER" switch was not turned off.	<ul style="list-style-type: none"> <li>• Shift the shift lever to P.</li> <li>• Bring the electronic key back into the vehicle.</li> </ul>



Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once	Continuous	<div data-bbox="553 940 808 1073" style="background-color: black; color: white; padding: 5px; text-align: center;"> <b>KEY DETECTED IN VEHICLE</b> </div> <div data-bbox="553 1087 646 1146" style="display: inline-block; text-align: center;">  </div> <span data-bbox="651 1094 760 1125">(Flashes)</span>	<p data-bbox="831 575 1027 898">An attempt was made to lock the doors using the smart entry &amp; start system while the electronic key was still inside the vehicle.</p> <p data-bbox="831 919 1027 1507">An attempt was made to lock either front door by opening a door and putting the inside lock button into the lock position then closing the door by pulling on the outside door handle with the electronic key still inside the vehicle.</p>	<p data-bbox="1049 951 1243 1129">Retrieve the electronic key from the vehicle and lock the doors again.</p>

5-2. Steps to take in an emergency



Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sound once	—	  (Flashes)	<ul style="list-style-type: none"> <li>• When the doors were unlocked with the electronic key and then the “POWER” switch was pressed, the mechanical key could not be detected in the vehicle.</li> <li>• The electronic key could not be detected in the vehicle even after the “POWER” switch was pressed two consecutive times.</li> </ul>	Touch the electronic key to the “POWER” switch while depressing the brake pedal.
Sound once	—	  (Flashes)	An attempt was made to start the hybrid system with the shift lever in an incorrect position.	Shift the shift lever to P and start the hybrid system.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once	—	  (Flashes)	An attempt was made to turn the “POWER” switch off when the shift lever was not in P.	To turn off the hybrid system, first shift the shift lever to P and then turn the “POWER” switch off.
—	—		Power was turned off due to the automatic power off function.	Next time when starting the hybrid system, increase the hybrid system speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery.
Sounds once	—	 	The electronic key has a low battery.	Replace the electronic key battery. (→P. 500)

5-2. Steps to take in an emergency

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
SOUNDS ONCE	—		<p>The driver's door was opened and closed with the "POWER" switch turned off and then the "POWER" switch was put in ACCESSORY mode twice without the hybrid system being started.</p>	<p>Press the "POWER" switch while depressing the brake pedal.</p>
		 (Flashes)	<p>During an hybrid system starting procedure in the event that the electronic key was not functioning properly (→P. 586), the "POWER" switch was touched with the electronic key.</p>	<p>Press the "POWER" switch within 10 seconds of the buzzer sounding.</p>

## 5-2. Steps to take in an emergency

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Sounds once	—	  (Flashes)	The steering lock could not be released within 3 seconds of the “POWER” switch being pressed.	Press the “POWER” switch while depressing the brake pedal and moving the steering wheel left and right.

---

■ Warning light display in radar cruise mode (if equipped)

In the following cases, the warning light may not be displayed even if vehicle-to-vehicle distance decreases:

- When your vehicle and the vehicle ahead are traveling at the same speed or the vehicle ahead is traveling more quickly than your vehicle
- When the vehicle ahead is traveling at a very low speed
- Immediately after cruise control speed is set
- At the instant the accelerator pedal is depressed

Remove the flat tire and replace it with the spare provided.


■ Before jacking up the vehicle

- Stop the vehicle on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Vehicles with electronically modulated air suspension:  
Turn off the height control. (→P. 271)
- Stop the hybrid system.
- Turn on the emergency flashers.


5-2. Steps to take in an emergency

■ Location of the spare tire, jack and tools

▶ Vehicles with a compact spare tire

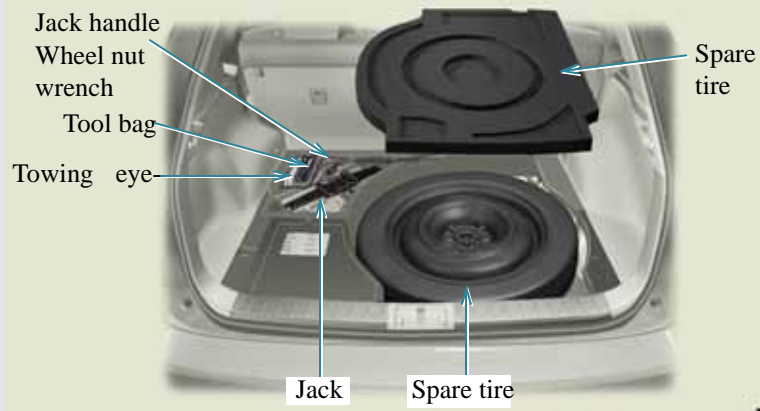

▶ Vehicles with a full-size spare tire

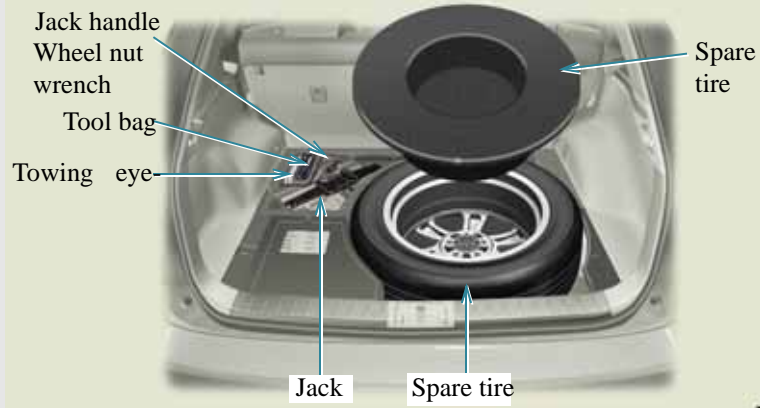

Taking out the jack

► Vehicles with a compact spare tire



Pull the lever upward to fold back the front part of the deck board.



Pull the folded deck board upright.



Pull on the attached hook to extend the string.

5-2. Steps to take in an emergency



Use the hook to secure the deck board as shown in the illustration.



Remove the jack after removing the hook.

► Vehicles with a full-size spare tire



Pull the lever upward to fold back the front part of the deck board.




Pull on the attached hook to extend the string.

5-2. Steps to take in an emergency



Use the hook to secure the deck board as shown in the illustration.

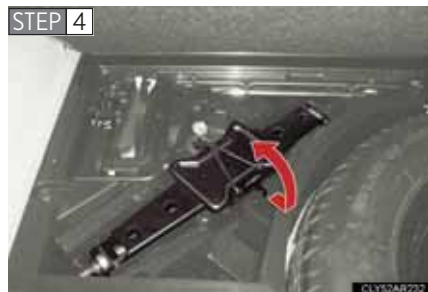

Remove the jack after removing the hook.

## 5-2. Steps to take in an emergency

### Taking out the spare tire

**STEP 1** Lift up the deck board. (See “Taking out the jack” for details.)

**STEP 2** Remove the spare tire cover.

**STEP 3** Loosen the center fastener that secures the spare tire.

#### ► Vehicles with a compact spare tire



#### ► Vehicles with a full-size spare tire




Replacing a flat tire



Chock the tires.

Flat tire		Wheel chock posi-
Front	Left-hand side	Behind the rear right-hand side
	Right-hand side	Behind the rear left-hand side
Rear	Left-hand side	In front of the front right-hand
	Right-hand side	In front of the front left-hand

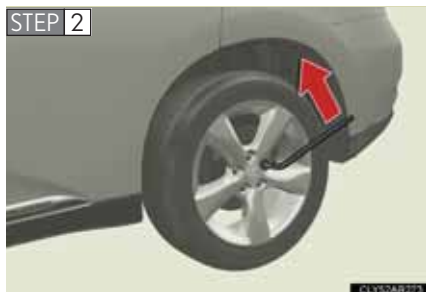


Slightly loosen the wheel nuts (one turn).



Turn the tire jack portion “A” by hand until the notch of the jack is in contact with the jack point.

5-2. Steps to take in an emergency

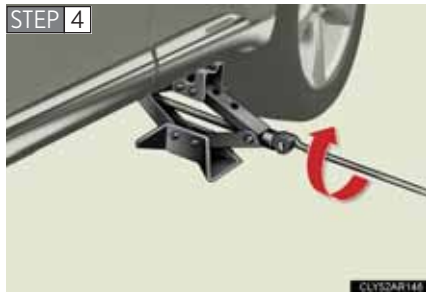


Raise the vehicle until the tire is slightly raised off the ground.



Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

### Installing the spare tire

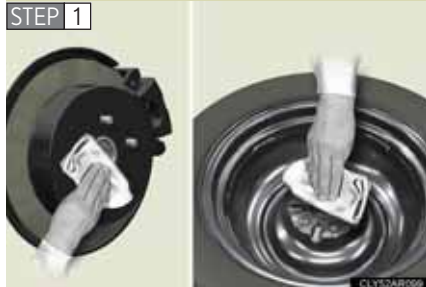


Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.


**STEP 2** Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.

► Vehicles with a compact spare tire

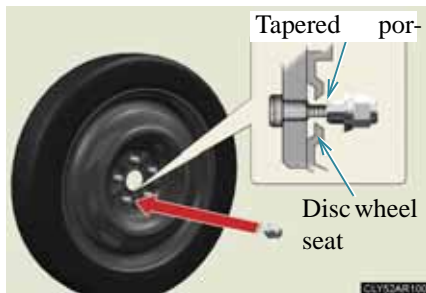


Tighten the nuts until the tapered portion comes into loose contact with the disc wheel seat.

► Vehicles with a full-size spare tire

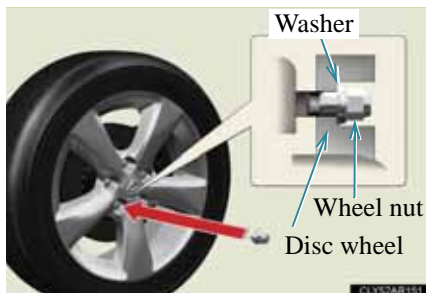


Turn the nuts until the washers come into contact with the wheel.

## 5-2. Steps to take in an emergency

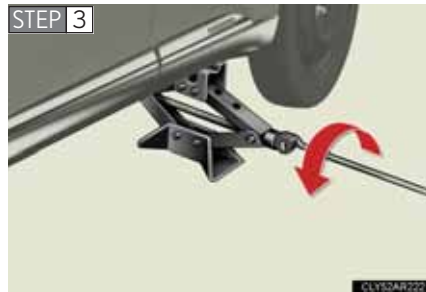

Lower the vehicle.

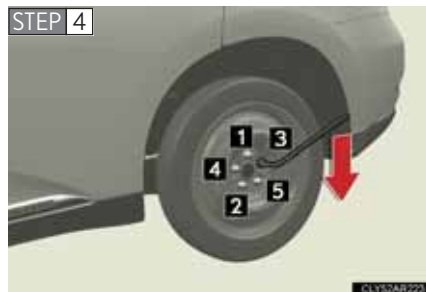

Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:  
103 N•m (10.5 kgf•m, 76 ft•lbf)

**STEP 5** Stow the flat tire, tire jack and all tools.

### ■ The compact spare tire

- The compact spare tire is identified by the label “TEMPORARY USE ONLY” on the tire sidewall.  
Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire.  
(→P. 610)

### ■ If you have a flat front tire on a road covered with snow or ice

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

**STEP 1** Replace a rear tire with the compact spare tire.

**STEP 2** Replace the flat front tire with the tire removed from the rear of the vehicle.

**STEP 3** Fit tire chains to the front tires.

 CAUTION

■ Using the tire jack

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Always check that the tire jack is securely set to the jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start or run the hybrid system while your vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- Vehicles with electronically modulated air suspension: Be sure to turn off the height control and stop the hybrid system.

Take particular care when lowering the vehicle to ensure that no one working on or near the vehicle may be injured.

 CAUTION

■ Replacing a flat tire

- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
- Never use oil or grease on the wheel bolts or wheel nuts.  
Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
- Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.

■ Replacing a flat tire for vehicles with power back door

In cases such as when replacing tires, make sure to turn off the power back door main switch (→P. 83). Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.

■ When using the compact spare tire

- Remember that the compact spare tire provided is specifically designed for use with your vehicle. Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, deceleration and braking, as well as sharp cornering.

## 5-2. Steps to take in an emergency

### CAUTION

#### ■ When the compact spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRC
- VDIM
- Lexus parking assist-sensor (if equipped)
- Navigation system (if equipped)
- Cruise control (if equipped)
- Dynamic radar cruise control (if equipped)
- Electronically modulated air suspension (if equipped)
- PCS (Pre-Crash Safety system) (if equipped)

Also, not only can the following system not be utilized fully, but it may even negatively affect the drive-train components:

- AWD system (if equipped)

#### ■ Speed limit when using the compact spare tire

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

 NOTICE

■ Do not drive the vehicle with a flat tire

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

■ Be careful when driving over bumps with the compact spare tire installed on the vehicle.

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

■ Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

## 5-2. Steps to take in an emergency

### If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

- The hybrid system will not start even though the correct starting procedure is being followed. (→P. 195)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P. 585)
- There may be a malfunction in the immobilizer system. (→P. 133)
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P. 582)

- The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P. 588)
- The 12-volt battery terminal connections may be loose or corroded.

- The interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the 12-volt battery terminals may be disconnected.
- The 12-volt battery may be discharged. (→P. 588)

Contact any authorized Lexus dealer or repairer, or another duly

## 5-2. Steps to take in an emergency

### Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the “POWER” switch is functioning normally:

**STEP 1** Set the parking brake.

**STEP 2** Shift the shift lever to P.

**STEP 3** Turn the “POWER” switch to ACCESSORY mode.

**STEP 4** Press and hold the “POWER” switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## 5-2. Steps to take in an emergency

### If the shift lever cannot be shifted from P

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted:

**STEP 1** Set the parking brake.

**STEP 2** Turn the “POWER” switch to ACCESSORY mode.

**STEP 3** Depress the brake pedal.



Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

## 5-2. Steps to take in an emergency

New genuine Lexus keys can be made by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, using one of the other keys and the key number stamped on your key num-

If communication between the electronic key and vehicle is interrupted (→P. 63) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the hybrid system can be started by following the procedure below.

#### Locking and unlocking the side doors and key linked functions



Use the mechanical key (→P. 54) in order to perform the following operations (driver's door only):

- 1** Locks all the doors
- 2** Closes the windows and moon roof (turn and hold)
- 3** Unlocks all the doors  
An alarm will sound if the alarm is set. (→P. 139)
- 4** Opens the windows and moon roof (turn and hold)

## 5-2. Steps to take in an emergency

### Changing “POWER” switch modes and starting the hybrid system

**STEP 1** Ensure that the shift lever is in P and depress the brake pedal.



Touch the Lexus emblem side of the electronic key to the “POWER” switch.

If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.



**STEP 3** To change “POWER” switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the “POWER” switch. Modes can be changed each time the switch is pressed. (→P. 196)

To start the hybrid system: Press the “POWER” switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

---

■ Stopping the hybrid system

Shift the shift lever to P and press the “POWER” switch as you normally do when stopping the hybrid system.

■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 500)

■ Alarm

Using the mechanical key to lock the doors will not set the alarm system. If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P. 139)

5-2. Steps to take in an emergency

588

The following procedures may be used to start the hybrid system if the vehicle's 12-volt battery is discharged.

You can also call any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.


If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

**STEP 1** Open the hood and remove the engine compartment covers.

(→P. 472)

**STEP 2** Remove the fuse box cover and open the exclusive jump starting terminal cover.

**STEP 3**

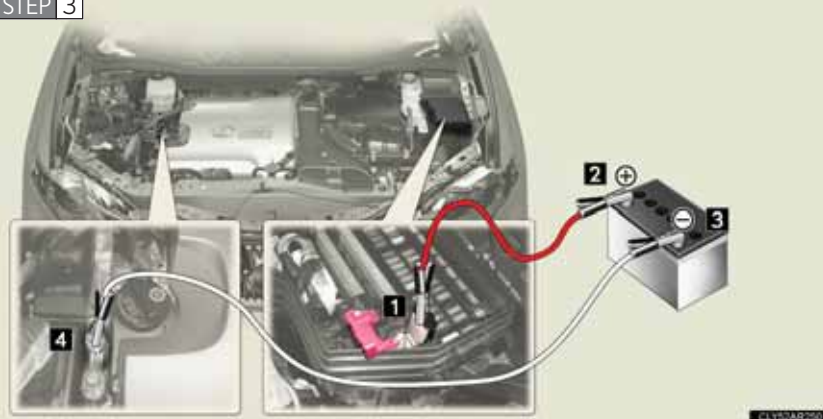

Connect the jumper cables according to the following procedure:

- 1** Connect a positive jumper cable clamp to the exclusive jump starting terminal on your vehicle
- 2** Connect a positive jumper cable clamp to the positive (+) battery terminal on the second vehicle

## 5-2. Steps to take in an emergency

**4** Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts, connect the jumper cable to ground on your vehicle as shown in the illustration.

**STEP 4** Start the engine of the second vehicle. Increase the engine speed slightly and maintain that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.

**STEP 5** Open and close any of the doors of your vehicle with the “POWER” switch off.

**STEP 6** Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the “POWER” switch to ON mode.

**STEP 7** Make sure the “READY” indicator light comes on. If the indicator light does not come on, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**STEP 8** Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.

## 5-2. Steps to take in an emergency

### ■ Starting the hybrid system when the 12-volt battery is discharged

The hybrid system cannot be started by push-starting.

### ■ To prevent 12-volt battery discharge

- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

### ■ When the 12-volt battery is removed or discharged

- The power back door must be initialized. (→P. 625)
- The hybrid system may not start. (→P. 486)

### ■ Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

### CAUTION

#### ■ Avoiding 12-volt battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the “+” terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

 CAUTION

■ 12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.

■ After recharging the 12-volt battery

Have the 12-volt battery inspected at your Lexus dealer as soon as possible. If the 12-volt battery is deteriorating, continued use may cause the 12-volt battery to emit a malodorous gas, which may be detrimental to the health of passengers.

■ When replacing the 12-volt battery

→P. 488

 NOTICE

■ When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or belt.

■ Avoiding accidental short-circuits

When connecting jumper cables, observe the following precautions:

- Make sure each jumper cable is connected to the correct terminal.
- Do not allow the ends of the jumper cable used for the “+” terminals to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the “+” and “-” terminals of the jumper cables to come into contact with each other.

■ Exclusive jump starting terminal precaution

The exclusive jump starting terminal is to be used when charging the 12-volt battery from another vehicle in an emergency. It cannot be used to jump start another vehicle.

The following may indicate that your vehicle is overheating:

- “ENGINE OVERHEAT” is shown on the multi-information display:  
The engine may be overheating.
- “HYBRID SYSTEM OVERHEAT” is shown on the multi-information display:  
A hybrid system component such as the power control unit or an electric motor (traction motor) may be overheating.

#### Correction procedures

- If “ENGINE OVERHEAT” is shown on the multi-information display

**STEP 1** Stop the vehicle in a safe place and turn off the air conditioning system.

**STEP 2** Check to see if steam is coming out from the engine area.

If you see steam:

Stop the hybrid system. Carefully lift the hood after the steam subsides and then restart the hybrid system.

If you do not see steam:

Leave the hybrid system operating and carefully lift the hood.

**STEP 3** Check to see if the cooling fans are operating.

If the fans are operating:

Wait until the “ENGINE OVERHEAT” message disappears and then stop the hybrid system.

If the fans are not operating:

Stop the hybrid system and call any authorized Lexus

dealer or repairer, or another duly qualified and equipped professional.



After the hybrid system has cooled down sufficiently, check the engine coolant level and inspect the cooling system for leaks.

If the engine compartment cover needs to be removed. (→P. 472)



Add engine coolant if necessary.

Water can be used in an emergency if engine coolant is unavailable. (→P. 607)



Have the vehicle inspected at the nearest authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

## 5-2. Steps to take in an emergency

If “HYBRID SYSTEM OVERHEAT” is shown on the multi-information display



Stop the vehicle in a safe place and turn off the air conditioning system.

Ensure that the opening for the oil cooler is not blocked by dirt or any other foreign substance.

If the opening is not blocked or if the message does not disappear after some time the opening has been cleaned, proceed to STEP 2.

**STEP 2** Leave the hybrid system operating and carefully lift the hood.

**STEP 3** Check if the cooling fans are operating.

If the fans are operating:

Wait until the “HYBRID SYSTEM OVERHEAT” message disappears and then stop the hybrid system.

If the message does not disappear, call any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

If the fans are not operating:

Stop the hybrid system immediately and call any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.



After the hybrid system has cooled down, check the power control unit coolant level and inspect the cooling system for leaks.

If the engine compartment cover needs to be removed. (→P. 472)

## 5-2. Steps to take in an emergency

STEP 5



Add power control unit coolant if necessary.

Water can be used in an emergency if power control unit coolant is unavailable. (→P. 607)

Have the vehicle inspected at the nearest authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

### ■ Overheating

The following symptoms may occur when your vehicle is overheating:

- Hybrid system output decreases.
- Steam comes out from the engine area.

### ⚠ CAUTION

- To prevent an accident or injury when inspecting under the hood of your vehicle
  - If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injuries such as burns.
  - Check that the indicator on the “POWER” switch and the READY indicator are off.
  - For vehicles with a hybrid system, there are times when the gasoline engine automatically starts to run or the cooling fans suddenly start to operate. Do not touch or approach the rotating parts of the belt or fans. Doing so may lead to fingers, clothes or tools getting caught, resulting in injury.
  - Do not loosen the radiator cap while the hybrid system and radiator are hot.  
Serious injuries, such as burns, may result from hot coolant and steam released under pressure.

5

When trouble arises

 NOTICE

■ When adding engine/power control unit coolant

Wait until the hybrid system has cooled down before adding engine/power control unit coolant.

When adding coolant, do so slowly. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.)
- Do not use commercially available coolant additives.

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

**STEP 1** Stop the hybrid system. Set the parking brake and shift the shift lever to P.

**STEP 2** Remove the mud, snow or sand from around the stuck tire.

**STEP 3** Place wood, stones or some other material under the tires to help provide traction.

**STEP 4** Restart the hybrid system.

**STEP 5** Shift the shift lever to the D or R position and carefully apply the accelerator to free the vehicle.

Turn off TRC and VSC if these functions are hampering your

 CAUTION

■ When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

## 5-2. Steps to take in an emergency

### NOTICE

- To avoid damage to the hybrid transmission and other components
  - Avoid spinning the wheels.
  - If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

**STEP 1** Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

**STEP 2** Shift the shift lever to N.

▶ If the shift lever is shifted to N

**STEP 3** After slowing down, stop the vehicle in a safe place by the road.

**STEP 4** Stop the hybrid system.

▶ If the shift lever cannot be shifted to N

**STEP 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

**STEP 4**



Press and hold for 3 seconds or

Stop the hybrid system by pressing and holding the "POWER" switch for 3 consecutive seconds or more.

## 5-2. Steps to take in an emergency

### CAUTION

■ If the hybrid system has to be turned off while driving

Power assist for the brakes and steering wheel will be lost, making the brake pedal harder to depress and the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.

5-2. Steps to take in an emergency

5

When trouble arises

603

- 6-1. Specifications
  - Maintenance data  
(fuel, oil level, etc.)..... 600
  - Fuel information ..... 615
- 6-2. Customization
  - Customizable features..... 617
- 6-3. Initialization
  - Items to initialize ..... 625

## 6-1. Specifications

### Maintenance data (fuel, oil level, etc.)

#### Dimensions and weights

Overall length	4770 mm (187.8 in.)	
Overall width	1885 mm (74.2 in.)	
Overall height* <sup>1</sup>	1685 mm (66.3 in.)* <sup>2</sup> 1690 mm (66.5 in.)* <sup>3</sup> 1720 mm (67.7 in.)* <sup>4</sup> 1725 mm (67.9 in.)* <sup>5</sup>	
Wheelbase	2740 mm (107.9 in.)	
Tread	Front	1630 mm (64.2 in.)
	Rear	1620 mm (63.8 in.)
Gross vehicle mass	2615 kg (5765 lb.)* <sup>6</sup> 2700 kg (5952 lb.)* <sup>7</sup>	
Maximum permissible axle capacity	Front	1540 kg (3395 lb.)
	Rear	1540 kg (3395 lb.)
Drawbar load* <sup>7</sup>	80 kg (176 lb.)	
Towing capacity* <sup>7</sup>	with brake	2000 kg (4410 lb.)
	without brake	750 kg (1653 lb.)

\*<sup>1</sup>:Unladen vehicles

\*<sup>2</sup>:Vehicles without panoramic roof and roof rails

\*<sup>3</sup>:Vehicles with panoramic roof

\*<sup>4</sup>:Vehicles with roof rails but without electronically modulated air suspension

\*<sup>5</sup>:Vehicles with roof rails and electronically modulated air suspension


\*<sup>6</sup>:2WD models

\*<sup>7</sup>:AWD models

Vehicle identification

■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.

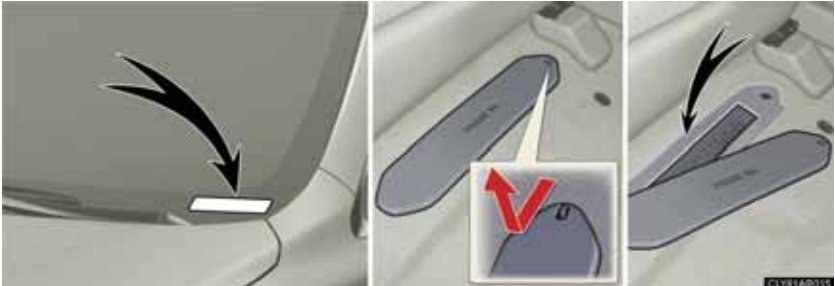


This number is stamped on the top left of the instrument panel and under the right-hand front seat.



This number is also on the manufacturer's label.

## 6-1. Specifications

### ■ Engine number

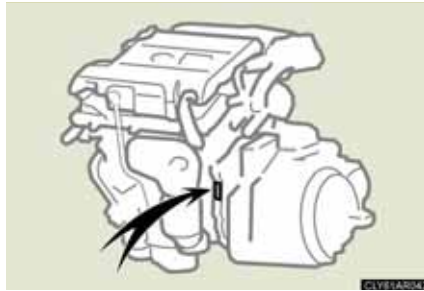

The engine number is stamped on the engine block as shown.

**Engine**

Model	2GR-FXE
Type	6-cylinder V type, 4-cycle, gasoline
Bore and stroke	94.0 × 83.0 mm (3.70 × 3.27 in.)
Displacement	3456 cm <sup>3</sup> (210.9 cu.in.)
Drive belt tension	Automatic adjustment

**Fuel**

Fuel type	Unleaded gasoline only
Research octane number	95 or higher
Fuel tank capacity (Reference)	65 L (17.1 gal., 14.2 Imp. gal.)

**Electric motor (Traction motor)**

## ▶ Front

Type	Permanent magnet synchronous motor
Maximum output	123 kW
Maximum torque	335 N•m (34.2 kgf•m, 247 ft•lbf)

## ▶ Rear (AWD models)

Type	Permanent magnet synchronous motor
Maximum output	50 kW
Maximum torque	139 N•m (14.2 kgf•m, 103 ft•lbf)

## 6-1. Specifications

### Hybrid battery (Traction battery)

Type	Nickel-metal hydride battery
Voltage	9.6 V/module
Capacity	6.5 Ah (3HR)
Quantity	30 modules
Overall voltage	288 V

### Lubrication system

Oil capacity (Drain and refill — reference*)	
With filter	6.1 L (6.4 qt., 5.3 Imp. qt.)
Without filter	5.7 L (6.0 qt., 5.0 Imp. qt.)

\*:The engine oil capacity is a reference quantity to be used when exchanging the engine oil. Warm up the engine and turn off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

#### ■ Engine oil selection

“Toyota Genuine Motor Oil” is used in your Lexus vehicle. Lexus recommends the use of approved “Toyota Genuine Motor Oil”. Another motor oil of matching quality can also be used.

Oil grade:


0W-20, 5W-20, 5W-30 and 10W-30:

API grade SL “Energy-Conserving”, SM “Energy-Conserving”, SN “Resource-Conserving” or ILSAC multigrade engine oil

15W-40 and 20W-50:

API grade SL, SM or SN multigrade engine oil

## Recommended viscosity (SAE):

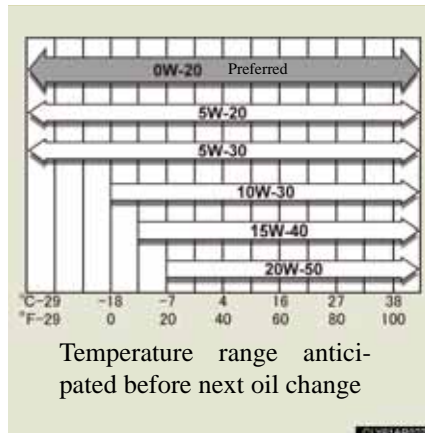

SAE 0W-20 is filled into your Lexus vehicle at manufacturing, and the best choice for good fuel economy, and good starting in cold weather.

If SAE 0W-20 oil is not available, SAE 5W-30 oil may be used. However, it should be replaced with SAE 0W-20 at the next oil change.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 or lower viscosity engine oil is recommended.


Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

## 6-1. Specifications

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

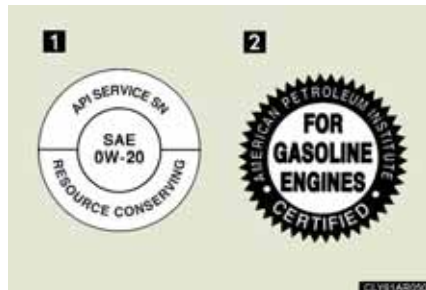

### 1 API Service Symbol

Top portion: The oil quality designation by API (American Petroleum Institute) (SN)

Center portion: The SAE viscosity grade (SAE 0W-20)

Lower portion: “Resource-Conserving” means that the oil has fuel saving and environmental protection.

### 2 ILSAC Certification Mark

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.

### Cooling system

Capacity	
Gasoline engine	11.7 L (12.3 qt., 10.3 Imp. qt.)
Power control unit	1.9 L (2.0 qt., 1.7 Imp. qt.)
Coolant type	<p>Use either of the following:</p> <ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant”</li> <li>• Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology</li> </ul> <p>Do not use plain water alone.</p>

### Ignition system

Spark plug	
Make	DENSO FK20HR11
Gap	1.1 mm (0.043 in.)

#### NOTICE

##### ■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

## 6-1. Specifications

### Electrical system

12-volt battery	
Open voltage* at 20°C (68°F):	12.6 — 12.8 V Fully charged 12.2 — 12.4 V Half charged 11.8 — 12.0 V Discharged (*: Voltage checked 20 minutes after the hybrid system and all the lights are turned off)
Charging rates	5 A max.

### Hybrid Transaxle

Fluid capacity*	▶ Front 4.6 L (4.9 qt., 4.0 Imp. qt.) ▶ Rear (AWD models) 1.8 L (1.9 qt., 1.6 Imp. qt.)
Fluid type	Toyota Genuine ATF WS

\*: The fluid capacity is a reference quantity. If replacement is necessary, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### NOTICE

##### ■ Transmission fluid type

Using transmission fluid other than “Toyota Genuine ATF WS” may ultimately damage the transmission of your vehicle.

### Brakes

Pedal clearance *1	Left-hand drive vehicles	99 mm (3.9 in.) Min.
	Right-hand drive vehicles	103 mm (4.06 in.) Min.
Pedal free play		1 — 2 mm (0.04 — 0.08 in.)
Parking brake pedal travel *2		5 — 8 clicks
Fluid type		SAE J1703 or FMVSS No. 116 DOT 3

\*1: Minimum pedal clearance when depressed with a force of 500 N (51 kgf, 112 lbf) while the engine is running

\*2: Parking brake pedal travel when depressed with a force of 300 N (31 kgf, 67 lbf)

### Steering

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

## 6-1. Specifications

### Tires and wheels

#### ► Type A

Tire size	235/60R18 103V, T165/90D18 107M (spare)		
Tire inflation pressure (front and rear) (recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm <sup>2</sup> or bar, psi)	Rear wheel kPa (kgf/cm <sup>2</sup> or bar, psi)
	More than 160 km/h (100 mph)	250 (2.5, 36)	270 (2.7, 39)
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)
	160 km/h (100 mph) or less (ECO tire pressure *1)*2	250 (2.5, 36)	250 (2.5, 36)
Tire inflation pressure (spare) (recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm <sup>2</sup> or bar, 60 psi)		
Wheel size	18 × 7 1/2J, 18 × 4T (spare)		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

## ► Type B

Tire size	235/60R18 103V		
Tire inflation pressure (recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm <sup>2</sup> or bar, psi)	Rear wheel kPa (kgf/cm <sup>2</sup> or bar, psi)
	More than 160 km/h (100 mph)	250 (2.5, 36)	270 (2.7, 39)
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)
	160 km/h (100 mph) or less (ECO tire pressure *1)*2	250 (2.5, 36)	250 (2.5, 36)
Wheel size	18 × 7 1/2 J		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

## 6-1. Specifications

### ► Type C

Tire size	235/55R19 101V, T165/90D18 107M (spare)		
Tire inflation pressure (front and rear) (recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm <sup>2</sup> or bar, psi)	Rear wheel kPa (kgf/cm <sup>2</sup> or bar, psi)
	More than 160 km/h (100 mph)	260 (2.6, 38)	290 (2.9, 42)
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)
	160 km/h (100 mph) or less (ECO tire pressure *1)*2	250 (2.5, 36)	250 (2.5, 36)
Tire inflation pressure (spare) (recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm <sup>2</sup> or bar, 60 psi)		
Wheel size	19 × 7 1/2J, 18 × 4T (spare)		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

## ► Type D

Tire size	235/55R19 101V		
Tire inflation pressure (recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm <sup>2</sup> or bar, psi)	Rear wheel kPa (kgf/cm <sup>2</sup> or bar, psi)
	More than 160 km/h (100 mph)	260 (2.6, 38)	290 (2.9, 42)
	160 km/h (100 mph) or less	230 (2.3, 33)	230 (2.3, 33)
	160 km/h (100 mph) or less (ECO tire pressure * <sup>1</sup> )* <sup>2</sup>	250 (2.5, 36)	250 (2.5, 36)
Wheel size	19 × 7 1/2J		
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)		

\*<sup>1</sup>:“For optimizing fuel economy, ECO tire pressure is recommended.  
Tire pressure affects traveling comfort, road noise and steering characteristics.”

\*<sup>2</sup>:2WD models

## 6-1. Specifications

### Light bulbs

	Light bulbs	W	Type
Exterior	Headlights		
	High beam (halogen bulbs)	60	A
	Low beam (discharge bulbs)	35	B
	Front turn signal lights	21	D
	Front fog lights	55	C
	Rear turn signal lights	21	D
	Front position lights	5	E
	Tail lights	5	E
	Back-up lights	16	E
Interior	Rear fog lights	21	E
	Outer foot lights	5	E
	Vanity lights	3	E
	Front interior lights	5	E
	Rear interior light	8	E
	Luggage compartment lights	5	E
Door courtesy lights	5	E	
Footwell lights	3.8	E	

A: HB3 halogen bulbs

C: H11 halogen bulbs

E: Wedge base bulbs (clear)

B: D4S discharge bulbs

D: Wedge base bulbs (amber)

## 6-1. Specifications

### Fuel information

#### EU area:

Your vehicle must use only unleaded gasoline conforming to European standard EN228.

For optimum engine performance, select unleaded gasoline with a Research Octane Number of 95 or higher.

#### Except EU area:

Your vehicle must use only unleaded gasoline.

For optimum engine performance, select unleaded gasoline with a Research Octane Number of 95 or higher.

---

#### ■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Lexus has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

#### ■ If premium gasoline is not available

If this premium type cannot be obtained, you can use unleaded gasoline with a Research Octane Number as low as 91.

The use of such gasoline may cause the engine to knock or drastically reduce output to protect itself while driving with a heavy load. To avoid this, refill the tank with premium unleaded gasoline as soon as possible.

#### ■ If your engine knocks

- Consult any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

 NOTICE

■ Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use leaded gasoline.  
Leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and the emission control system to function improperly.
- Gasoline engine (EU area): Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle's fuel system. In case of any doubt, ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Gasoline engine (except EU area): Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## 6-2. Customization

### Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. Programming of these preferences can be performed by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

It is also possible to customize certain vehicle features yourself using the multi-information switches.

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for fur-

#### Customizing vehicle features

It is possible to customize certain vehicle features using the multi-information switches.

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.



Press and hold the menu switch of the multi-information switches to display customize mode.

## 6-2. Customization



- 1 Press the “ENTER” switch upwards or downwards to select the item to be customized.
- 2 Press the “ENTER” switch to confirm.



- 1 Press the “ENTER” switch upwards or downwards to select the desired setting for the item being customized.
- 2 Press the “ENTER” switch to confirm.

When customization is completed, press the menu switch to clear the customization screen.

### Customizable Features

- ❶ Settings that can be changed using the multi-information switches
- ❷ Settings that can be changed by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further details

Definition of symbols: O = Available, — = Not available

Item	Function	Default setting	Customized setting	❶	❷
Door lock (→P. 78, 585)	Unlocking using a key	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two steps	—	O
	Speed-detecting automatic door lock function	On	Off	O	O
	Shifting gears to a position other than P locks all doors	Off	On	O	O
	Shifting gears to P unlocks all doors	Off	On	O	O
	Opening driver's door unlocks all doors	Off	On	O	O

6

Vehicle  
specifica-

## 6-2. Customization

Item	Function	Default setting	Customized setting	1	2
Smart entry & start system and wireless remote control (→P. 58, 75)	Operation signal (Emergency flashers)	On	Off	O	O
	Time elapsed before the automatic door lock function is activated if a door is not opened after	30 seconds	60 seconds	—	O
			120 seconds		
Smart entry & start system (→P. 58)	Smart door unlocking	All the doors	Driver's door	O	O
	Smart entry & start system	On	Off	O	O
Wireless remote control (→P. 75)	Unlocking operation	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two steps	O	O
Automatic light control system (→P. 233)	Light sensor sensitivity	Standard	-2 to 2	O	O
	Light reminder buzzer	On	Off	—	O

Item	Function	Default setting	Customized setting	1	2
Illumination (→P. 423)	Time elapsed before the interior lights turn off	15 seconds	Off	O	O
			7.5 seconds		
			30 seconds		
	Time elapsed before the exterior lights turn off	15 seconds	Off	O	O
			7.5 seconds		
			30 seconds		
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2	—	O
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2	—	O
	Footwell lights	On	Off	—	O
	Outer foot lights	On	Off	—	O

## 6-2. Customization

Item	Function	Default setting	Customized setting	1	2
Automatic air conditioning system (→P. 322)	Switching between outside air and recirculated air mode linked to “AUTO” switch operation	Auto	Manual	—	O
	A/C auto switch operation	Auto	Manual	—	O
	Air conditioning control of Eco drive mode	On	Off	—	O

Item	Function	Default setting	Customized setting	1	2
Power easy access system (→P. 99)	Driver's seat movement when exiting the vehicle (on some models)	Full	Off	O	O
			Partial		
Eco Driving Indicator Light (→P. 184)	Eco Driving Indicator Light	On	Off	O	O
Multi-information display (→P. 219)	Window close suggestion mode	On	Off	O	O
Lexus parking assist-sensor (→P. 262)	Buzzer volume	3	1 to 5	—	O
	Detection distance of the rear center sensor	Far	Near	—	O
	Display setting (when Lexus parking assist-sensor is operating)	All sensors displayed	No sensors displayed	—	O
Power windows (→P. 119)	Mechanical key linked operation	On	Off	—	O
	Wireless remote control linked operation	Off	On	—	O

6

Vehicle  
specifica-

## 6-2. Customization

Item	Function	Default setting	Customized setting	1	2
Moon roof (→P. 122)	Mechanical key linked operation	On	Off	—	O
	Wireless remote control linked operation*	Off	On	—	O

\*: This function cannot be customized unless power window operation using the wireless remote control is enabled.

### Multi-information display (→P. 219)

Settings that can be changed using the multi-information switches

Available units
km (km/l), km (l/100 km)
Available languages*
English, French, Spanish, Russia and Chinese

\*: The available languages vary according to the country or area that the vehicle was sold in.

- In the following situations, customize mode will automatically be turned off.
  - A warning message appears after the customize mode screen is displayed.
  - The “POWER” switch is turned off.
  - The vehicle begins to move while the customize mode screen is displayed.

 CAUTION

## ■ Cautions during customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 NOTICE

## ■ During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

### 6-3. Initialization Items to initialize

The following item must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power back door (if equipped)	<ul style="list-style-type: none"><li>• After reconnecting or changing the 12-volt battery</li><li>• After changing a fuse</li></ul>	P. 81

### 6-3. Initialization

## Index

Abbreviation.....	628
Alphabetical index.....	629
What to do if... ..	642

For vehicles with a navigation system, refer to the “Navigation System Owner's Manual” for information regarding the equipment listed below.

- Navigation system
- Air conditioning controls
- Windshield wiper de-icer
- Lexus parking assist monitor
- Audio/video system
- Rear window and outside rear view mirror defogging

Abbreviation  
Abbreviation/Acronym list

ABBREVIATIONS	MEANING
2WD	2 Wheel Drive
A/C	Air Conditioning
ABS	Anti-lock Brake System
AFS	Adaptive Front-lighting System
AI-SHIFT	Artificial Intelligence Shift control
AWD	All Wheel Drive
CRS	Child Restraint System
ECO	Economy/Ecology
ECU	Electronic Control Unit
ELR	Emergency Locking Retractor
EPS	Electric Power Steering
GVM	Gross Vehicle Mass
LED	Light Emitting Diode
MPAC	Maximum Permissible Axle Capacity
PCS	Pre-Crash Safety system
SRS	Supplemental Restraint System
TRC	Traction Control
VDIM	Vehicle Dynamics Integrated Management
VIN	Vehicle Identification Number
VSC	Vehicle Stability Control

## Alphabetical index

### Alphabetical index

<b>A</b>	A/C*	
	Air conditioning filter.....	496
	Automatic air conditioning system*.....	322
	ABS.....	281
	ACCESSORY mode.....	195
	Active stabilizer suspension system.....	281
	Adaptive front lighting system.....	234
	AFS.....	234
	Air conditioning filter.....	496
	Air conditioning system	
	Air conditioning filter.....	496
	Automatic air conditioning system*.....	322
	Airbags	
	Airbag manual on/off system.....	178
	Airbag operating conditions.....	149
	Airbag precautions for your child.....	153
	Airbag warning light.....	541
	Curtain shield airbag operating conditions.....	150
	Curtain shield airbag precautions.....	153
	General airbag precautions.....	153
	Locations of airbags.....	147
	Modification and disposal of airbags.....	157
	Proper driving posture.....	145, 153
	Side airbag operating conditions.....	150
	Side airbag precautions.....	153
	SRS airbags.....	147
	Alarm.....	139
	Antenna.....	338
	Anti-lock brake system.....	281
	Armrest.....	446
	Audio input.....	372
	Audio system*	
	Antenna.....	338
	Audio input.....	372
	AUX port.....	372
	CD player/changer.....	339
	iPod.....	354
	MP3/WMA disc.....	346
	Optimal use.....	370
	Portable audio device.....	372
	Radio.....	335
	Steering wheel audio switch.....	374
	USB memory.....	362

\*: For vehicles with a navigation system, refer to “Navigation System Owner’s

## Alphabetical index

USB port.....	354, 362
Automatic air conditioning system	
Air conditioning filter.....	496
Air conditioning system* .....	322
Automatic headlight leveling	
system .....	236
Automatic light control system .....	233
AUX port.....	372
<b>B</b> Back door	
Back door .....	81
Wireless remote control.....	75
Back-up lights	
Replacing light bulbs.....	521
Wattage.....	614
Battery	
Checking.....	481
Hybrid battery	
(traction battery).....	40
If the vehicle has a discharged	
12-volt battery .....	588
Preparing and checking before	
winter .....	304
Bluetooth® audio* .....	376
Bluetooth® phone* .....	391
Brake	
Emergency brake signal .....	282
Parking brake.....	212
Brake assist.....	281
Break-in tips .....	183

<b>C</b> Card key .....	53
Care	
Exterior .....	454
Interior .....	458
Seat belts.....	459
Cargo hooks.....	450
CD changer*	
CD.....	339
MP3 disc .....	346
WMA disc.....	346
CD player* .....	339
Chains.....	304
Child restraint system	
Baby seats, definition .....	158
Baby seats, installation .....	167
Child seats, definition.....	158
Child seats, installation.....	167
Installing CRS with ISOFIX	
rigid anchor .....	172
Installing CRS with seat belts....	
168	
Installing CRS with top straps ...	
173	
Junior seats, definition.....	158
Junior seats, installation.....	167
Child safety	
Airbag precautions.....	153
Back door precautions .....	87
Child restraint system .....	158
Child-protectors .....	79

How your child should wear the seat belt.....110	Cup holder ..... 430
Installing child restraints .....167	Curtain shield airbags..... 147
Moon roof precautions .....125	Customizable features ..... 617
Power window lock switch...119	<b>D</b> Daytime running light system .. 236
Power window precautions...121	Defogger*
Removed electronic key battery precautions .....503	Rear window ..... 330
Seat belt comfort guide.....108	Side mirror ..... 330
Seat belt precautions.....111	Dimensions ..... 600
Seat heater precautions .....445	Display
12-volt battery	Energy flow ..... 46
precautions .....481	Multi-information display.... 219
Child-protectors.....79	Trip information ..... 223
Cleaning	Warning message..... 545
Exterior .....454	Do-it-yourself maintenance ..... 464
Interior .....458	Door courtesy lights
Seat belts.....459	Door courtesy lights..... 423
Clock .....438	Wattage ..... 614
Coat hooks.....447	Door lock
Condenser.....479	Back door..... 81
Console box .....432	Side door..... 78
Cooling system	Wireless remote control..... 75
Hybrid system overheating...594	Door pockets..... 428
Cornering assist sensors .....262	
Cruise control	
Cruise control .....243	
Dynamic radar cruise control .... 247	

\*: For vehicles with a navigation system, refer to “Navigation System Owner’s

## Alphabetical index

- Doors
  - Back door .....81
  - Door lock .....58, 75, 78
  - Door windows .....119
  - Double locking system .....138
  - Power back door .....81
  - Side door.....78
  - Side mirrors .....117
- Driver's seat belt reminder light 543
- Driving
  - Break-in tips .....183
  - Correct posture .....145
  - Procedures .....182
  - Utility vehicle precautions....296
  - Winter driving tips.....304
- Driving position memory .....99
- E** Electric power steering.....281
- Electric sunshade.....126
- Electronic features control .....219
- Electronic key
  - If the electronic key does not operate properly .....585
- Electronically modulated air suspension .....271
- Emergency brake signal .....282
- Emergency flashers
  - Switch .....532
- Emergency, in case of
  - If a warning buzzer sounds .. 540
  - If a warning light turns on ... 540
  - If a warning message is displayed ..... 545
  - If the back door opener is inoperative ..... 86
  - If the electronic key does not operate properly ..... 585
  - If the hybrid system will not start ..... 581
  - If the shift lever cannot be shifted from “P” ..... 583
  - If the vehicle has a discharged 12-volt battery ..... 588
  - If you have a flat tire ..... 567
  - If you lose your keys ..... 584
  - If you think something is wrong..... 539
  - If your vehicle becomes stuck ... 599
  - If your vehicle has to be stopped in an emergency ... 601
  - If your vehicle needs to be towed ..... 533
  - If your vehicle overheats ..... 594

Engine	
Accessory mode.....	195
Compartment .....	471
Engine switch .....	195
Hood .....	468
How to start the hybrid system.....	195
Identification number .....	601
If the hybrid system will not start.....	581
Ignition switch.....	195
Overheating .....	594
Power switch .....	195
Engine compartment cover.....	472
Engine/power control unit coolant Capacity.....	607
Checking.....	477
Preparing and checking before winter .....	304
Engine oil	
Capacity .....	604
Checking.....	473
Preparing and checking before winter .....	304
Engine switch .....	195
EPS .....	281
EV drive mode.....	206
<b>F</b> Floor mat .....	448
Fluid	
Washer .....	480
Fog lights	
Replacing light bulbs .....	521
Switch .....	238
Wattage.....	614
Footwell light .....	423
Front fog lights	
Replacing light bulbs .....	521
Switch .....	238
Wattage.....	614
Front passenger's seat belt reminder light.....	543
Front position lights	
Replacing light bulbs .....	521
Switch .....	233
Wattage.....	614
Front seats	
Adjustment.....	91
Driving position memory.....	99
Flattening seatbacks.....	92

## Alphabetical index

Front turn signal lights		
Replacing light bulbs.....	521	
Wattage.....	614	
Fuel		
Capacity.....	603	
Fuel gauge.....	211	
Information.....	615	
Refueling.....	128	
Type.....	603	
Fuel door.....	128	
Fuel filler door.....	128	
Fuses.....	504	
<b>G</b> Gauges.....	211	
Glove box.....	427	
<b>H</b> Hands-free system for mobile phone*.....	391	
Hazard lights		
Switch.....	532	
Head restraints		
Adjusting.....	105	
Head-up display.....	228	
Headlight cleaner.....	243	
Headlights		
Discharge headlight precautions.....	534	
Replacing light bulbs.....	521	
Switch.....	233	
Wattage.....	614	
Heaters		
Seat heaters.....	444	
Side mirror*.....	330	
Height control		
Electronically modulated air suspension.....	271	
Hill-start assist control.....	281	
Hood.....	468	
Hooks		
Cargo.....	450	
Coat.....	447	
Horn.....	213	
HUD.....	228	
Hybrid system		
Emergency shut off system....	41	
Energy monitor/consumption screen.....	46	
High voltage components.....	40	
Hybrid system indicator.....	211	
Power switch.....	195	

<p><b>I</b> Identification</p> <ul style="list-style-type: none"> <li>Engine.....601</li> <li>Vehicle.....601</li> <li>Ignition switch.....195</li> <li>Illuminated entry system .....423</li> <li>Immobilizer system.....133</li> <li>Indicator lights .....215</li> <li>Initialization           <ul style="list-style-type: none"> <li>Items to initialize .....625</li> </ul> </li> <li>Inside rear view mirror.....115</li> <li>Interior lights           <ul style="list-style-type: none"> <li>Interior lights .....423</li> <li>Switch .....424</li> <li>Wattage.....614</li> </ul> </li> </ul> <p><b>J</b> Jack</p> <ul style="list-style-type: none"> <li>Positioning a floor jack.....469</li> <li>Vehicle-equipped jack .....567</li> <li>Jack handle .....567</li> </ul> <p><b>K</b> Keyless entry .....75</p> <p>Keys</p> <ul style="list-style-type: none"> <li>Electronic key .....53</li> <li>If the electronic key does not operate properly .....585</li> <li>If you lose your keys .....584</li> <li>Key number .....53</li> <li>Keyless entry .....75</li> <li>Keys .....53</li> <li>Mechanical key .....53</li> <li>Power switch .....195</li> <li>Wireless remote control key ...75</li> </ul>	<p><b>L</b> Licence plate lights</p> <ul style="list-style-type: none"> <li>Wattage ..... 614</li> </ul> <p>Light bulbs</p> <ul style="list-style-type: none"> <li>Replacing ..... 521</li> <li>Wattage..... 614</li> </ul> <p>Lights</p> <ul style="list-style-type: none"> <li>Door courtesy lights..... 423</li> <li>Emergency flasher switch.... 532</li> <li>Fog light switch ..... 238</li> <li>Hazard light switch..... 532</li> <li>Headlights switch ..... 233</li> <li>Interior light switch ..... 424</li> <li>Luggage compartment light... 84</li> <li>Outer foot lights..... 423</li> <li>Overhead courtesy light..... 424</li> <li>Personal light switch..... 425</li> <li>Replacing light bulbs ..... 521</li> <li>Scuff lights..... 423</li> <li>Shift lever light ..... 423</li> <li>Turn signal lever..... 211</li> <li>Vanity lights ..... 437</li> <li>Wattage ..... 614</li> </ul> <p>Lock steering column ..... 199</p> <p>Luggage compartment lights</p> <ul style="list-style-type: none"> <li>Switch ..... 84</li> <li>Wattage ..... 614</li> </ul> <p>Luggage cover ..... 451</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

\*: For vehicles with a navigation system, refer to “Navigation System Owner’s

## Alphabetical index

- M** Maintenance
  - Do-it-yourself maintenance..464
  - Maintenance data.....600
  - Maintenance requirements...461
- Meter
  - Instrument panel light control ....  
212
  - Meters .....211
- Mirrors
  - Inside rear view mirror .....115
  - Side mirror heaters\* .....330
  - Side mirrors .....117
  - Vanity mirrors .....437
- Moon roof.....122
- MP3 disc.....346
- Multi-information display
  - Electronic features control...219
  - Trip information .....223
  - Window close suggestion  
mode.....224
- O** Odometer ..... 211
- Oil
  - Engine oil..... 473
- Opener
  - Back door..... 81
  - Fuel filler door ..... 128
  - Hood ..... 468
- Outer foot lights
  - Outer foot lights..... 423
  - Wattage ..... 614
- Outside rear view mirrors
  - Adjusting and folding ..... 117
  - Driving position memory..... 99
- Outside temperature display\*... 439
- Overhead courtesy lights
  - Overhead courtesy lights ..... 423
  - Wattage ..... 614
- Overheating, Hybrid system..... 594
- P** Parking assist sensors ..... 262
- Parking brake..... 212
- Parking lights
  - Replacing light bulbs ..... 521
  - Switch ..... 233
  - Wattage ..... 614
- PCS ..... 290

<p>Personal lights              Switch .....425          Power back door .....81          Power easy access system .....102          Power outlet .....441          Power switch .....195          Power windows .....119          Pre-crash safety system .....290</p> <p><b>R</b> Radar cruise control .....247          Radiator .....479          Radio .....335          RDS .....336          Rear fog lights              Replacing light bulbs .....521              Switch .....238              Wattage .....614          Rear seat              Adjustment .....95              Folding down .....95          Rear turn signal lights              Replacing light bulbs .....521              Wattage .....614          Rear view monitor system .....277          Rear window defogger* .....330          Rear window wiper .....242          Remote Touch*</p>	<p>Replacing              Electronic key battery ..... 500              Fuses ..... 504              Light bulbs ..... 521              Tires ..... 567              Wireless remote control                  battery ..... 500          Roof luggage carrier ..... 302</p> <p><b>S</b> Scuff lights ..... 423          Seat belts              Adjusting the seat belt ..... 107              Child restraint system                  installation ..... 167              Cleaning and maintaining                  the seat belts ..... 459              Emergency locking retractor 110              How to wear your seat belt .. 107              How your child should wear                  the seat belt ..... 110              Pregnant women, proper seat                  belt use ..... 110              Reminder light ..... 543              Seat belt pretensioners ..... 111          Seat heaters ..... 444          Seat position memory ..... 99          Seat ventilators ..... 444</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

\*: For vehicles with a navigation system, refer to “Navigation System Owner’s

## Alphabetical index

Seats	
Adjustment .....	91, 95
Adjustment precautions .....	94, 97
Child seats/child restraint system installation .....	167
Cleaning .....	458
Flattening seatbacks .....	92
Head restraint .....	105
Power easy access system .....	102
Properly sitting in the seat .....	145
Seat heaters .....	444
Seat position memory .....	99
Seat ventilators .....	444
Service reminder indicators .....	215
Shift lever	
If the shift lever cannot be shifted from “P” .....	583
Transmission .....	203
Shift lever light .....	423
Shift lock system .....	583
Side airbags .....	147
Side mirror	
Adjusting and folding .....	117
Mirror position memory .....	99
Smart entry & start system	
Entry function .....	58
Starting the hybrid system .....	195
Spare tire	
Inflation pressure .....	610
Storage location .....	567
Spark plug .....	607
Specifications .....	600
Speedometer .....	211
Steering	
Column lock release .....	199
Steering wheel	
Adjustment .....	113
Audio switches* .....	374
Power easy access system .....	102
Steering wheel position memory .....	99
Storage feature .....	426
Stuck vehicle	
If your vehicle becomes stuck ... 599	
Sun visors .....	436
Sunshade	
Roof .....	123, 126
Switch	
Airbag manual on/off switch .....	178
Display contrast adjustment switch .....	228
Display position adjustment switch .....	228
Driving mode selector switch .....	205
Emergency flasher switch .....	532

ENTER switch.....	219	Tires	
Fog light switch .....	238	Chains .....	304
Hazard light switch.....	532	Checking .....	489
Head-up display main switch ....	228	If you have a flat tire.....	567
Ignition switch.....	195	Inflation pressure .....	492
Light switches.....	233	Replacing .....	567
Menu switch .....	219	Rotating tires.....	489
Power back door switch.....	81	Size .....	610
Power door lock switch .....	78	Snow tires .....	304
Power switch .....	195	Spare tire.....	567
Power window switch .....	119	Tools.....	567
Rear window wiper and washer		Towing	
switch .....	242	Emergency towing.....	533
Window lock switch.....	119	Trailer towing .....	307, 318
Wiper and washer switch.....	239	Traction control .....	281
		Trailer towing .....	307, 318
		Transmission	
<b>T</b> Tail lights		Hybrid transmission.....	202
Replacing light bulbs.....	521	If the shift lever cannot be	
Switch.....	233	shifted from “P” .....	583
Wattage.....	614	S mode .....	207
Talk switch .....	398	TRC .....	281
Telephone switch .....	398	Trip information display.....	223
Theft deterrent system		Trip meter .....	211
Alarm.....	139	Turn signal lights	
Double locking system .....	138	Replacing light bulbs .....	521
Immobilizer system .....	133	Switch .....	211
Tire inflation pressure .....	492	Wattage.....	614

\*: For vehicles with a navigation system, refer to “Navigation System Owner’s











## Alphabetical index

- U** USB port\*.....354, 362
- V** Vanity lights
  - Vanity lights .....437
  - Wattage.....614
- Vanity mirrors .....437
- VDIM .....281
- Vehicle dynamics integrated management .....281
- Vehicle identification number...601
- Vehicle stability control .....281
- VSC .....281
- W** Warning buzzers
  - Brake system .....540
  - Key reminder .....557
  - Open door .....543
  - Open moon roof reminder ....551
  - Seat belt reminder .....543
- Warning lights
  - Anti-lock brake system.....541
  - Brake assist system.....541
  - Brake system .....540, 541
  - Charging system .....540
  - Electric power steering .....541
  - Low fuel level.....543
  - Malfunction indicator lamp ..541
  - Master warning light..... 543
  - Open door ..... 543
  - Pre-crash safety system ..... 541
  - Pretensioners..... 541
  - Seat belt reminder light..... 543
  - SRS airbags..... 541
- Warning messages ..... 545
- Washer
  - Checking ..... 480
  - Preparing and checking
    - before winter ..... 304
  - Switch ..... 239
- Washing and waxing ..... 454
- Weight ..... 600
- Wheels ..... 494
- Window glasses ..... 119
- Window lock switch ..... 119
- Windows
  - Power windows..... 119
  - Rear window defogger\* ..... 330
  - Washer ..... 239
  - Window close suggestion
    - mode ..... 224

Windshield wiper de-icer* .....	331
Windshield wipers .....	239
Wireless remote control key	
Replacing the battery .....	500
Wireless remote control .....	75
WMA disc .....	346

\*: For vehicles with a navigation system, refer to “Navigation System Owner’s
















What to do if...  
What to do if...

	A tire punctures	P. 567	If you have a flat tire
	The hybrid system does not	P. 581	If the hybrid system will not start
		P. 133	Immobilizer system
		P. 588	If the vehicle 12-volt battery is dis-
	The shift lever cannot be moved out	P. 583	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 594	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 584	If you lose your keys
	The 12-volt battery runs out	P. 588	If the vehicle 12-volt battery is discharged
	The doors cannot be locked	P. 78	Side doors
		P. 81	Back door
	The horn begins to sound	P. 139	Alarm
	The vehicle is stuck in mud or sand	P. 599	If the vehicle becomes stuck

 A warning light or indicator light comes on P. 540 If a warning light turns on




■ Warning lights

- |                                                                                                                            |                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|  ABS warning light<br>P. 541             |  Charging system warning light<br>P. 540                             |
|  Brake system warning light<br>P. 540   |  Driver's seat belt reminder light (on the instrument panel) P. 543 |
|  Brake system warning light<br>P. 541   |  Front passenger's seat belt reminder light (on the) P. 543         |
|  Low fuel level warning light<br>P. 543 |  Master warning light<br>P. 543                                     |
|  SRS warning light<br>P. 541            |  Electric power steering system warning light<br>P. 541             |
|  Open door warning light<br>P. 543      |  Pre-crash safety system warning light* P. 541                      |
|  Malfunction indicator lamp<br>P. 541   |  Slip indicator<br>P. 541                                           |
|  "AFS OFF" indicator*<br>P. 541         |                                                                                                                                                        |

\*: The light flashes to indicate a malfunction.

## GAS STATION INFORMATION

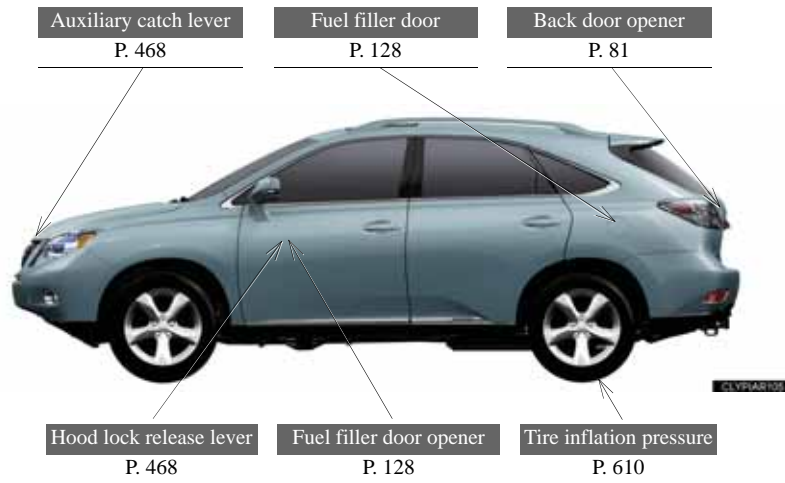

Fuel tank capacity (Reference)	65 L (17.1 gal., 14.2 Imp. gal.)	
Fuel type	Unleaded gasoline only	P. 603
Cold tire inflation pressure		P. 610
Engine oil capacity (Drain and refill — reference)	With filter Without filter	L (qt., Imp. qt.) 6.1 (6.4, 5.3) 5.7 (6.0, 5.0)
Engine oil type	Toyota Genuine Motor Oil or equivalent Oil grade: 0W-20, 5W-20, 5W-30 and 10W-30: API grade SL “Energy-Conserving”, SM “Energy-Conserving”, SN “Resource-Conserving” or ILSAC multigrade engine oil 15W-40 and 20W-50: API grade SL, SM or SN multigrade engine oil	P. 604